



MARS

god of war

INSTRUCTION MANUAL



Gottlieb
AMUSEMENT GAMES

165 W. Lake Street Northlake, IL 60164
(312) 562-7400 Telex 72-8463

A Columbia Pictures Industries Company



MARS

god of war


INSTRUCTION MANUAL



Gottlieb
AMUSEMENT GAMES

165 W. Lake Street Northlake, IL 60164
(312) 562-7400 Telex 72-8463

A Columbia Pictures Industries Company

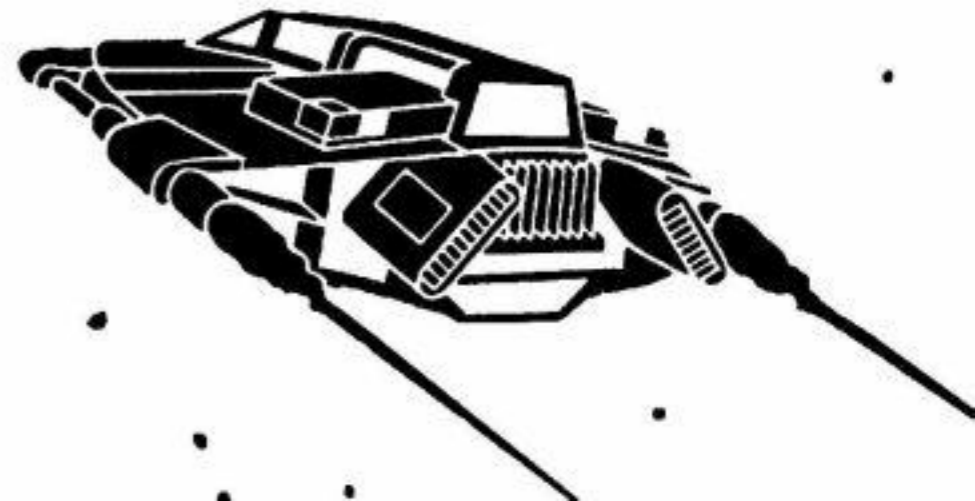

**MARS, god of war (GAME #666)
INSTRUCTION MANUAL**


TABLE OF CONTENTS

I.	INSTALLATION	1
II.	INITIALIZATION	3
III.	GAME OPERATION	4
IV.	GAME PLAY AND SCORING	5
V.	GAME SPEECH	7
VI.	GAME ADJUSTMENTS	8
VII.	BOOKKEEPING AND SELF TEST	9
VIII.	OPTIONS	11
IX.	GENERAL INFORMATION	12
X.	WIRING AND SCHEMATIC DIAGRAMS	15

MARS PROMS:


GAME PROM 666/1
SOUND/SPEECH PROMS 666/S1, 666/S2

I. INSTALLATION

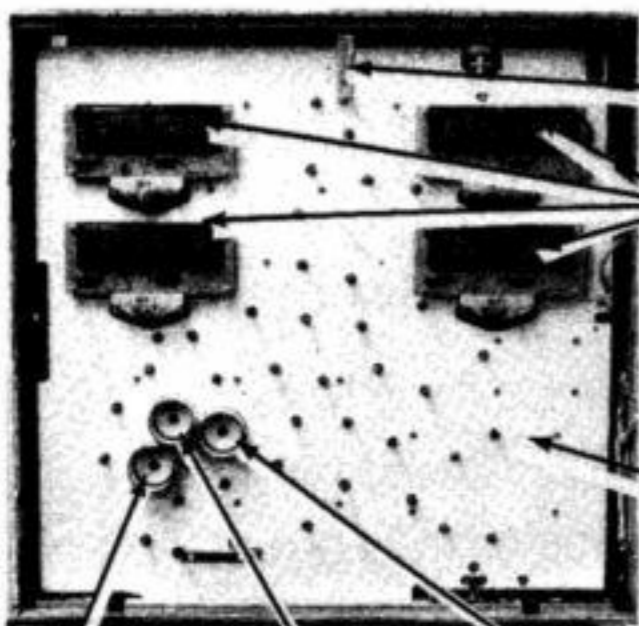


SHIPPING BRACKET
SCORE DISPLAYS
INSERT

GAME OVER LAMP
SHOOT AGAIN LAMP
HIGH GAME TO DATE LAMP

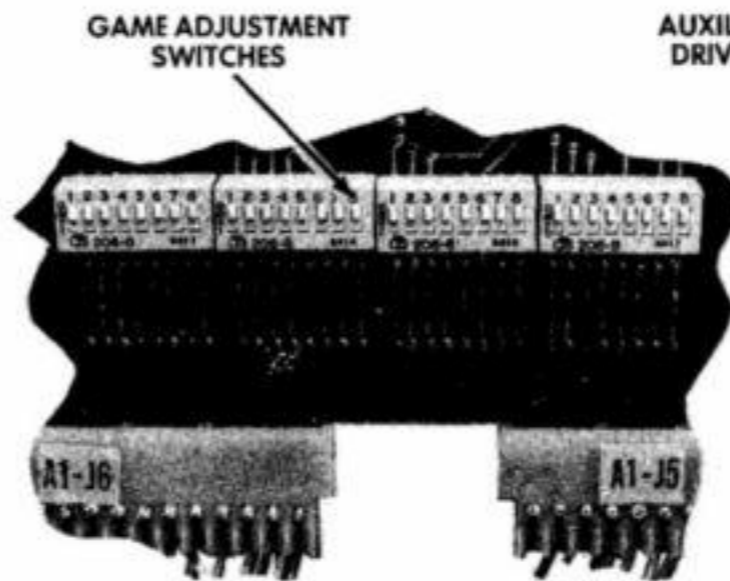

GAME ADJUSTMENT SWITCHES


AUXILIARY LAMP DRIVER BOARD
A2 POWER SUPPLY
A1 CONTROL BOARD
GAME PROM
A3 DRIVER BOARD

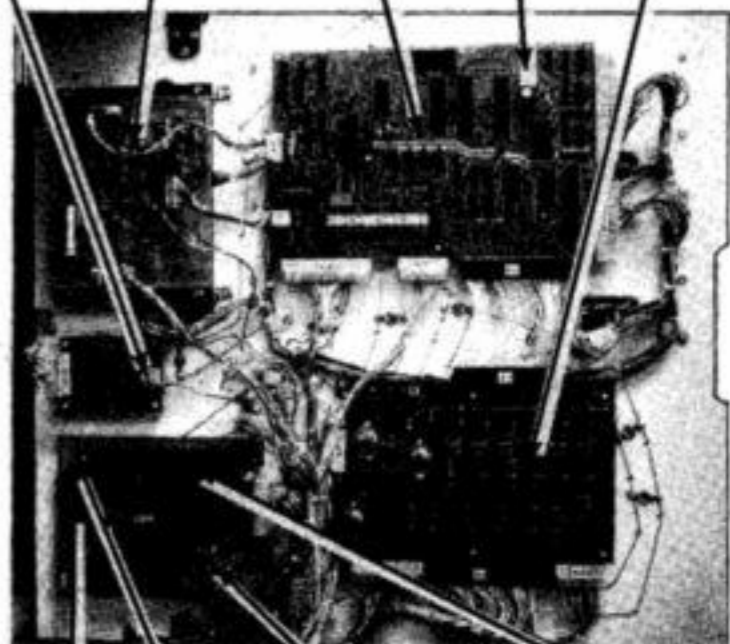

S1-SOUND PROM
SOUND/SPEECH ADJUSTMENTS
A6 SOUND/SPEECH BOARD
S2-SOUND PROM




SOUND/SPEECH POWER SUPPLY
POP BUMPER DRIVER BOARD
SPEAKERS (2)

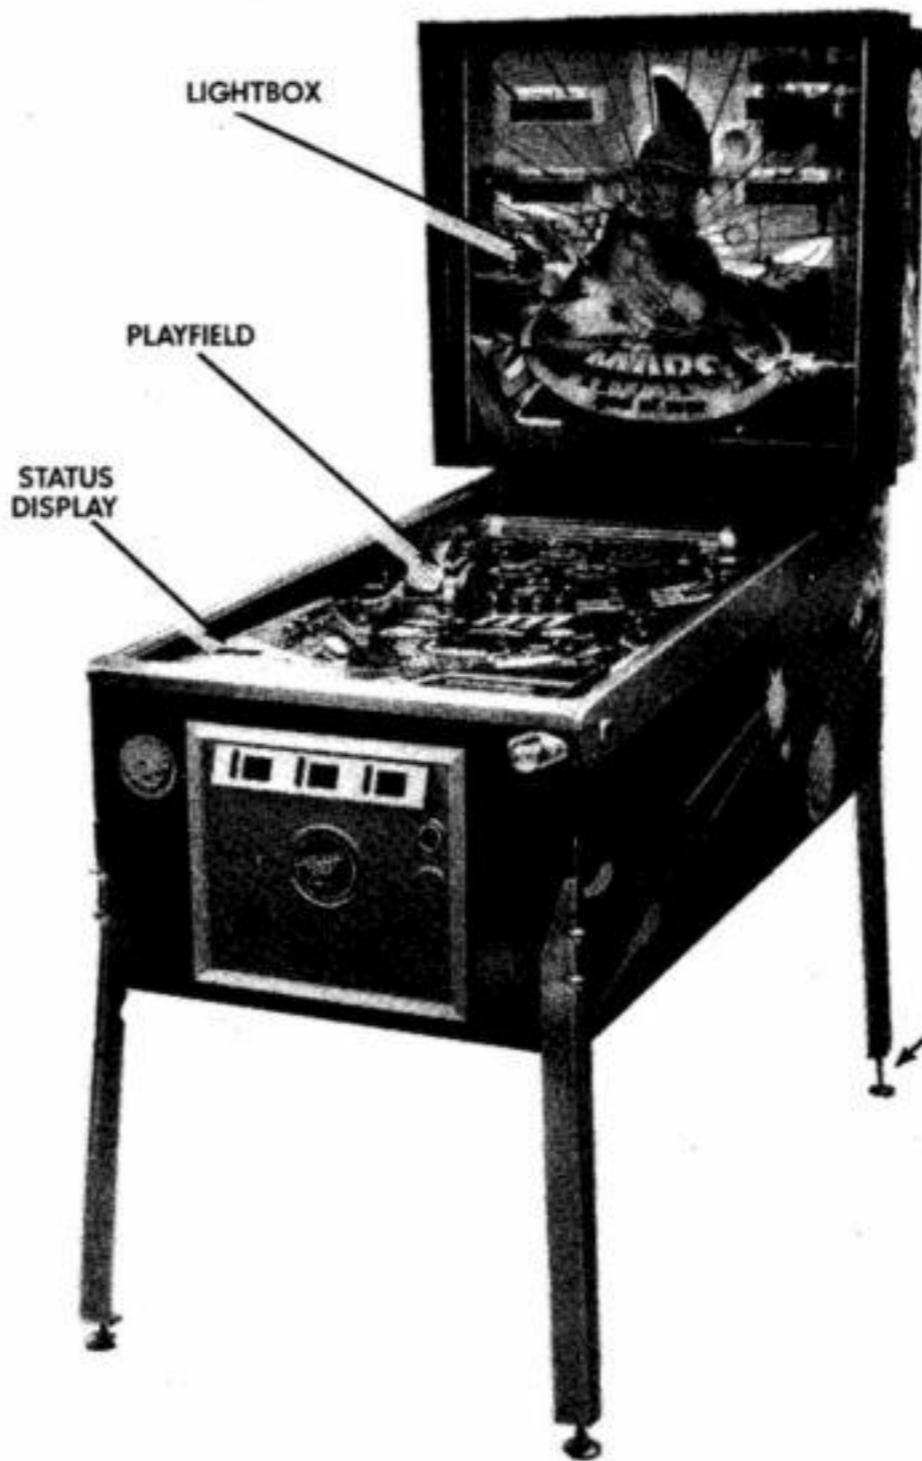


LIGHTBOX
PLAYFIELD
STATUS DISPLAY


LEG LEVELER

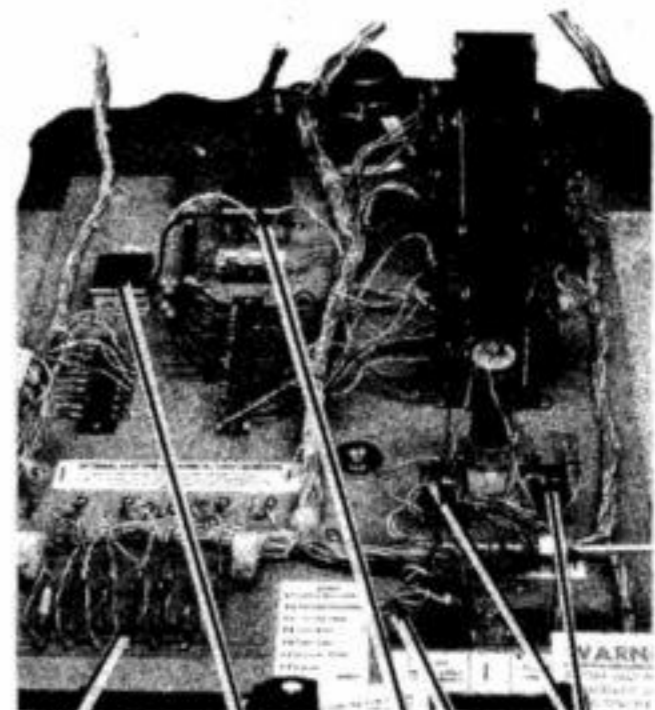


FUSES
CONVENIENCE OUTLET
LINE FILTER
BRIDGE RECTIFIERS
BOTTOM BOARD

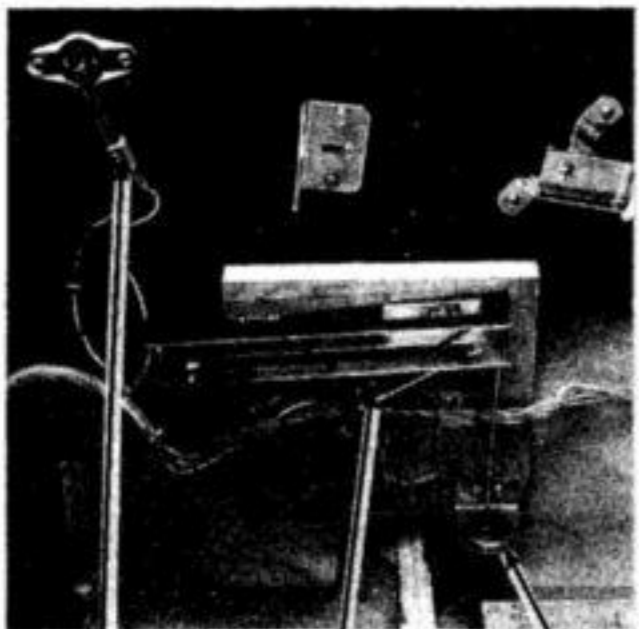


FLIPPER BUTTON SWITCH
BALL-ROLL TILT SWITCH
PLUMB BOB TILT SWITCH

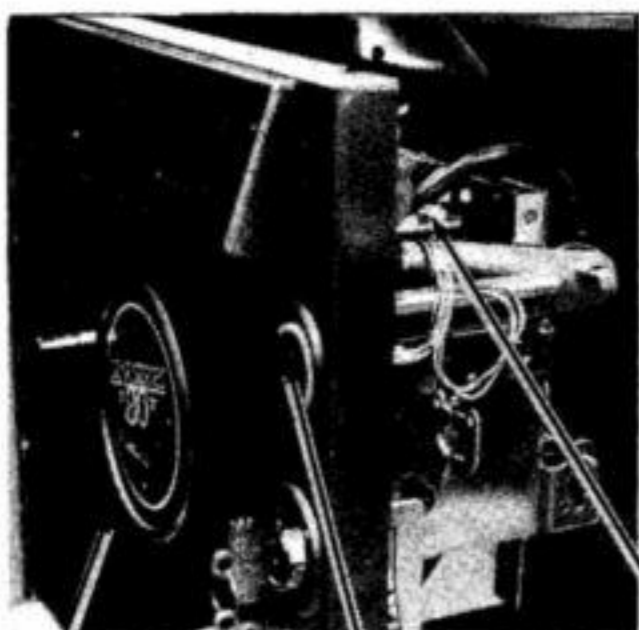

FRONT DOOR
CREDIT BUTTON

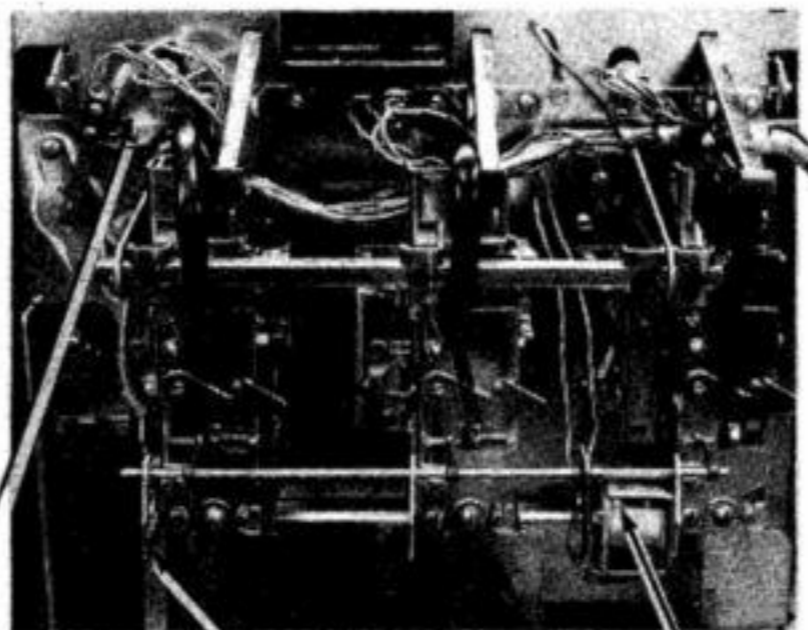

SELF/TEST BUTTON
SLAM SWITCH
COIN LOCKOUT COIL

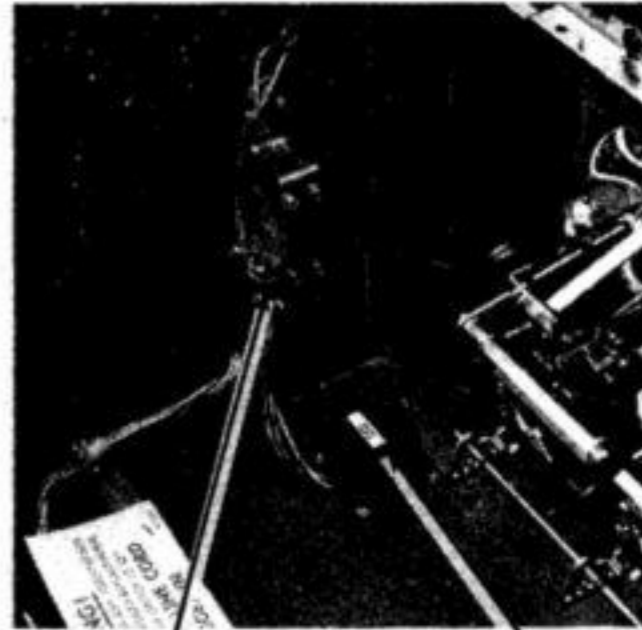

KNOCKER
ON-OFF POWER SWITCH

I. INSTALLATION

A. SET-UP

1. Bolt the legs to the cabinet.
2. Feed the line cord through the slot provided in the pedestal.
3. Place the lightbox atop the pedestal, making sure to engage the holding bracket.
4. Remove the backglass by inserting the key and unlocking the lightbox door. Lift the glass up and swing the bottom out.
5. Loosen and lower the shipping bracket at the top center of the lightbox insert panel.
6. Lift the insert; then swing it out.
7. Secure lightbox to cabinet with bolts and washers provided.
8. Connect all cables and secure with cable clamps provided.
9. Open the cabinet door and loosen the front moulding locking arm.
10. Remove the moulding from the playfield.
11. Slide glass forward and let all 3 balls drain to the outhole.
2. Check for any loose wires.
3. Check switches for loose solder or other foreign matter.
4. Be certain all fuses are firmly seated.
5. Check transformers for any foreign matter across terminals.
6. Be sure transformer wiring corresponds to the supply voltage.
7. Check the setting of the normally open tilt switch on the underside of the playfield. One blade should be free-floating with a weight on the end.
8. Level the machine.
9. Adjust the plumb-bob tilt and the ball roll tilt to the sensitivity desired. Both tilt switches are normally open.
10. With the line cord unplugged, drop a coin into one of the chutes. It should be rejected.
11. Plug game into a properly grounded 3-wire receptacle ONLY!
12. Refer to Section VI to make all necessary game adjustments. NOTE: Switches #31 and #32 are special adjustments to make the game liberal or conservative.

B. CHECK-OUT


1. Check that all cables are clear of moving parts.

LIGHTBOX HOLDING BRACKET




TILT RELAY (T)

GAME OVER RELAY (Q)

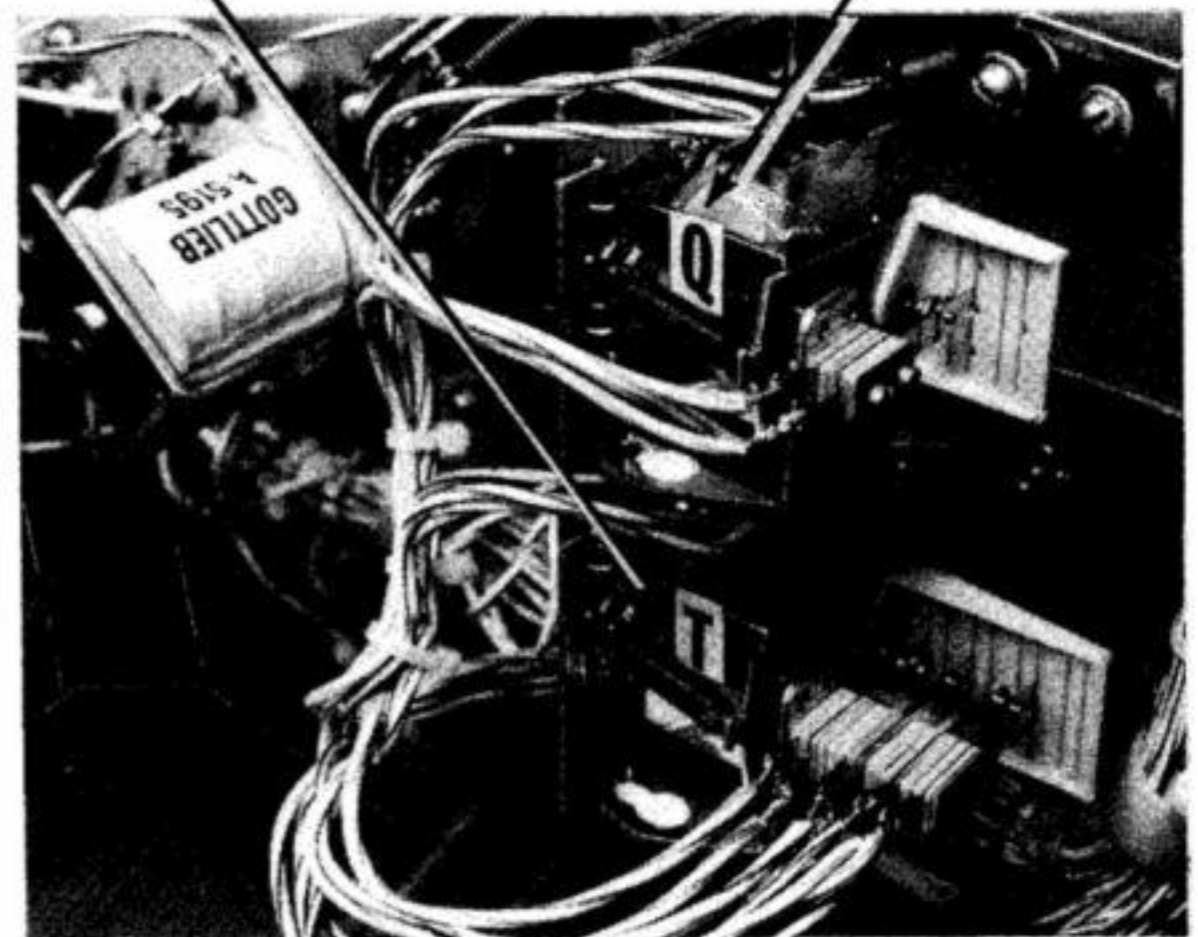

LOCATED ON PLAYBOARD UNDERSIDE

II. INITIALIZATION

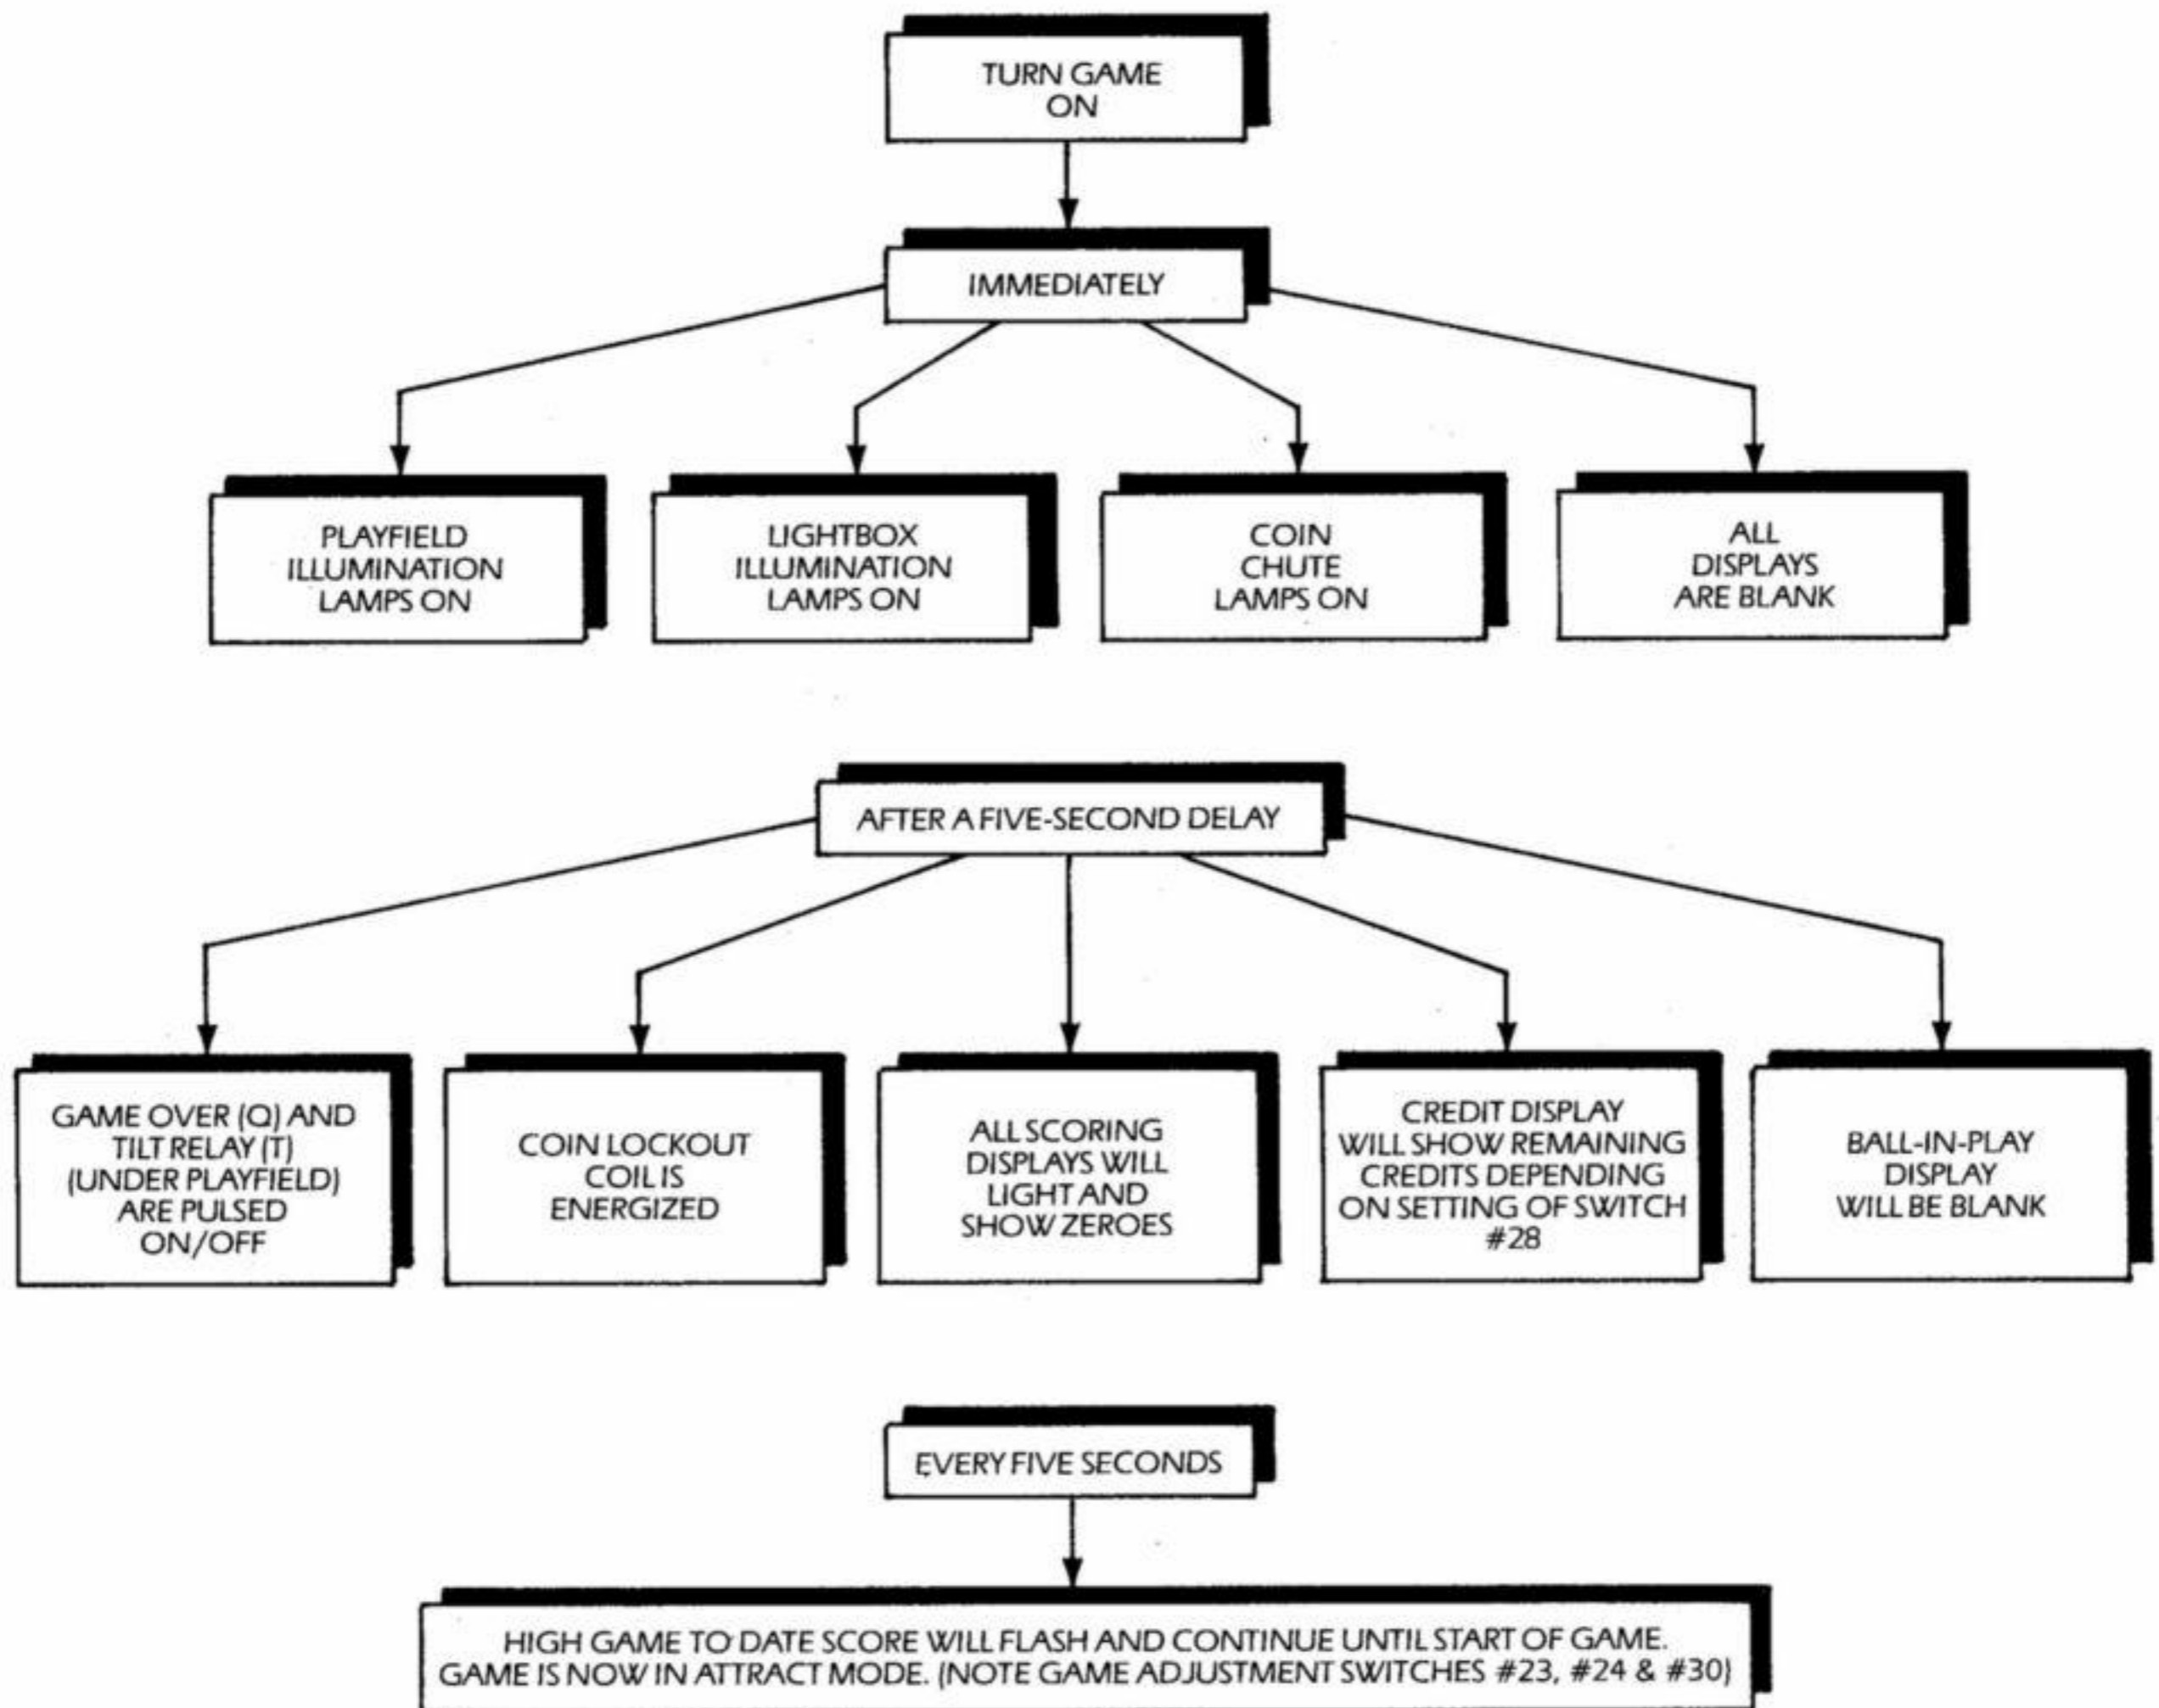

III. GAME OPERATION

A. GAME START

All three balls must be in the ball return trough to start a game.

1. Insert coins into coin chute.
 - a. Coin chute tune is played (dependent on Switch #27).
 - b. Total credits are displayed in status display (dependent on Switch #28).
2. Press Credit Button to start game.
 - a. Credit tune or voice is played.
 - b. Total credits displayed decrease by one.
3. All playfield features reset. Stargate resets to the up position.
4. The first player score display flashes a single zero.
5. When the ball is released to the shooter:
 - a. Playfield controlled lamps flash.
 - b. High Game to Date is briefly displayed in all four players' score displays.

III. GAME OPERATION

B. FIRST PLAYER

1. First player's score display flashes single zero.
2. The other players' displays are now blank.
3. A "1" appears on the ball-in-play display.
4. When the ball enters the outhole, the bonus is scored.
5. All captured balls will be ejected.

C. ADDITIONAL PLAYERS

1. Additional players are indicated by a zero (not flashing) in each corresponding player's display.
2. After the maximum number of players are added, or no more credits remain, the Credit Button has no effect.
3. Additional players can be added any time the first player's first ball is still in play. If the Credit Button is pressed after the first player's first ball has entered the outhole, all players' scores will be erased with the first player's score display showing a flashing zero, indicating a new game only for the first player.

D. EXTRA BALLS

1. When the SHOOT AGAIN lamp is lit, neither the player-up nor the ball-in-play display changes when the ball enters the outhole.
2. Only one extra ball per ball-in-play is given.

E. TILT MODE

1. Tilting the game results in a penalty, depending on the setting of Switch #29 (see Section VI).
2. When the game is tilted, all the playfield lamps and lightbox lamps go off except the LAUNCH lane lamps, spinner lamps, or the

plastic tube LEDs depending which ones were on when the tilt occurred.

3. All captive balls are ejected and returned to the outhole.
4. All accumulated bonus and bonus multipliers are lost.

F. SLAM MODE

1. If the normally closed slam switch (located inside front door) is opened, the entire game is ended for all players.
2. The GAME OVER lamp comes on.
3. The entire switch matrix is inactive for three seconds.
4. All coins will be rejected if dropped into any coin chute during the three second delay.
5. All captive balls are ejected and returned to the outhole.
6. If the match feature exists (dependent on Switch #18), a replay can be won even if the game is slammed.
7. Game returns to the attract mode.

G. GAME OVER

1. When the last ball enters the outhole, the GAME OVER lamp continually flashes.
2. A random number appears in the ball-in-play display. If this number matches the last two digits in any player's score, a replay (dependent on Switch #18) is awarded.
3. HGTD is periodically flashed in all players displays. When a score higher than this is achieved, an award (dependent on Switches #23 and #24) is given.
4. All captive balls will be ejected and returned to the outhole.
5. The two target banks will reset.

IV. GAME PLAY AND SCORING

MULTI-BALL PLAY (HYPERFORCE)

- Completing center drop target bank activates left captive hole. ACTIVATE WARBASE lamp flashes.
- Completing right drop target bank activates right captive hole. ACTIVATE WARBASE lamp flashes.
- When either WARBASE is captured, the STARGATE is lowered and the plastic tube LED's are strobed.
- After a ball is captured in either captive hole, a ball is kicked to the ball shooter.
- The LAUNCH ball kicker lane flashes. This indicates that if a ball enters the lane either through the plastic tube or from the playfield, it and any captive ball(s) will be released for multi-ball play.
- Multi-ball play with two balls is achieved when either captive hole captures a ball and the next ball enters the LAUNCH ball kicker lane. The WARP I lamp turns on, indicating that all playfield scoring is 3X (3 times) the value of normal one-ball play. Playfield scoring reverts to normal one-ball scoring when a ball enters the outhole. WARP I lamp turns off.
- Multi-ball play with three balls is achieved when two balls are captured and the third ball enters the LAUNCH ball kicker lane. The WARP II lamp turns on, indicating that all playfield scoring is 5X (5 times) normal one-ball play. When the first ball enters the outhole, playfield scoring drops to WARP I value. WARP II lamp turns off and WARP I lamp turns on. When the second ball enters the outhole, the WARP I lamp turns off and one-ball play resumes.
- During multi-ball play, captive holes (WARBASES) cannot capture a ball. ACTIVATE WARBASE lamps remain off.
- If multi-ball is not achieved during a ball-in-play, all captive balls are released and will enter the outhole before the next ball is kicked to the ball shooter.
- Activated WARBASES for capturing balls remembered from ball-to-ball.

STARGATE FEATURE

- If no ball is captured, a ball that travels through the right return rollover will lower the STARGATE. If the ball enters the LAUNCH lane through the plastic tube or from the playfield before hitting a pop bumper, the player will be awarded 50,000 points. Hitting a pop bumper ends the STARGATE feature.

LAST CHANCE FEATURE

A captive ball will become a ball-in-play when the player's last ball-in-play enters the outhole through a side outlane. The last chance feature does not occur if an extra ball has been won.

- If one ball is captive, it will be released for play when the player's ball exits either outlane.
- If two balls are captive, only one ball will be released, corresponding to the outlane the player's ball exits.
- The LAST CHANCE feature can be disabled with game adjustment switch #31 in the off position.

EXTRA BALL

Entering a WARBASE when the warbase Extra Ball lamp is lit:

- Left WARBASE lights upper left return rollover for EXTRA BALL.
- Right WARBASE lights right spot target for EXTRA BALL.

SPECIAL

Entering a WARBASE when the warbase Special lamp is lit:

- Left WARBASE will light left outlane for SPECIAL.
- Right WARBASE will light right outlane for SPECIAL.
- Specials can be relit on the same ball-in-play.

MULTIPLIERS

- Bonus multipliers (BONUS BLASTERS) and WARBASE score multipliers are advanced by either completing the M-A-R-S rollover sequence or entering the LAUNCH lane.

IV. GAME PLAY AND SCORING

- When the multiplier reaches 5X, the M-A-R-S rollovers remain unlit, and all pop bumpers are lit.

ROLLOVERS AND SPOT TARGET

Top Rollovers and Lower Return Rollovers

- Score 100 points unlit.
- Score 1000 points and ADD BONUS when lit.
- Two lower return rollovers spot the A and R of M-A-R-S.
- M-A-R-S sequence remembered from ball-to-ball.

Outlane Rollovers

- Score 5000 points and ADD BONUS.
- Award SPECIAL when lit.
- Award LAST CHANCE feature on last ball.

Spot target and Upper Left Return Rollovers

- Score 500 points.
- Awards EXTRA BALL when lit.

CAPTIVE HOLES (WARBASES)

- Score 1000 points unlit.
- Score 2000-5000 points when 2X-5X lamps are lit.
- Capture ball when ACTIVATE WARBASE lamp is flashing.
- See **EXTRA BALL** and **SPECIAL**.

10-POINT SWITCHES (score 10 points)

SPINNER

- Score 100 points unlit.
- Score 1000 points and ADD BONUS when lit.
- Advance spinner lights (See **DROP TARGETS**).
- Spinner lights remembered from ball-to-ball (3-ball only).

POP BUMPERS

- Score 100 points unlit.
- Score 1000 points when lit.

LAUNCH lane (upper right ball kicker)

- Score 5000 points, ADD BONUS, and advance MULTIPLIER.
- Launch captive balls when flashing.
- Awards 50,000 points for **STARGATE FEATURE**.

DROP TARGETS

- Score 100 points unlit.
- Score 1000 points when lit.
- Add BONUS.
- Light corresponding spinner lamp.
- Completed target bank resets.
- See **MULTI-BALL PLAY**.

OTHER FEATURES

- Right flipper button rotates M-A-R-S and rotates pop bumper lights.
- 3-Ball Play:
 - Bonus maximum is 29,000 points.
 - Game Adjustment Switch #32:
 - ON (LIBERAL)—Light warbase Special Lamp when multiplier reaches 4X. Light warbase Extra Ball lamp when multiplier reaches 3X.
 - OFF (Conservative)—Light warbase Special lamp when multiplier reaches 5X. Light warbase Extra Ball lamp when multiplier reaches 4X.
- 5-Ball Play:
 - Bonus maximum is 19,000 points.
 - Light warbase Special lamp when multiplier reaches 5X.
 - Light warbase Extra Ball lamp when multiplier reaches 4X.

HIGH GAME TO DATE

- If the High Game To Date is 990,000 or greater at the start of a new game, the High Game To Date will automatically reset to 770,000.

V. GAME SPEECH

ATTRACT MODE

"EARTHLING, I AM SUPREME."
"THE POWER OF MARS CHALLENGES YOU."
"CAN YOU SURVIVE BATTLE WITH MARS?"

OCCURRENCE

Random.
Random.
Random.

GAME MODE

"PREPARE FOR BATTLE."
"WARBASE RIGHT, DEFENSES DESTROYED."
"WARBASE LEFT, DEFENSES DESTROYED."
"WARBASE RIGHT SECURED."
"WARBASE LEFT SECURED."
"SHOOT STARGATE FOR HYPERFORCE."

OCCURRENCE

a Pressing credit button.
b When ball lands in unlit warbase.
Completing right drop target bank.
Completing center drop target bank.
When ball is captured in right warbase.
When ball is captured in left warbase.
a When left or right warbase is captured and Stargate drops.
"ATTACK."
Ball enters launch lane;
a No balls secured, repeats twice.
b One or two balls secured, repeated once for each ball as it is released.
"HYPERFORCE I."
a When two-ball play is initiated.
b During three-ball play, when one ball enters the outhole.
"HYPERFORCE II."
When three-ball play is initiated.
"TILT, TILT, TILT."
When game is tilted.
"OOOooo."
When game is slammed.

GAME OVER MODE

"BATTLE IS OVER. MARS IS SUPREME."
"MARS CONCEDES. I DEMAND A REMATCH."

OCCURRENCE

No high score level is achieved.
First high score level is achieved.

VI. GAME ADJUSTMENTS

A. CONTROL BOARD SWITCH ADJUSTMENTS

There are 32 switches on the control board which permit adjustment of the game parameters. These switches are contained in four packages of eight switches each, as shown below:

S1-S8	S9-S16	S17-S24	S25-S32
-------	--------	---------	---------

Switch settings are recognized only during normal power-up and when starting the first player of a new game (not when additional players are added).

SWITCHES				COIN CHUTE ADJUSTMENTS
S1	S2	S3	S4	Left Chute
S5	S6	S7	S8	Right Chute
S9	S10	S11	S12	Center Chute

NOTE: FOR GERMAN GAMES ONLY, switches S5-S8 adjust the center chute and switches S9-S12 adjust the right chute.

SWITCHES				COINS/CREDITS
OFF	OFF	OFF	OFF	1/1
OFF	OFF	OFF	ON	1/2
OFF	OFF	ON	OFF	1/3
OFF	OFF	ON	ON	1/4
OFF	ON	OFF	OFF	1/5
OFF	ON	OFF	ON	1/6
OFF	ON	ON	OFF	1/7
OFF	ON	ON	ON	1/8
ON	OFF	OFF	OFF	1/9
ON	OFF	OFF	ON	2/1*
ON	OFF	ON	OFF	2/2*
ON	OFF	ON	ON	2/3*
ON	ON	OFF	OFF	2/4*
ON	ON	OFF	ON	2/5*
ON	ON	ON	OFF	1/1 AND 2/3
ON	ON	ON	ON	3/1*

*NO CREDITS UNTIL LAST COIN IS INSERTED.

SWITCH 13 ————— **EXTRA CREDITS**
 ON Adds 9 credits to center coin chute setting
 OFF No effect

NOTE: FOR GERMAN GAMES ONLY, Switch 13 adds 9 credits to the **right** coin chute setting, when ON.

SWITCH 14 ————— **COIN CHUTE CONTROL**
 ON Left and Right Chutes Same
 OFF Left and Right Chutes Separate

NOTE: FOR GERMAN GAMES ONLY, Switch 14 controls the left and **center** coin chutes.

SWITCHES		MAXIMUM CREDITS
15	16	
OFF	OFF	8
OFF	ON	10
ON	OFF	15
ON	ON	25

SWITCH 17 ————— **BALLS PER GAME**
 ON 3
 OFF 5

SWITCH 18 ————— **MATCH FEATURE**
 ON ON
 OFF OFF

SWITCH 19 ————— **REPLAY LIMIT**
 ON Limits each player to one replay per game
 OFF No replay limit

SWITCH 20 ————— **NOVELTY MODE**
 ON Playfield SPECIAL and EXTRA BALL features

award 50,000 points and 5 knocks. High score, high game to date, and match features disabled.

OFF Normal game mode
 NOTE: SWITCH 20 overrides SWITCH 21.

SWITCH 21 ————— **GAME MODE**
 ON Extra Ball
 OFF Replay

NOTE: IF SWITCH 21 is ON, the high game to date and match awards are disabled.

SWITCH 22 ————— **PLAYFIELD SPECIAL**
 ON Awards Extra Ball
 OFF Awards Special

SWITCHES		HIGH GAME TO DATE
23	24	
OFF	OFF	Not displayed—no award
OFF	ON	Displayed—no award
ON	OFF	Displayed—awards 2 replays
ON	ON	Displayed—awards 3 replays

SWITCH 25 ————— **MUST BE ON**
 ON
 OFF

SWITCH 26 ————— **REPLAY BUTTON TUNE?**
 ON Yes
 OFF No

SWITCH 27 ————— **COIN SWITCH TUNE?**
 ON Yes
 OFF No

SWITCH 28 ————— **CREDITS DISPLAYED?**
 ON Yes
 OFF No

SWITCH 29 ————— **TILT PENALTY**
 ON Ball in play only
 OFF Game over

SWITCH 30 ————— **ATTRACT FEATURES**
 ON ON
 OFF OFF

SWITCHES 31, 32 ————— **LIBERAL-CONSERVATIVE**

(SEE SECTION VI, B)

B. LIBERAL-CONSERVATIVE ADJUSTMENTS

- Game Adjustment Switch #31
 ON (Liberal)—Last Chance feature enabled.
 OFF (Conservative)—Last Chance feature disabled.
- Game Adjustment Switch #32
 ON (Liberal)—Light warbase Special Lamp when multiplier reaches 4X. Light warbase Extra Ball lamp when multiplier reaches 3X.
 OFF (Conservative)—Light warbase Special lamp when multiplier reaches 5X. Light warbase Extra Ball lamp when multiplier reaches 4X.

VI. GAME ADJUSTMENTS

C. POST ADJUSTMENTS

There are two post adjustments that provide liberal or conservative game play. See page 31 (Playboard Information) for post positioning.

THE SOUND/SPEECH BOARD (A6) USED IN MARS GAME #666 IS NOT INTER-CHANGEABLE WITH SOUND BOARDS (A6) USED IN PREVIOUS SYSTEM 80 GAMES.

D. SOUND/SPEECH ADJUSTMENTS

IMPORTANT: All potentiometers (pots) are factory adjusted for maximum volume. Damage to board components may result if settings are changed.

SWITCH BANK (SB1) SETTINGS:

SB1-1	NOT USED
SB1-2	NOT USED
SB1-3	SB1-4 Attract Mode Speech
OFF	OFF Disabled.
ON	OFF Every 10 Seconds.
OFF	ON Every 2 Minutes.
ON	ON Every 4 Minutes.
SB1-5	ON Background sound enabled.
	OFF Background sound disabled.
SB1-6	ON All Speech enabled.
	OFF All Speech disabled.
SB1-7	NOT USED
SB1-8	NOT USED

SOUND/SPEECH BOARD (A6) TEST SEE SECTION IX, E PAGE 14.

VII. BOOKKEEPING AND SELF TEST

The circuitry in this game helps the operator perform many bookkeeping and game test functions. The information is shown one step at a time in the first player's score display, while the step number is shown in the credit display (refer to flow chart Section VII, C for order and function).

A. BOOKKEEPING

- Pressing the SELF-TEST button inside the front door begins the bookkeeping which are steps 01 through 15.
- The data in any of these steps may be reset to zero while it is displayed by pressing the replay button on the front door.
- **The SELF-TEST button must then be pressed to enter zero into memory.**
- All bookkeeping information is checked against itself to insure that it is correct. If

any data is invalid or bad, that information will flash while it is displayed.


- If the SELF-TEST button is not pressed within 60 seconds of each step, the game will return to the attract mode.

B. SELF-TEST

- Steps 16 through 20 are SELF-TEST or game tests the operator can use for quick troubleshooting.
- All the tests are explained in the flow chart (Section VII, C).
- Each test can be repeated by pressing the replay button on the front door. This starts the test for another 60 seconds.
- If the SELF-TEST button or the replay button is not pressed within 60 seconds, the game will return to the attract mode.

VII. BOOKKEEPING AND SELF TEST

C. FLOW CHART

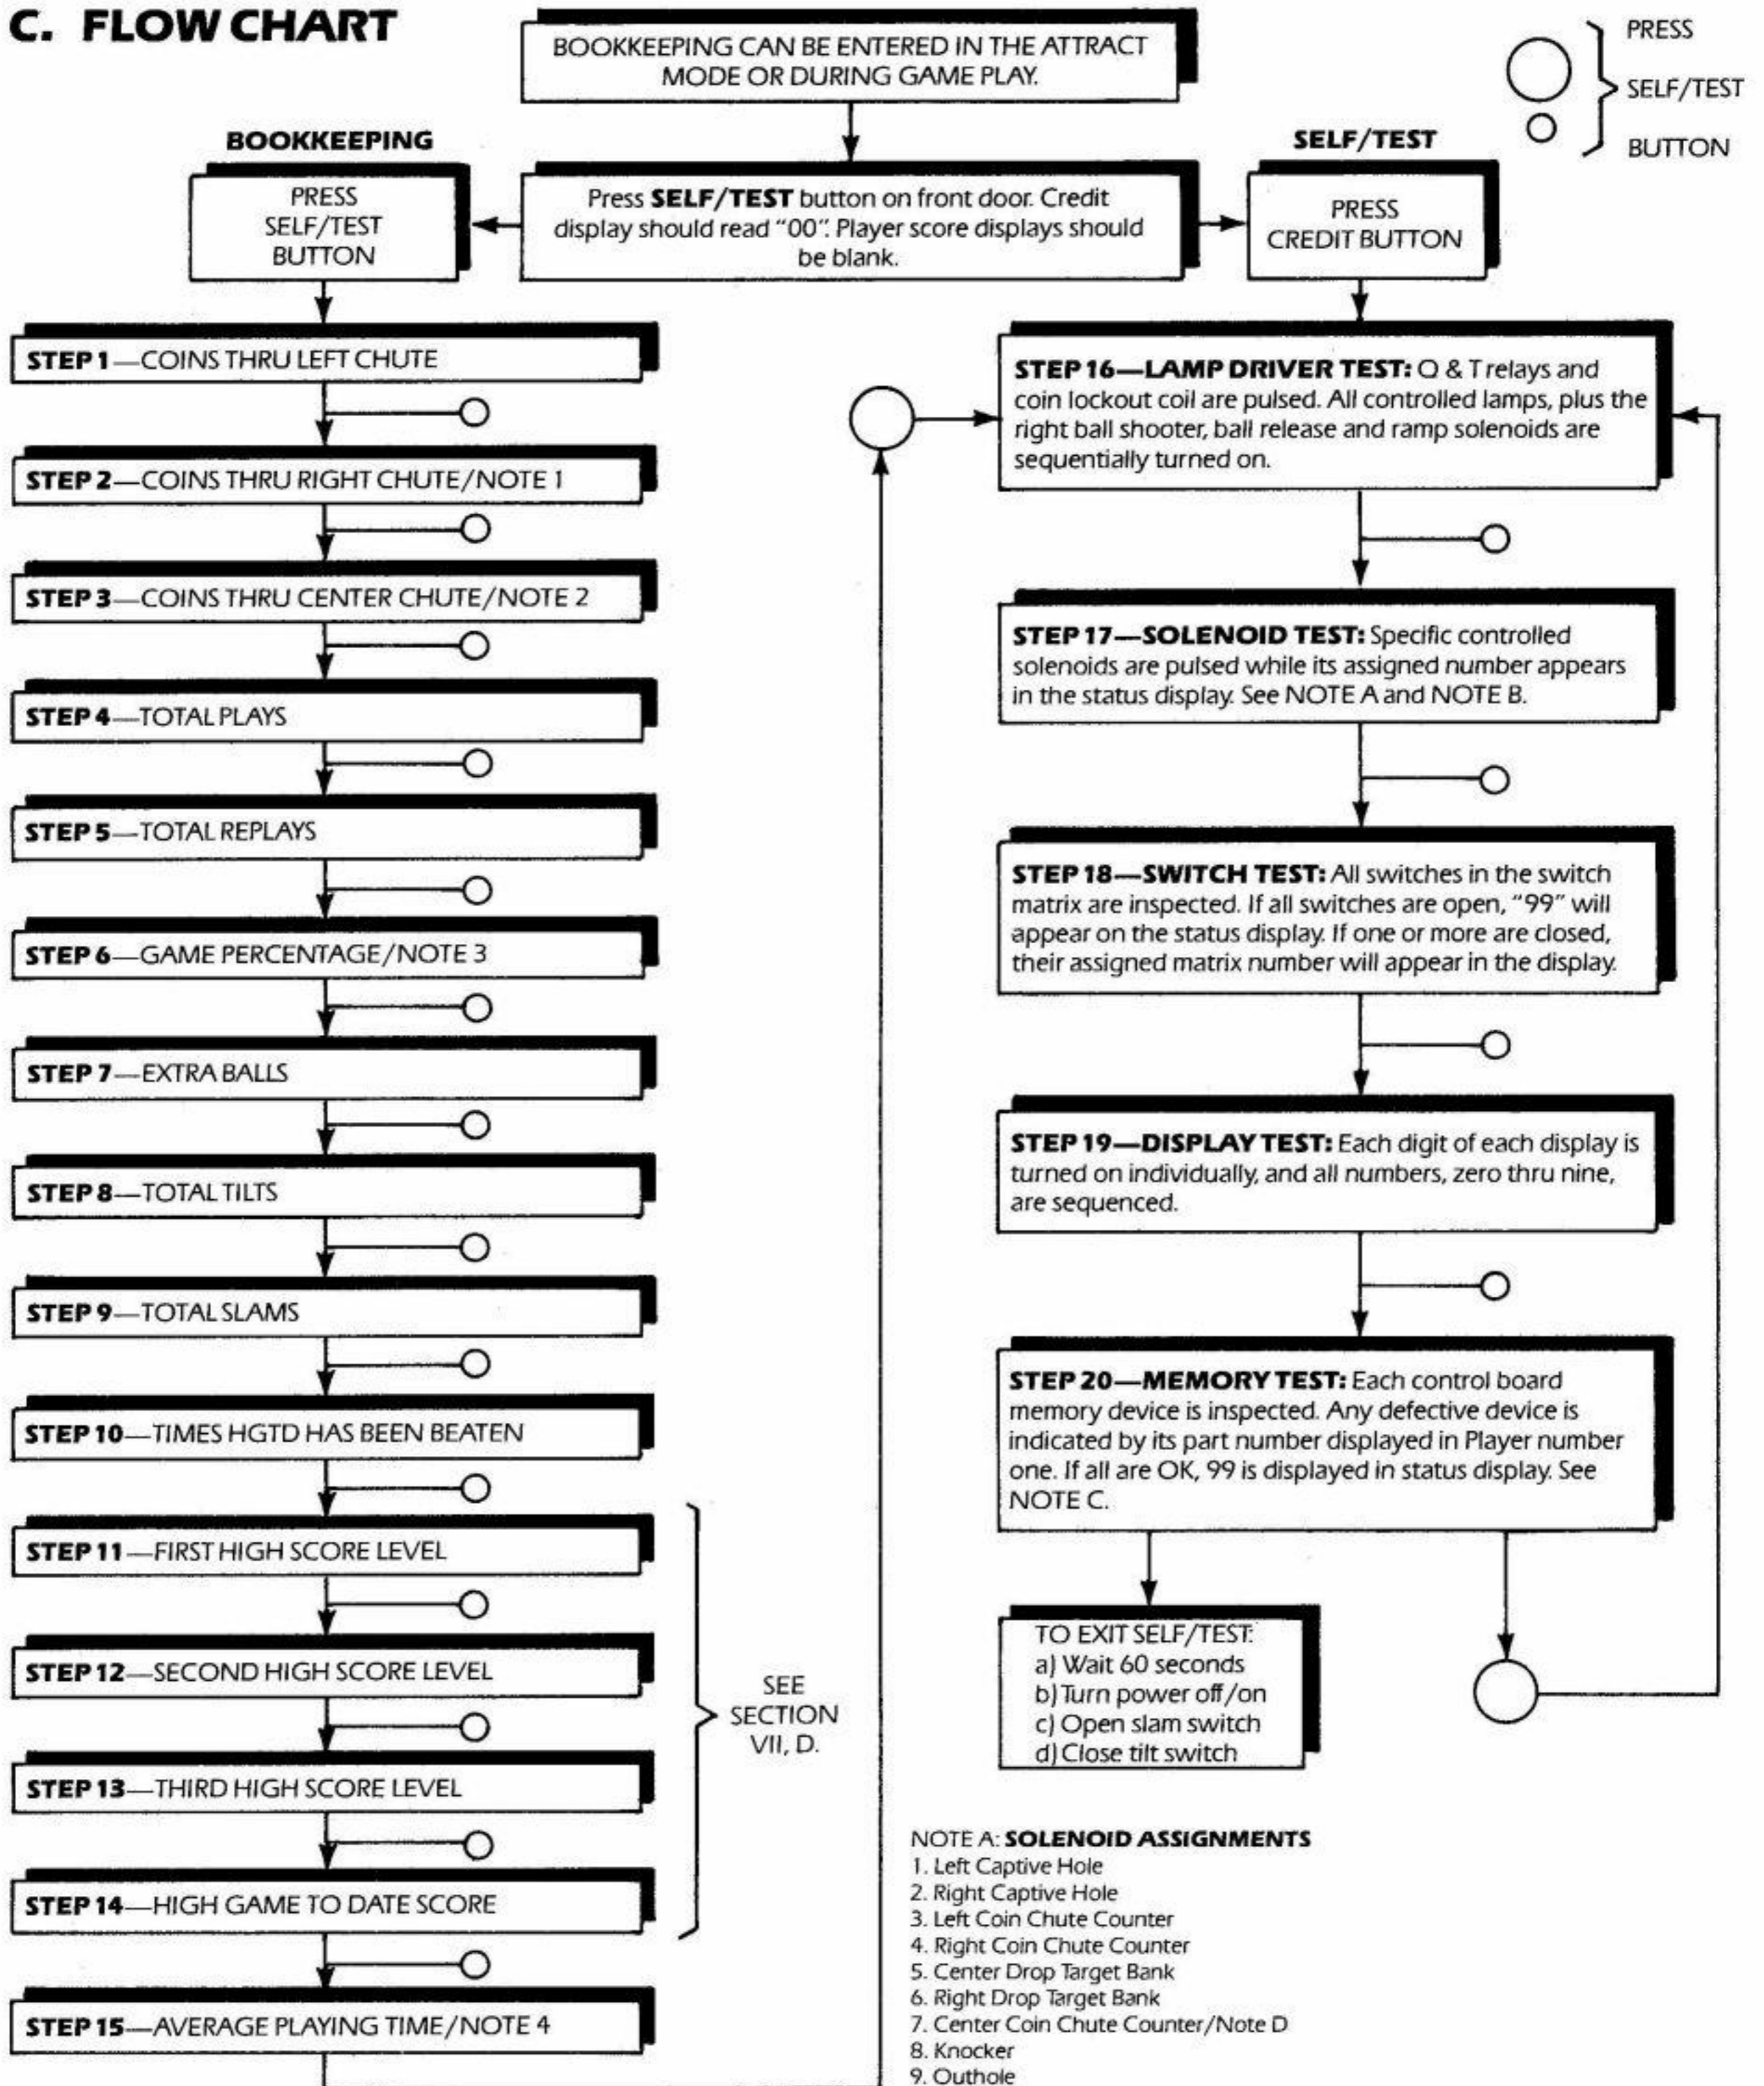

1. If control board switch #14 is on, Steps 01 and 02 are added together and displayed in Step 01.
2. IN GERMAN GAMES ONLY, Step 02 displays total coins thru center chute, and Step 03 displays total coins thru right chute.
3. If Step 06 is reset, Steps 04 and 05 must also be reset.
4. If Step 15 is reset, Step 04 must also be reset.

NOTE A: SOLENOID ASSIGNMENTS

1. Left Captive Hole
2. Right Captive Hole
3. Left Coin Chute Counter
4. Right Coin Chute Counter
5. Center Drop Target Bank
6. Right Drop Target Bank
7. Center Coin Chute Counter/Note D
8. Knocker
9. Outhole


NOTE B: Mechanical coin counters are optional and are not pulsed during solenoid test.

NOTE C: James Bond and later System 80 games will display 7641-1 for a bad 2716 game prom.

NOTE D: FOR GERMAN GAMES ONLY, solenoid #4 is assigned to center coin chute and solenoid #7 is assigned to right coin chute.

VII. BOOKKEEPING AND SELF TEST

D. HOW TO RESET HIGH SCORE LEVELS OR HIGH GAME TO DATE SCORES

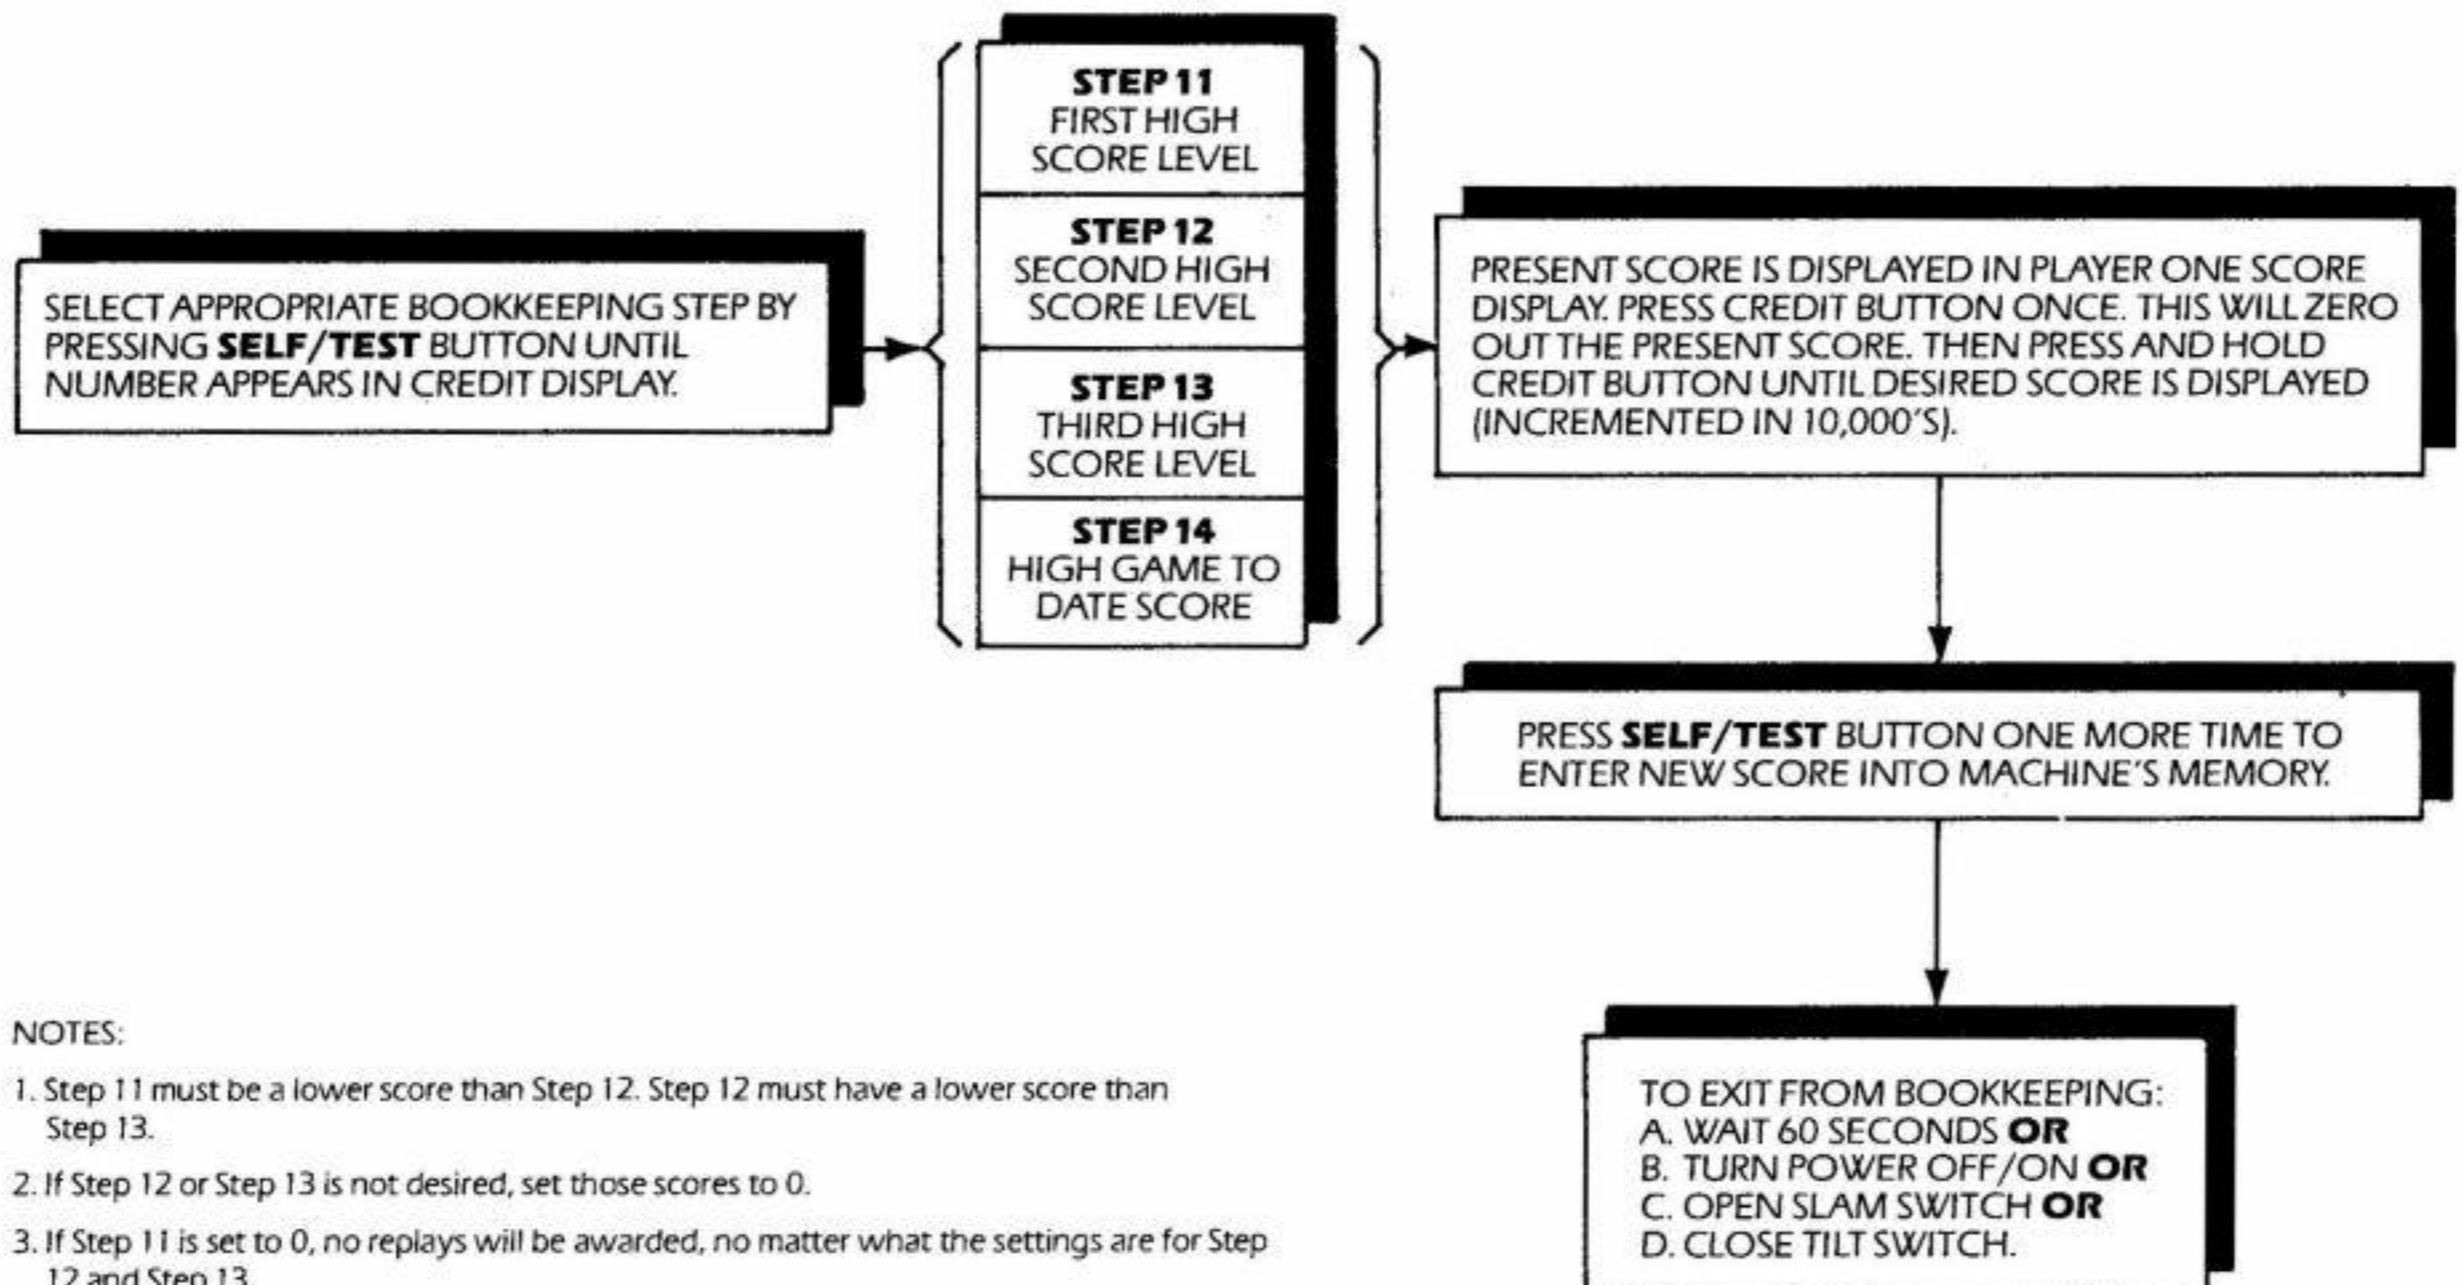

VIII. OPTIONS

A. ELECTRO-MECHANICAL COIN COUNTERS

Electro-mechanical coin counters may be installed on the bottom board, directly behind the 7-position fuse block. Solder lugs are provided which will connect the counters to the electronic circuitry.

1. Position the counter and secure it to the bottom board. Mounting holes are spotted for most standard 24 volt counters.

2. CAUTION: A 1N4004 diode must be connected across each counter with the cathode lead connected to the solder lug with the RED-BLACK-BLACK wire.
3. Connect one counter lead to each of the two solder lugs provided for each counter.
4. The counter should increment once when the respective coin chute switch is closed.

IX. GENERAL INFORMATION

A. PRINTED CIRCUIT BOARDS ARE DESIGNATED AS FOLLOWS:

- A1 — Control Board
- A2 — Power Supply
- A3 — Driver Board
- A4 — Score Displays (4)
- A5 — Status Display
- A6 — Sound/Speech Board
- A8 — Pop Bumper Driver Boards (4)
- A11 — Auxiliary Lamp Driver Board—
Lightbox
- A12 — Auxiliary Lamp Driver Board—
Playfield
- A13 — LED Display Strip

Printed circuit board connectors will be labeled AX-JX. For example, A3-J4 is the connector J4 on the driver board (A3).

B. WIRE COLORS ARE SHOWN AS NUMBERS:

0 Black	5 Green
1 Brown	6 Blue
2 Red	7 Purple
3 Orange	8 Slate
4 Yellow	9 White

For example, 688 is a BLUE-SLATE-SLATE striped wire.

C. FUSES

BOTTOM BOARD

F1	Lightbox Illumination	10 Amp
F2	Playboard Illumination	7-1/2 Amp
F3	Controlled Lamps	8 Amp SLO-BLO
F4	Sound Board	2 Amp SLO-BLO
F5	Power Supply	5 Amp SLO-BLO
F6	Solenoids (24 VDC)	8 Amp SLO-BLO
F7	Displays	1/4 Amp SLO-BLO
F8	Primary Fuse 110 VAC	5 Amp SLO-BLO
	Primary Fuse 220 VAC	2.5 Amp SLO-BLO

SOUND/SPEECH POWER SUPPLY

F9	Sound, Speech	1 Amp SLO-BLO
----	---------------	---------------

PLAYBOARD

F10	Left Top Pop Bumper	2 Amp SLO-BLO
F11	Right Top Pop Bumper	2 Amp SLO-BLO
F12	Left Bottom Pop Bumper	2 Amp SLO-BLO
F13	Right Bottom Pop Bumper	2 Amp SLO-BLO
F14	Right and Center Drop Target Bank	2 Amp SLO-BLO
F15	Left and Right Captive Holes and Outhole	1 Amp SLO-BLO
F16	Right Launch Lane	2 Amp SLO-BLO
F17	Ball Release	1 Amp SLO-BLO
F18	Ramp	2 Amp SLO-BLO

IX. GENERAL INFORMATION

D. COIL CHART

SOLENOID COILS


PART NUMBER	GENERAL USAGE*	RESISTANCE (ohms)	NUMBER OF TURNS	WIRE GAUGE	WRAPPER COLOR
A-1496	KICKING RUBBERS POP BUMPERS	2.95	635	#23	Yellow
A-5194	GONG	4.5	780	#24	Blue
A-5195	KNOCKER, HOLE KICKER	12.3	1305	#26	White
A-16570	HOLE KICKER, OUTHOLE	15.5	1450	#27	Green
A-17875	FLIPPERS	2.8/40.0	560/1100	#24/31	Yellow
A-17891	5 BANK RESET	3.35	850	#22	White
A-18102	3 BANK RESET, 7 BANK RESET USES 2	9.0	1430	#24	Red
A-18318	4 BANK RESET	6.7	1130	#24	Orange
A-19300	BALL KICKER	7.8	1075	#25	Orange
A-20095	SUPER FLIPPER	1.55/35.5	450/900	#22/31	Red
RELAY COILS					
A-16890	Q, T, AND COIN LOCKOUT RELAYS	231.0	4000	#35	Orange
A-17564	GATE RELAY	156.0	3400	#34	White
A-18642	MEMORY/ DROP TARGETS	58.0	1590	#33	White

*Coils may vary from game to game. Check game manual for exact coil usage.
Normally, all coils are powered by +24 VDC.

IX. GENERAL INFORMATION

E. SOUND/SPEECH BOARD (A6) TEST

1. Pressing the test button on the sound board will initiate the test.
2. The test must be completed to enable the sound board or game power must be turned off/on.
3. Words in bold print with quotation marks are the voice responses the sound board issues at specific points in the test.

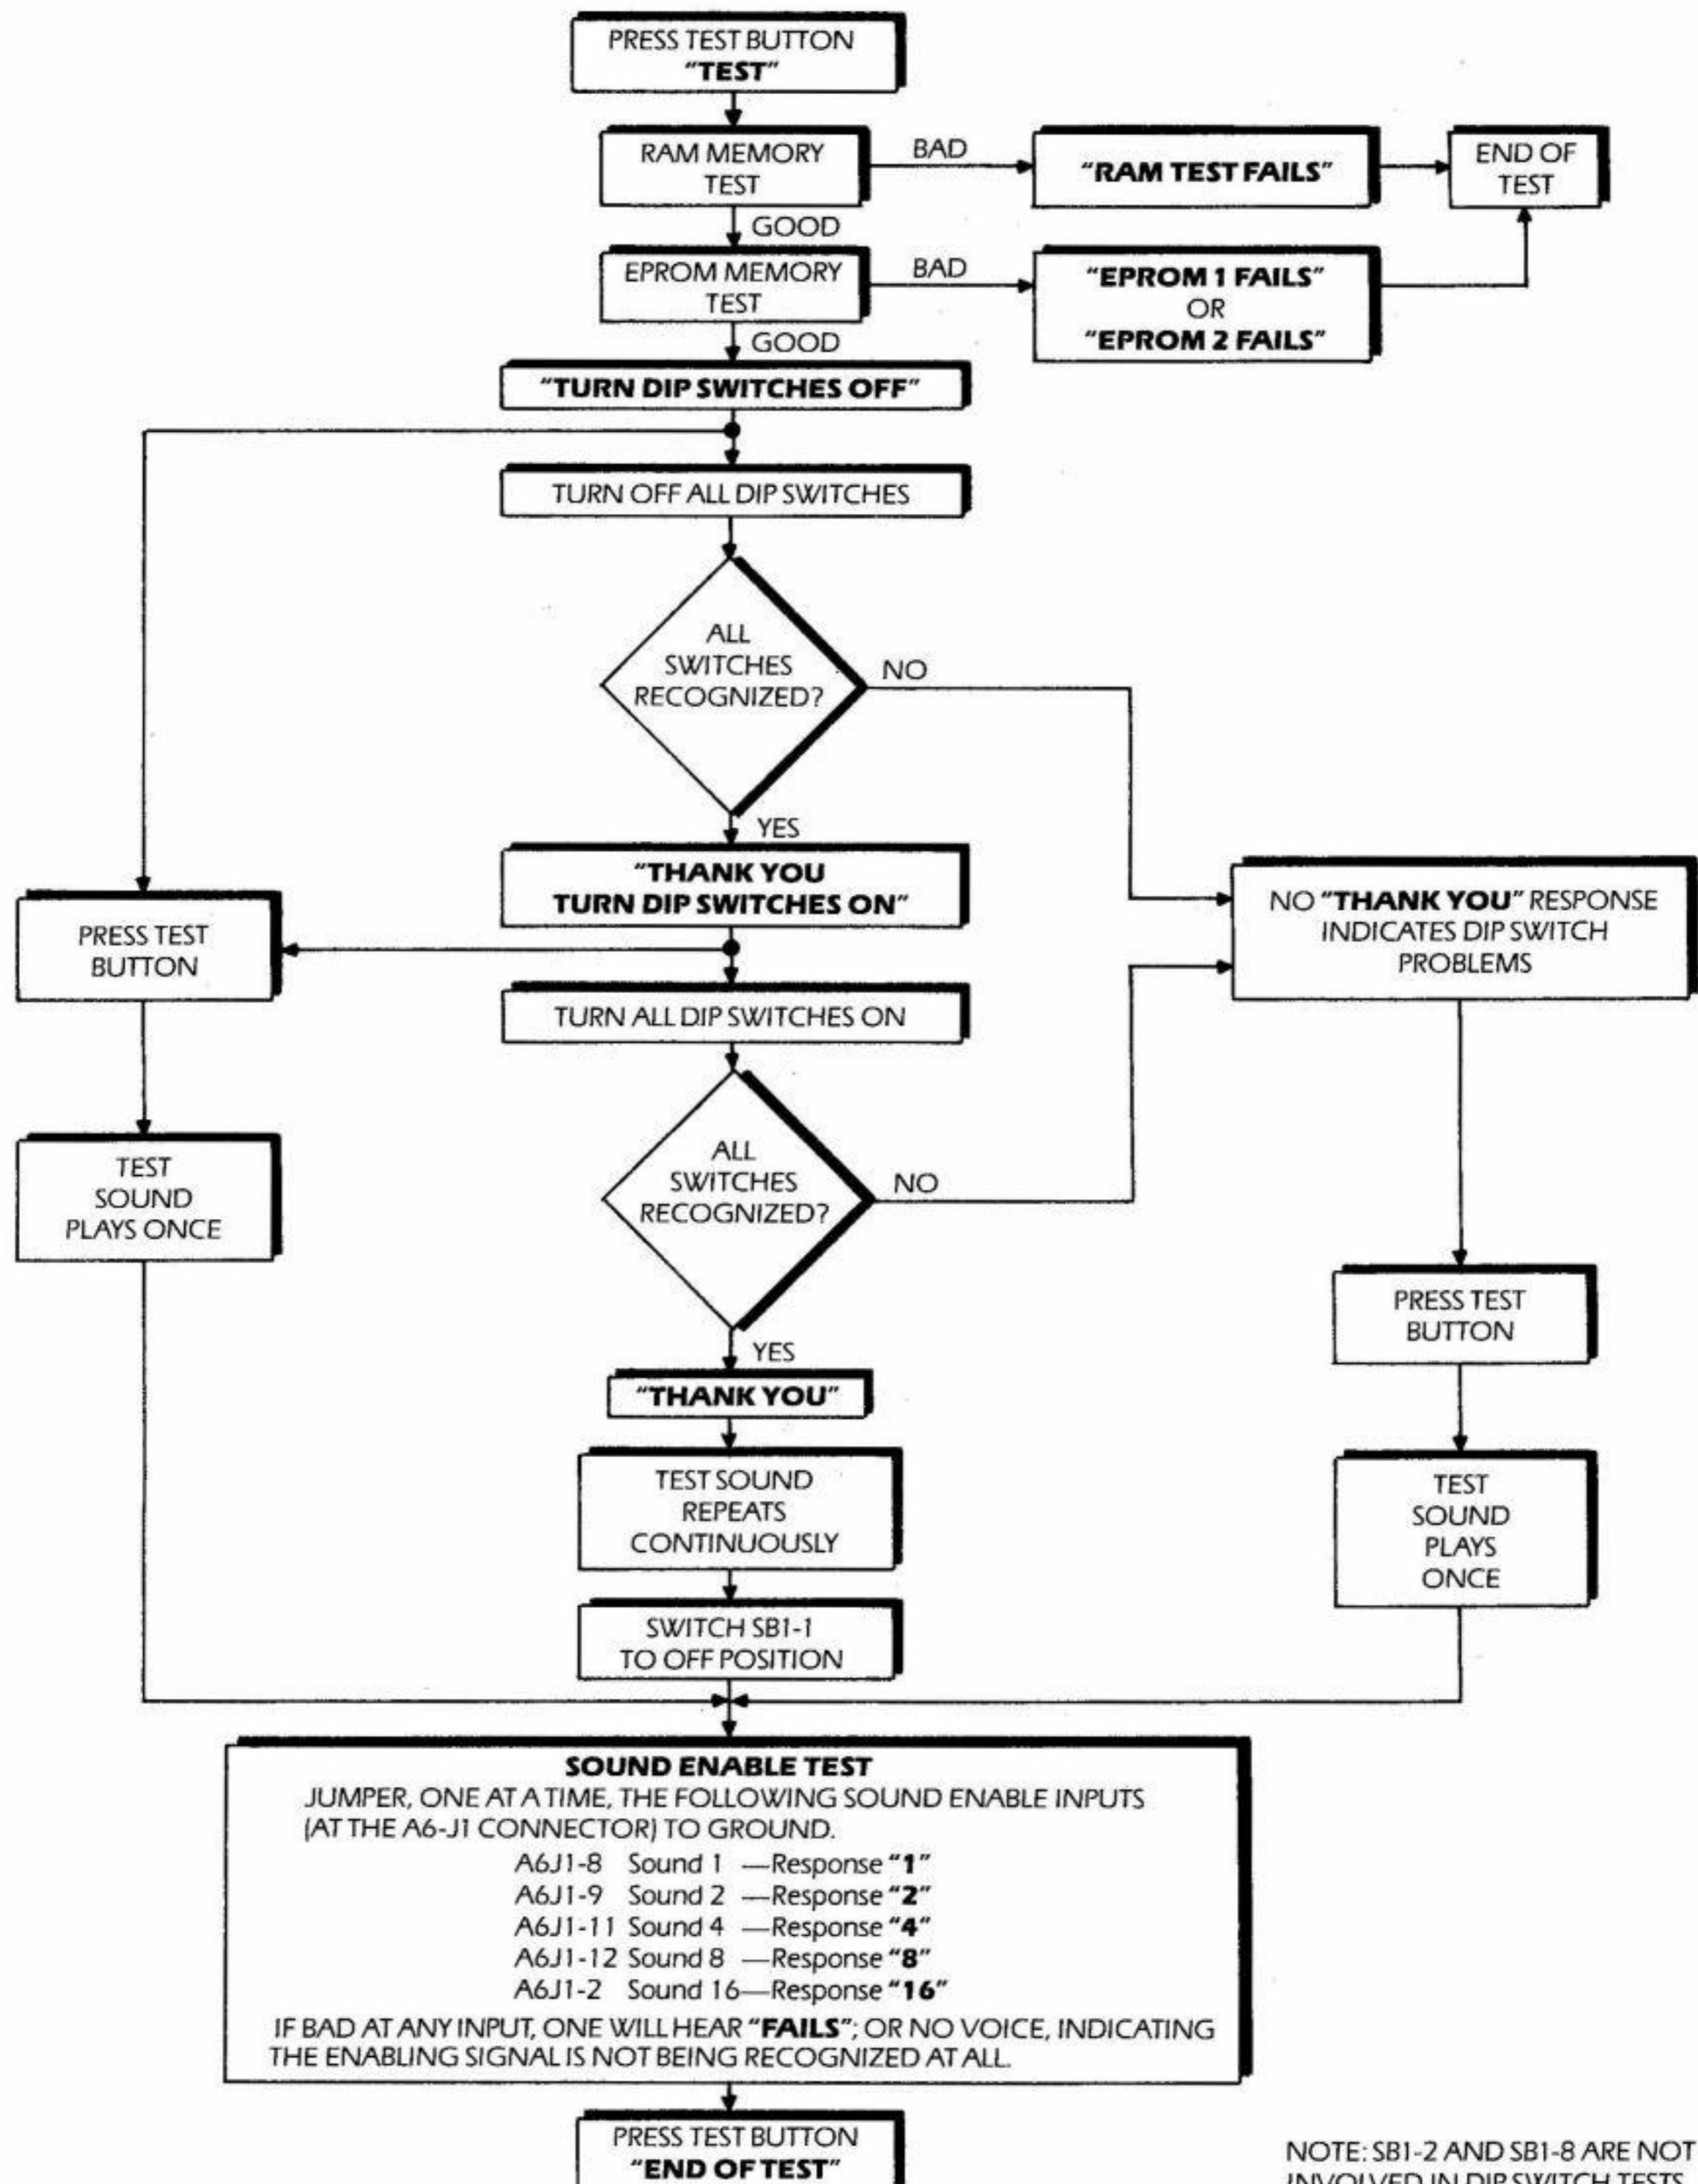


X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

TABLE OF CONTENTS

	PAGE
CONTROL BOARD (A1)	
COMPONENT LOCATION AND PARTS LIST	16
SCHEMATIC DIAGRAM	17
DRIVER BOARD (A3)	
COMPONENT LOCATION AND PARTS LIST	20
SCHEMATIC DIAGRAM	21
SPEECH/SOUND BOARD (A6)	
COMPONENT LOCATION AND PARTS LIST	23
SCHEMATIC DIAGRAM	24
AUXILIARY LAMP DRIVER BOARD (A11)	
COMPONENT LOCATION AND PARTS LIST	26
SCHEMATIC DIAGRAM	26
LIGHT BOX WIRING	27
6-DIGIT DISPLAY (A4)	
COMPONENT LOCATION AND PARTS LIST	29
SCHEMATIC DIAGRAM	29
4-DIGIT DISPLAY (A5)	
COMPONENT LOCATION AND PARTS LIST	30
SCHEMATIC DIAGRAM	30
PLAYBOARD	
PLAYBOARD INFORMATION	31
PLAYBOARD SWITCH AND LAMP ASSIGNMENTS	32
PLAYBOARD SWITCH MATRIX	33
PLAYBOARD ILLUMINATION AND SOLENOIDS	34
POP BUMPER DRIVER BOARD (A8)	
COMPONENT LOCATION AND PARTS LIST	36
SCHEMATIC DIAGRAM	36
SOUND/SPEECH BOARD (A6) POWER SUPPLY	
COMPONENT LOCATION AND PARTS LIST	36
SCHEMATIC DIAGRAM	37
BOTTOM BOARD AND CABINET SCHEMATIC	37
POWER SUPPLY (A2)	
COMPONENT LOCATION AND PARTS LIST	39
SCHEMATIC DIAGRAM	40
AUXILIARY LAMP DRIVER BOARD (A12)	
COMPONENT LOCATION AND PARTS LIST	41
SCHEMATIC DIAGRAM	41
LED DISPLAY STRIP (A13)	
COMPONENT LOCATION AND PARTS LIST	41

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

CONTROL BOARD (A1) COMPONENT LOCATION




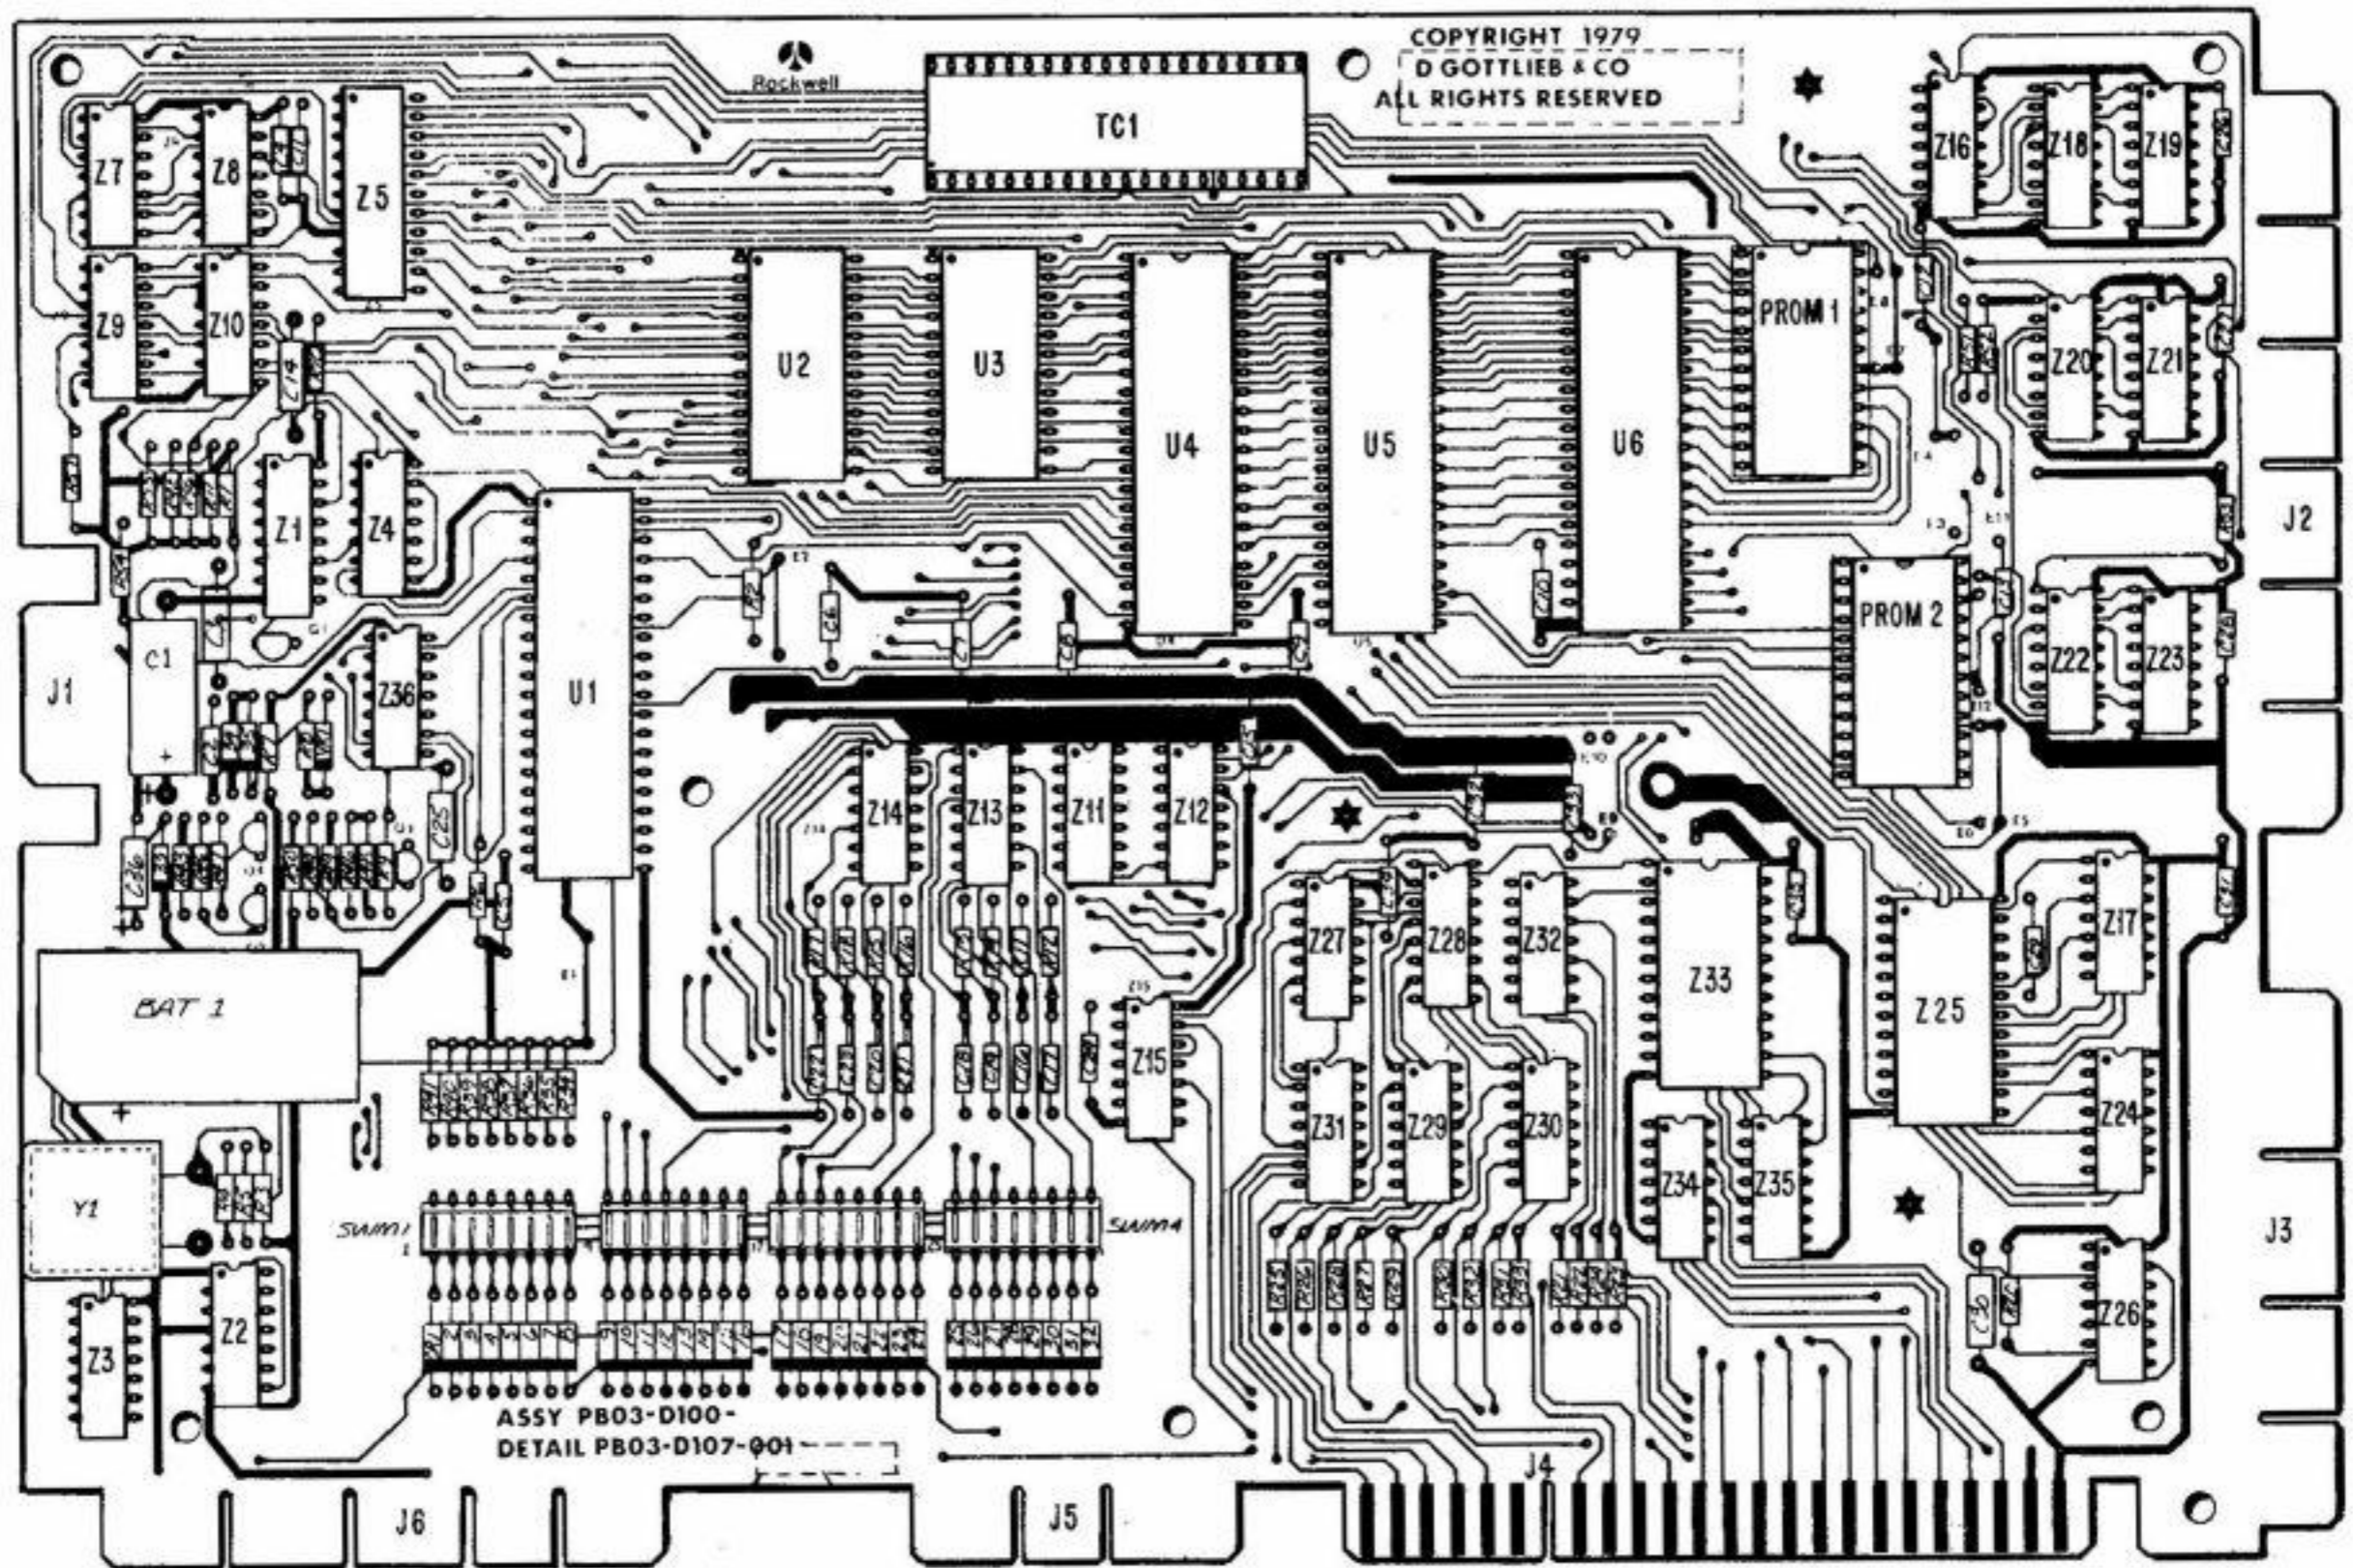


CONTROL BOARD (A1) PARTS LIST

REFERENCE	DESCRIPTION	PART NUMBER	REFERENCE	DESCRIPTION	PART NUMBER
BAT.1	Battery—3.6V	326R10-002	U3	ROM	R3272-12
C1	Capacitor, 100 mfd., 10V		U4, U5, U6	RIOT	R6532-18
C2,	Capacitor, .01 mfd., 50V		VR1	Zener Diode—3.0V, 5%	1N5225B or 1N5987B
C4-C13,			Y1	Crystal, 3.579545 MHZ	333R08-001
C15-C24,			Z1	IC—CMOS—Dual 1 Shot	SCL4528B
C26-C29,			Z2	IC—Dual Flip Flop	SN7474N
C31-C35			Z3, Z11,	IC—Hex Inverter	SN7404N
C3, C14,	Capacitor, .1 mfd., 50V		Z12, Z16,		
C25, C30			Z17, Z24,		
CR1-CR35	Diode, GP	1N4148	Z26, Z27,		
Q1, Q4	Transistor—PNP	MPS-A70	Z34, Z35		
Q2, Q3	Transistor, NPN (Motorola)	2N440	Z4	IC—CMOS—Quad 2 Input "AND"	SCL4081B
R1, R6,	Resistor, 3.0K ohm, 5%, 1/4W		Z5	IC—RAN/CMOS	P5101-L
R11-R24,			Z7	IC—Hex Inverter	SN74LS04N
R42, R45,			Z8	IC—2 Input "NOR"	SX7402N
R46, R48,			Z9, Z13,	IC—2 Input "NAND"	SN7400N
R51-R57			Z14		
R2,	Resistor, 4.7K ohm, 5%, 1/4W		Z10	IC—Open Collector Inverter	SN74LS05N
R34-R41			Z15	IC—2 Input—"OR"	SN7432N
R3, R43,	Resistor, 5.6K ohm, 5%, 1/4W		Z18, Z20	IC—"D" Flip Flop	SN74175N
R49			Z22		
R4, R5,	Resistor, 2.0K ohm, 5%, 1/4W		Z19, Z21,	IC—4 to 7 Decoder	SN7448N
R44			Z23		
R7	Resistor, 62 ohm, 5%, 1/4W		Z25, Z33	IC—4 to 16 Decoder	SN74154N
R8, R50	Resistor, 180 ohm, 5%, 1/4W		Z28	IC—2-to-4 Decoder	SN74LS139N
R9	Resistor, 1K ohm, 5%, 1/4W		Z29, Z30	IC—Hex Inverter—OC/HV	SN7416N
R10	Resistor, 2.8M ohm, 5%, 1/4W		Z31	IC—2 Input "AND"	SN7408N
R25-R33	Resistor, 620 ohm, 5%, 1/4W		Z32	IC—Hex Buffer—OC	SN7417N
R47	Resistor, 24K ohm, 5%, 1/4W		Z36	IC—CMOS	MM74C04 or
SW1-SW4	Dip Switch Pak—8 Position	341R31-005		Socket—DIL, 24 PIN	SCL4069B
TC1	Socket, 40 Pin	640379-3		Spacer, Cork	640361-3
U1	CPU	R6502-13			131R06-001
U2	ROM	R3273-12			


X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

NOTE: UNLESS OTHERWISE INDICATED;
 1. RESISTORS ARE ±5%, 1/4W.
 2. CAPACITORS ARE .01UF, 50V.
 3. DIODES ARE TYPE IN4148.
 4. REF. DESIGNATION Z6 NOT USED.

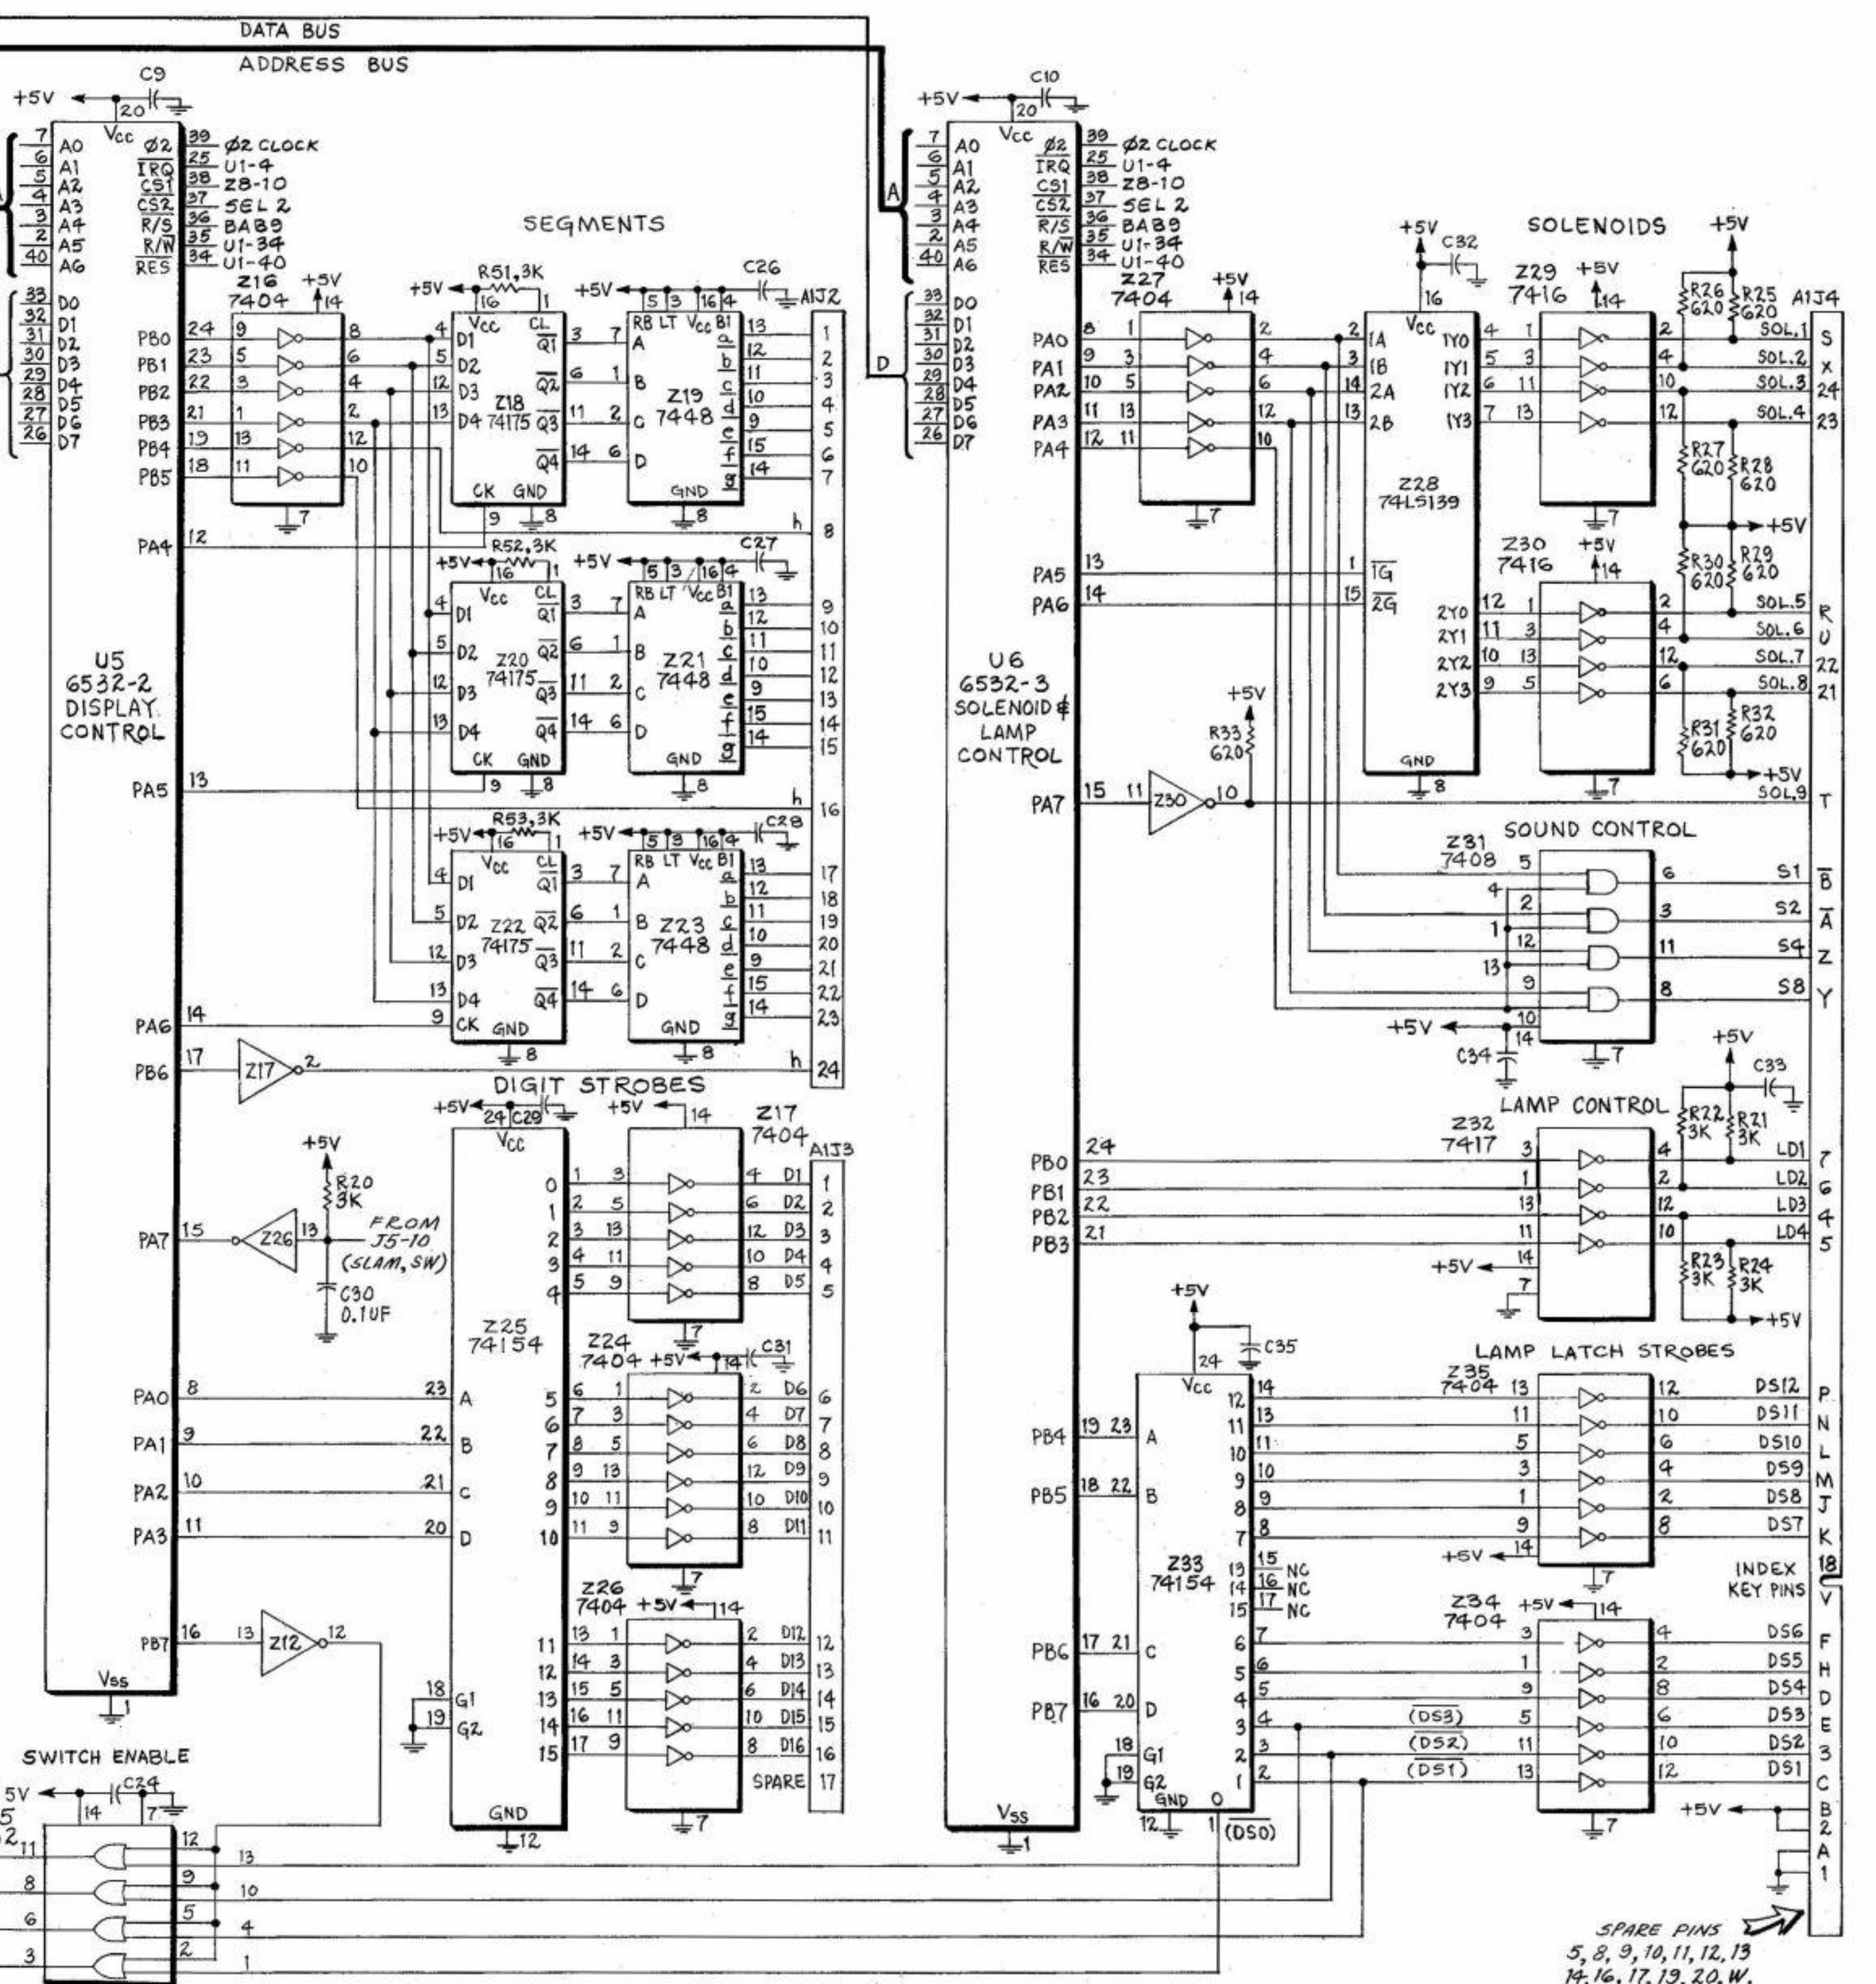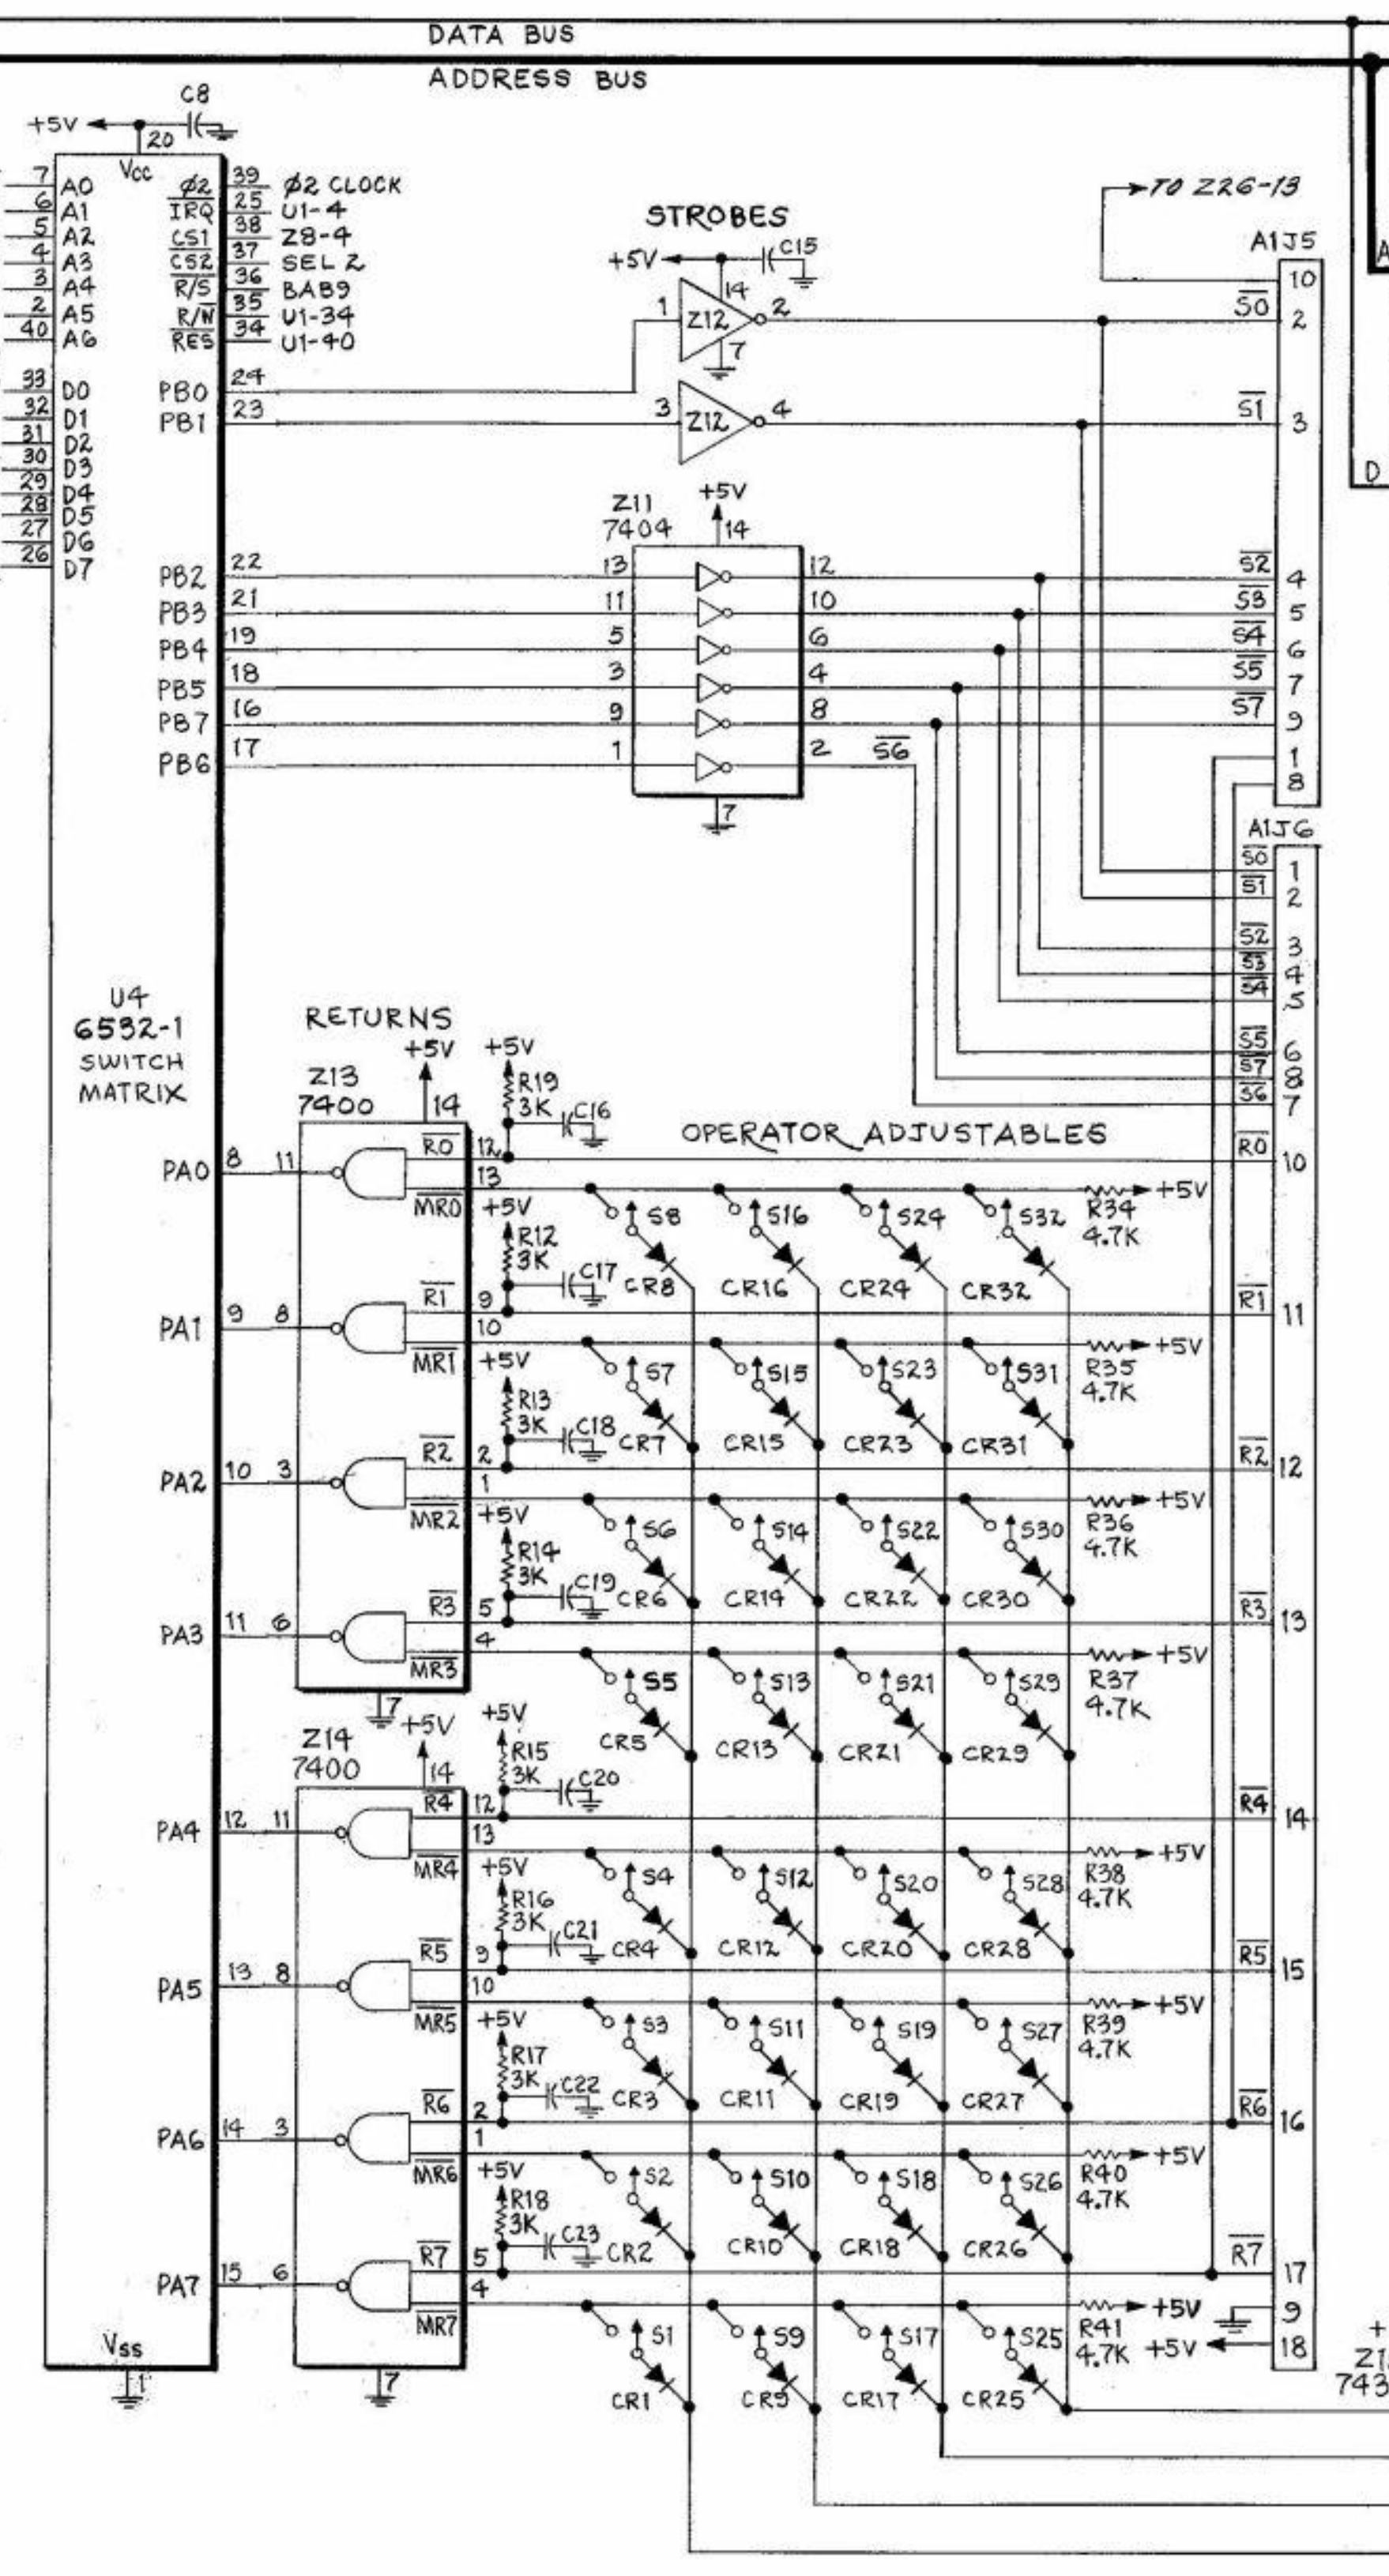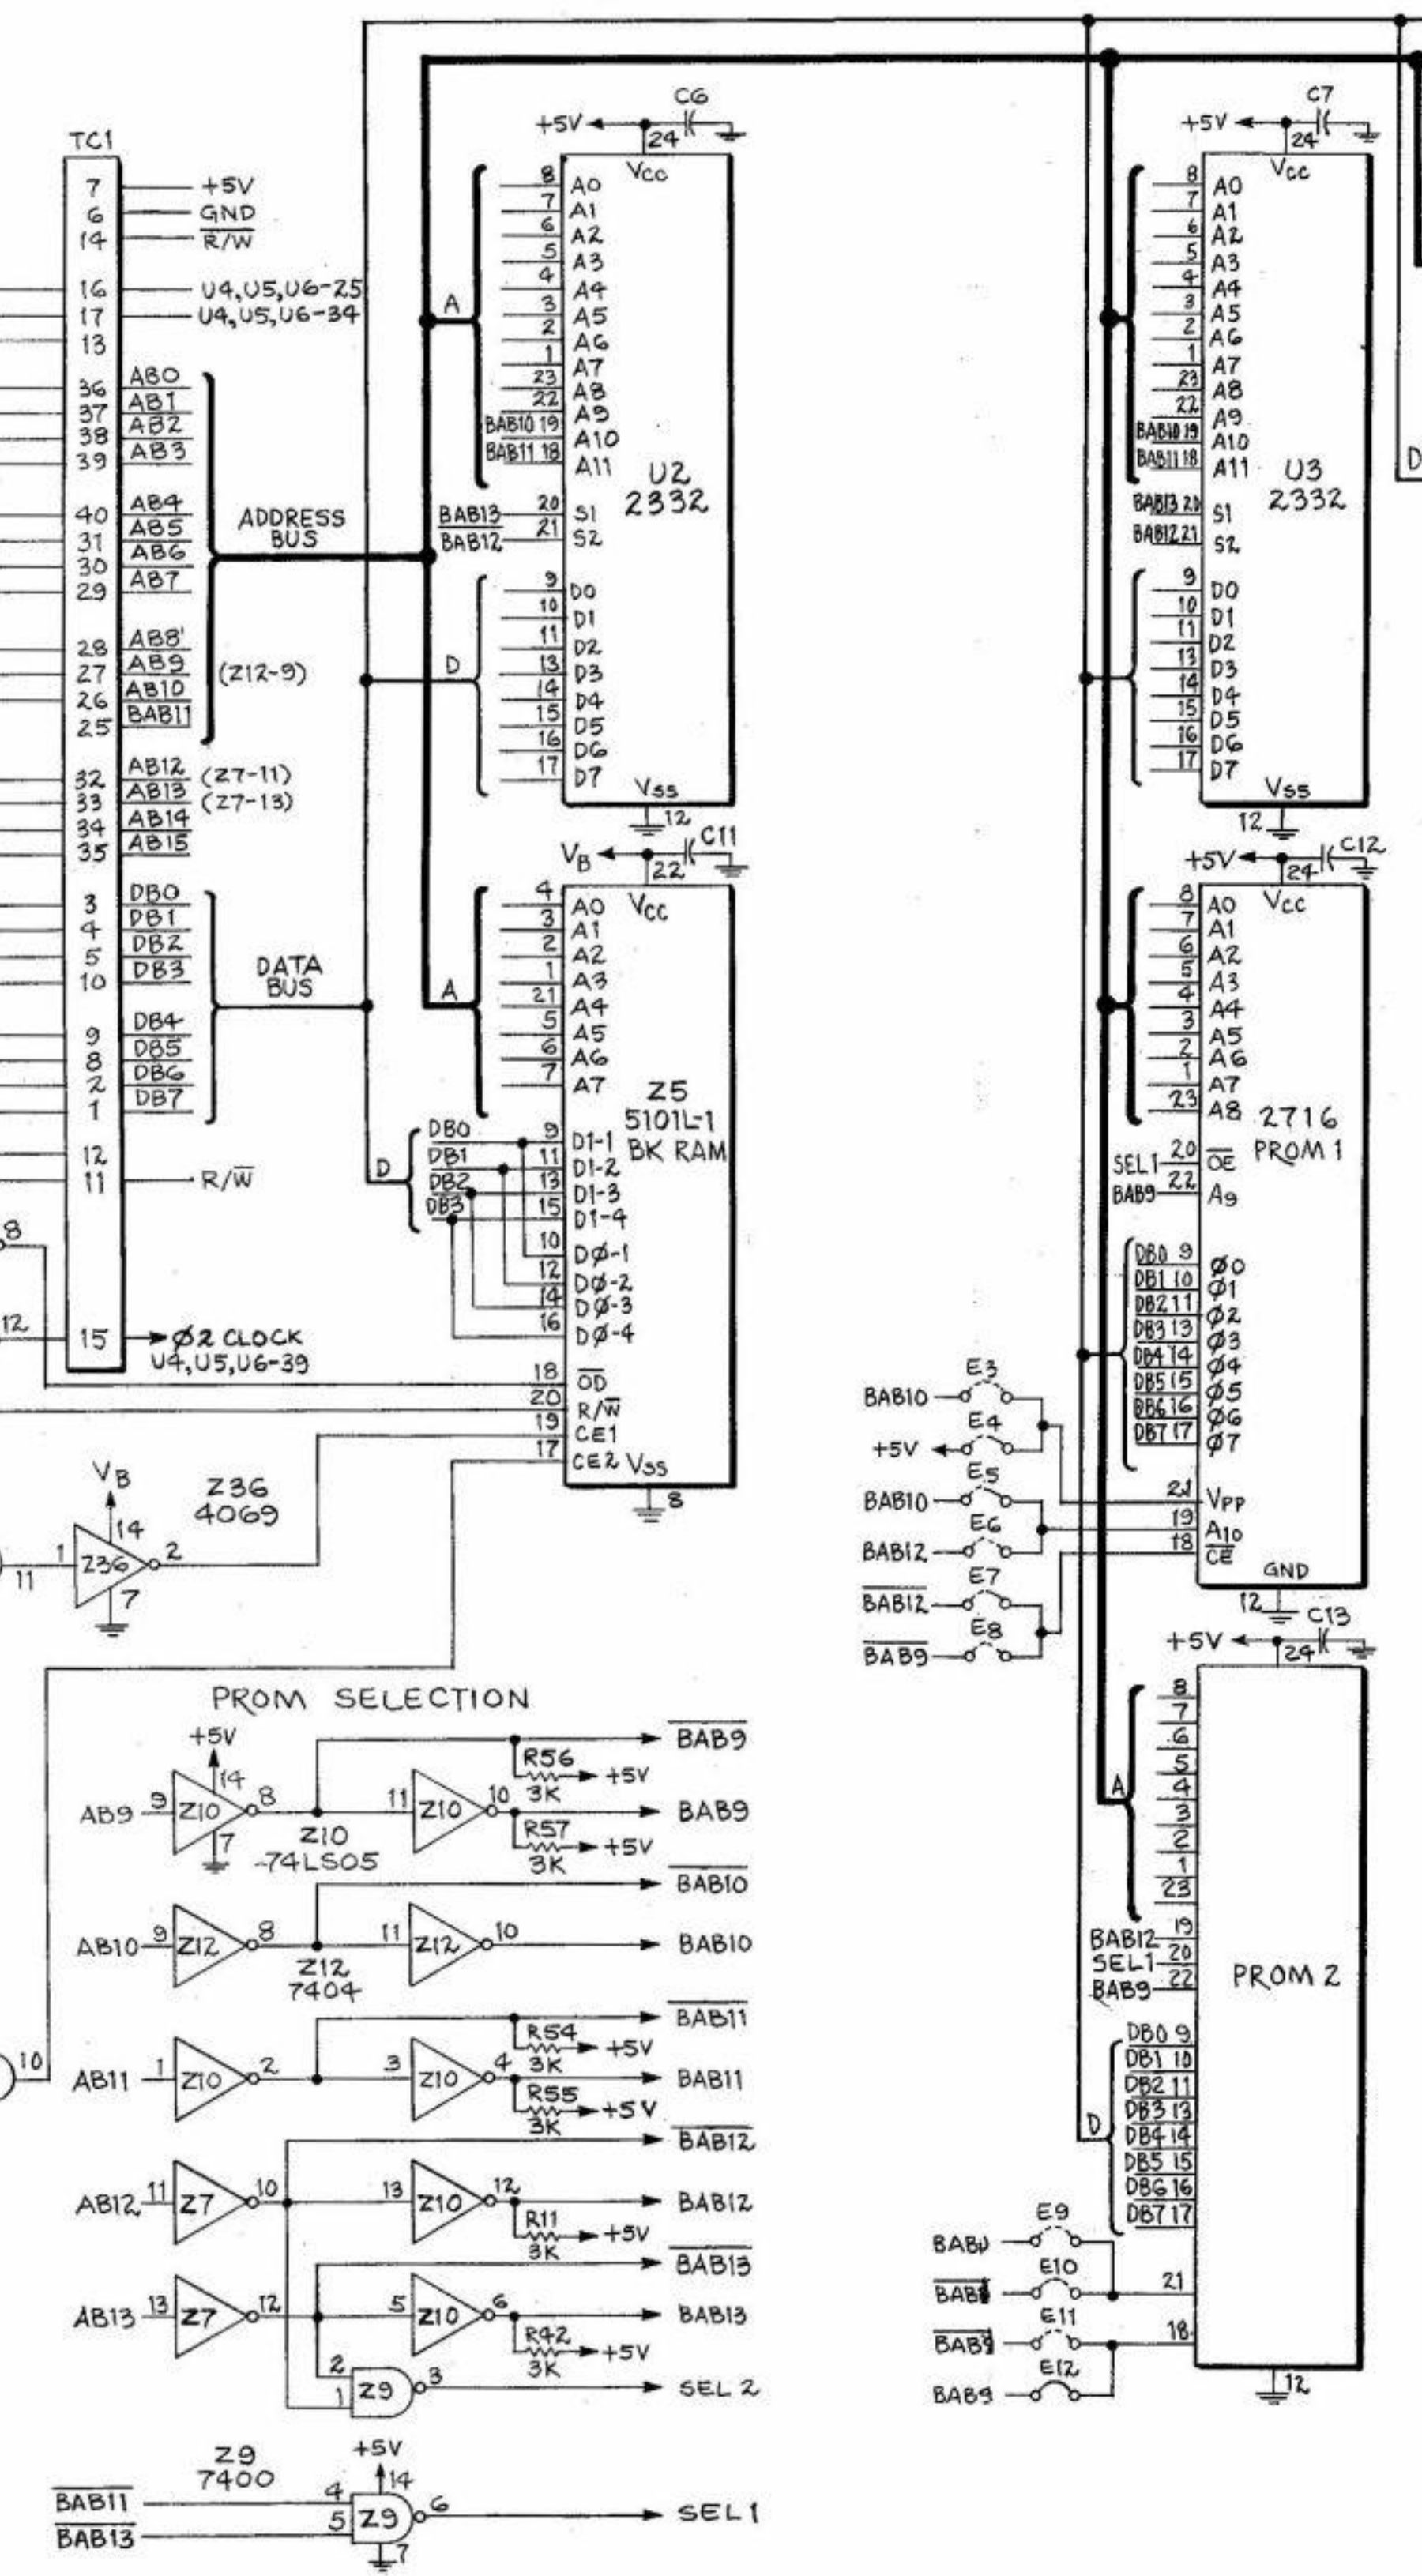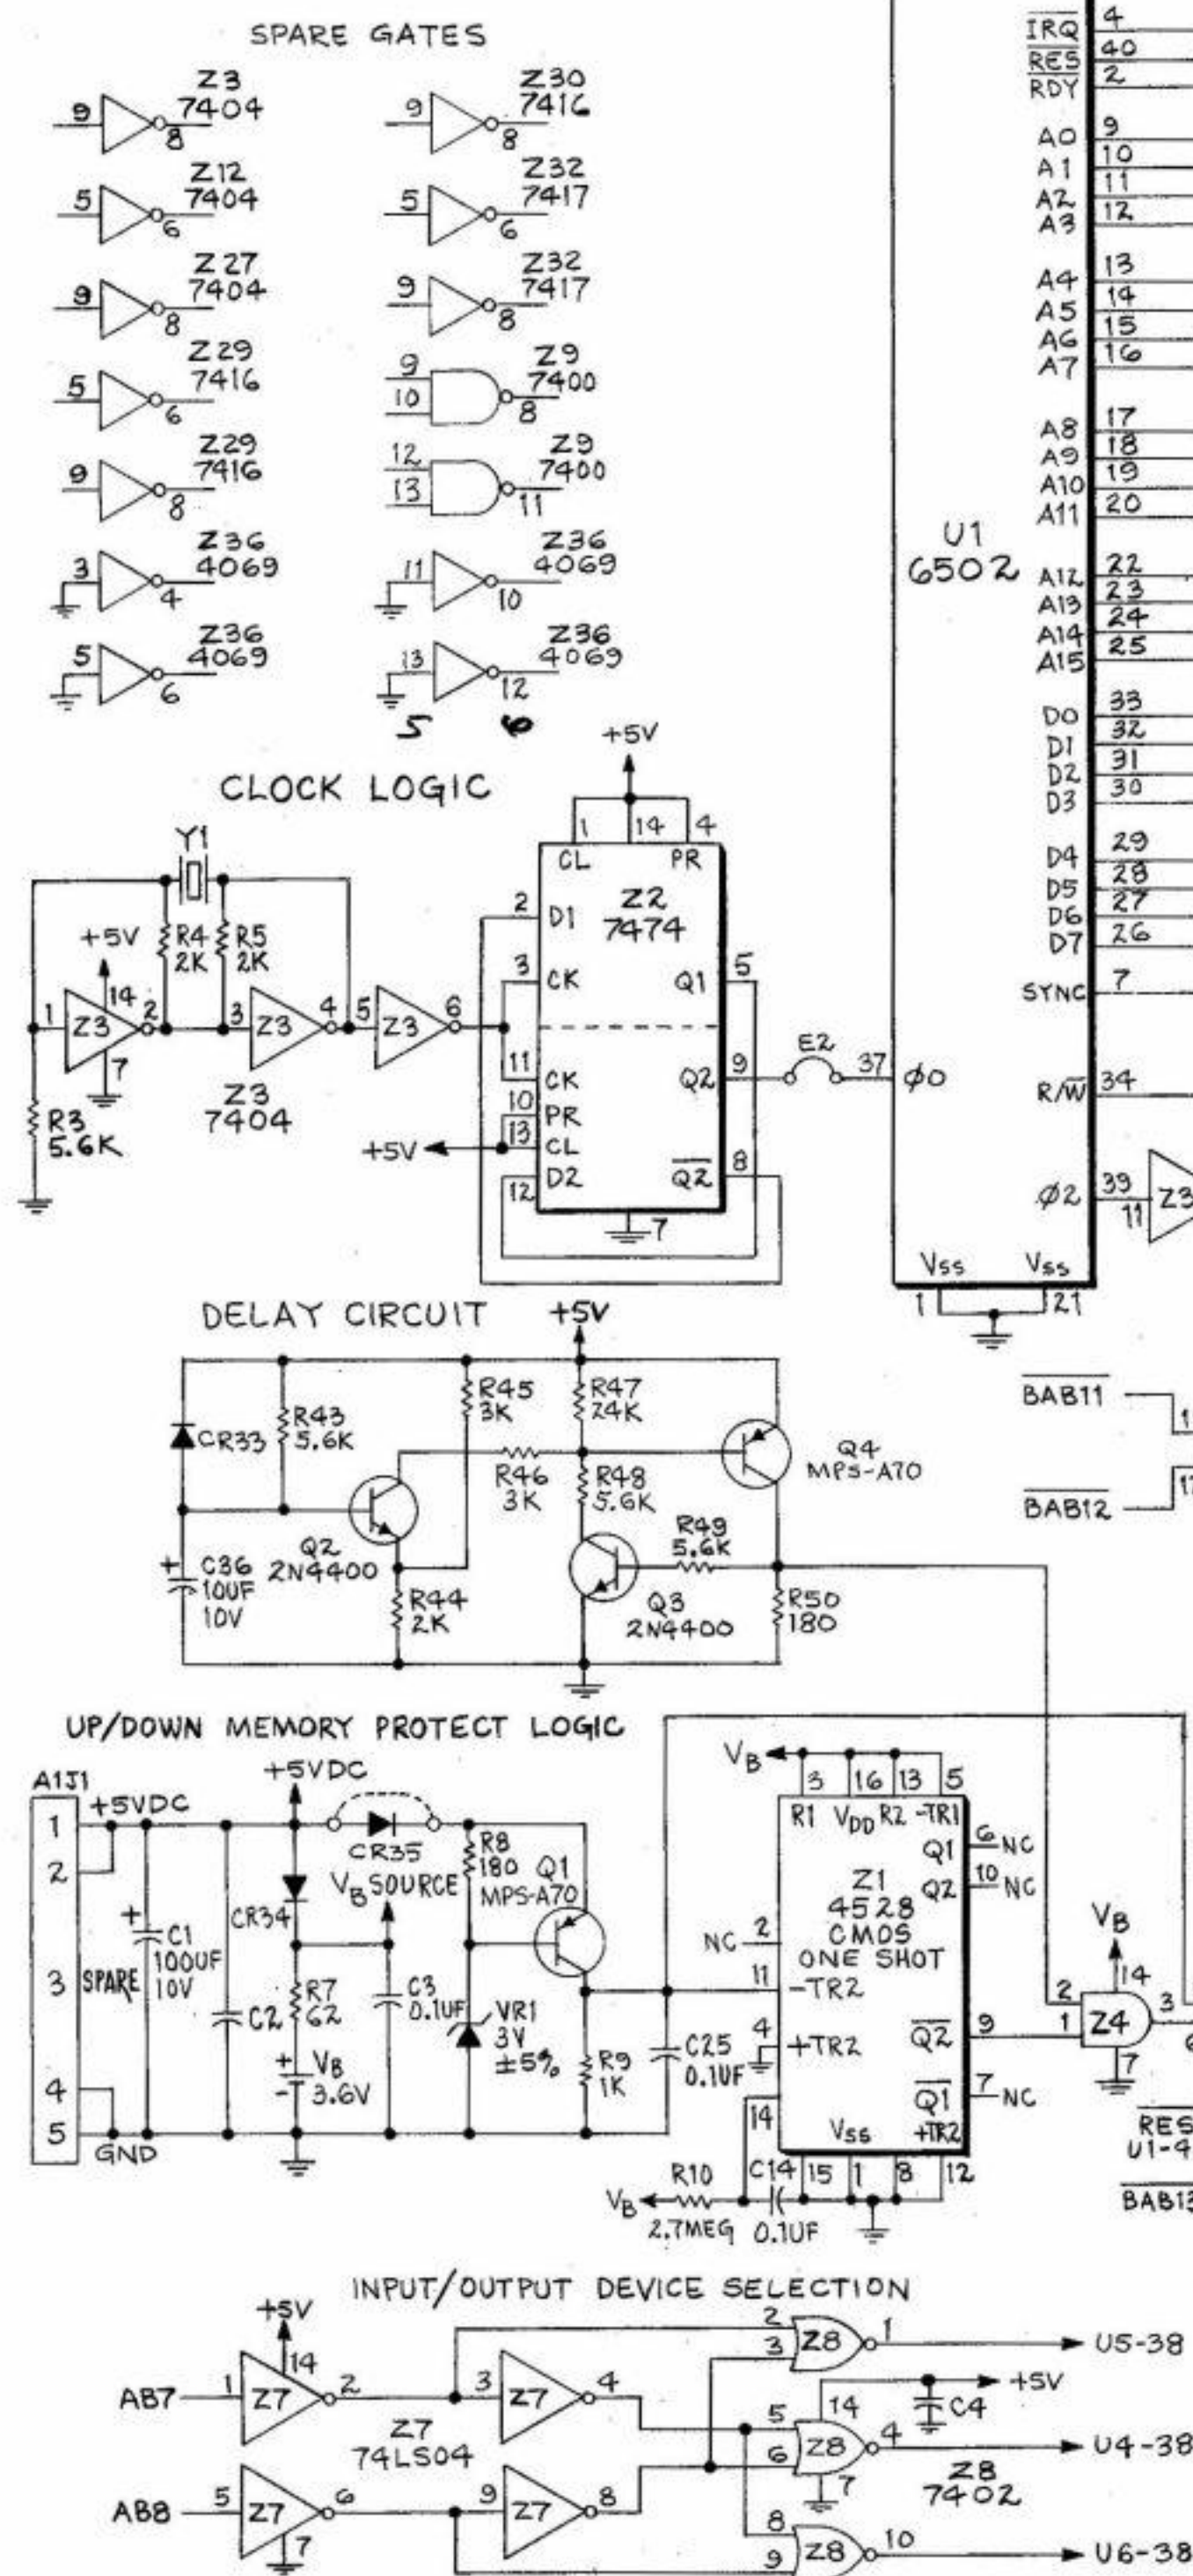

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS


DRIVER BOARD (A3) COMPONENT LOCATION

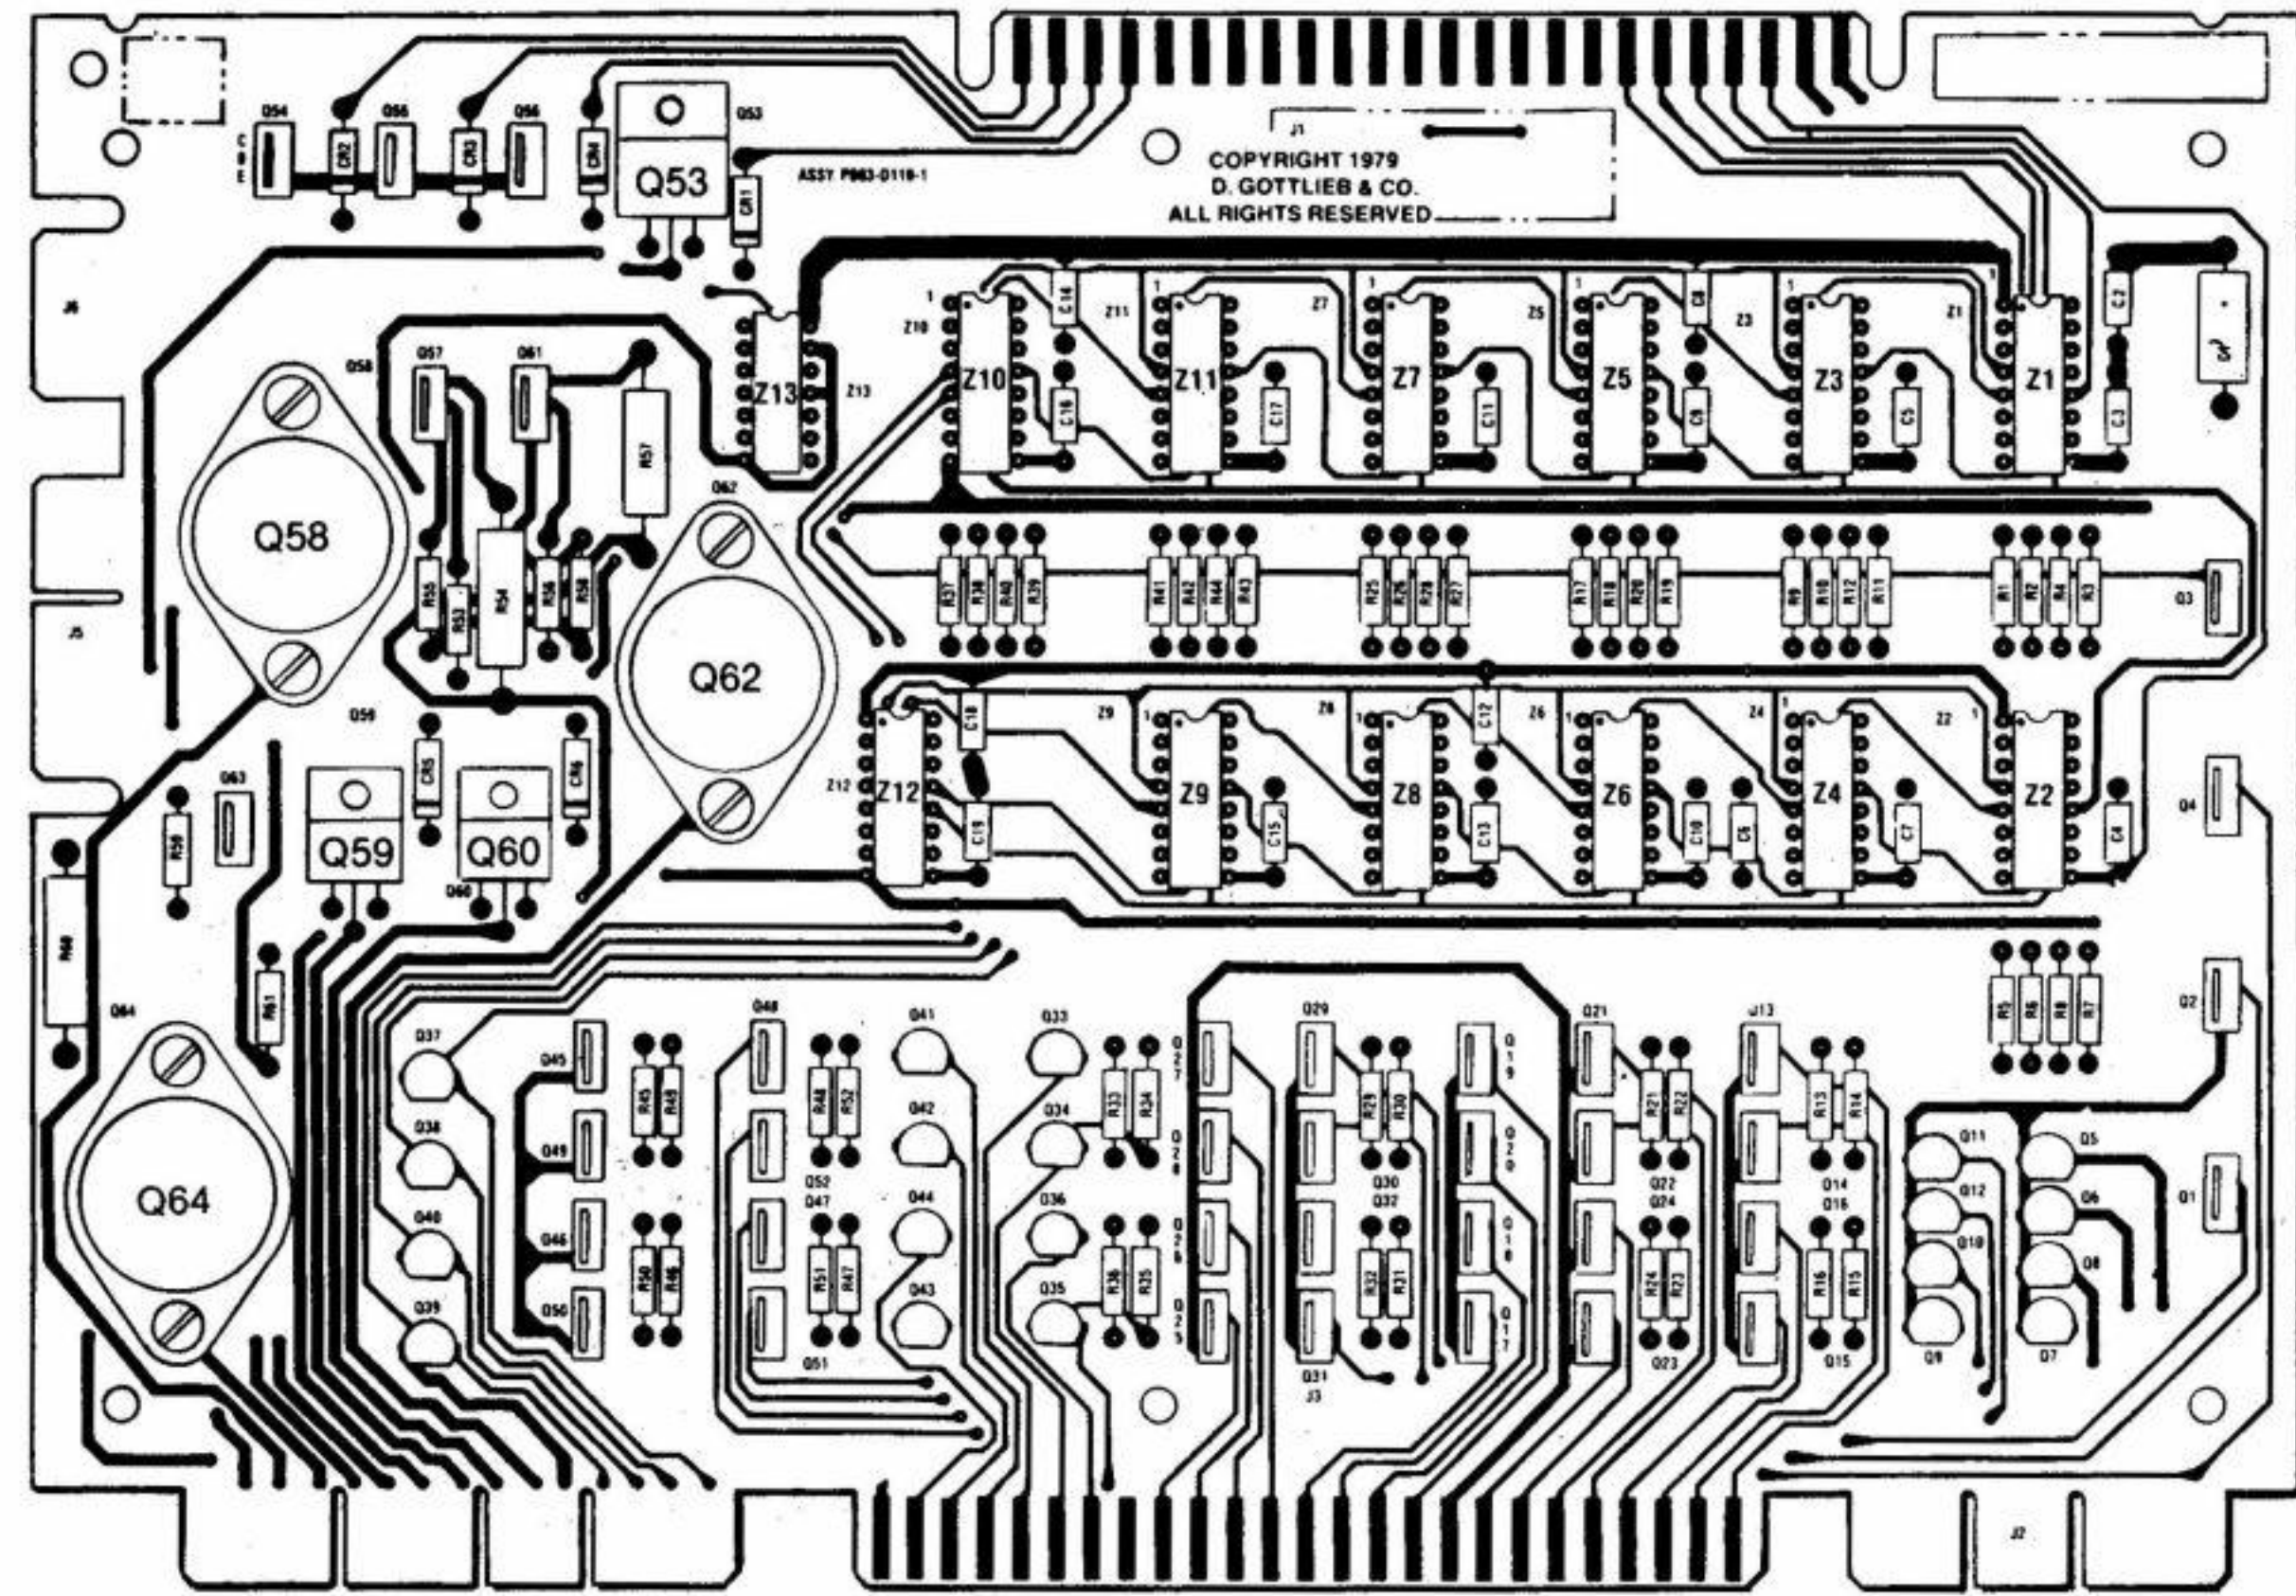

DRIVER BOARD (A3) PARTS LIST

REFERENCE	DESCRIPTION	PART NUMBER
C1	Capacitor, 10 mfd., 10V	
C2-C19	Tantalum Capacitor, .01 mfd., 50V	
CR1-CR6	Diode—Silicon	1N4148
R1-R53	Resistor, 1000 ohm, 5%, 1/4W	
R54, R55, R56, R58, R59	Resistor, 9.1 ohm, 5%, 1W	
R54, R57, R60	Resistor, 9.1 ohm, 5%, 1W	
Q1-Q4, Q13-Q32, Q45-Q52, Q54-Q57, Q63	Transistor, NPN, Darlington	MPS-U45
Q5-Q12, Q33-Q44	Transistor, NPN, Darlington	MPS-A13
Q53, Q59, Q60	Transistor, NPN, Darlington	2N6043
Q58, Q62, Q64	Transistor, NPN	2N3055
Z1-Z12	I.C. Quad "D" Latch Flip Flop	SN74175N
Z13	I.C. Hex Inverter	SN7404N
	Insulator—Thermalloy	43-03-4

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

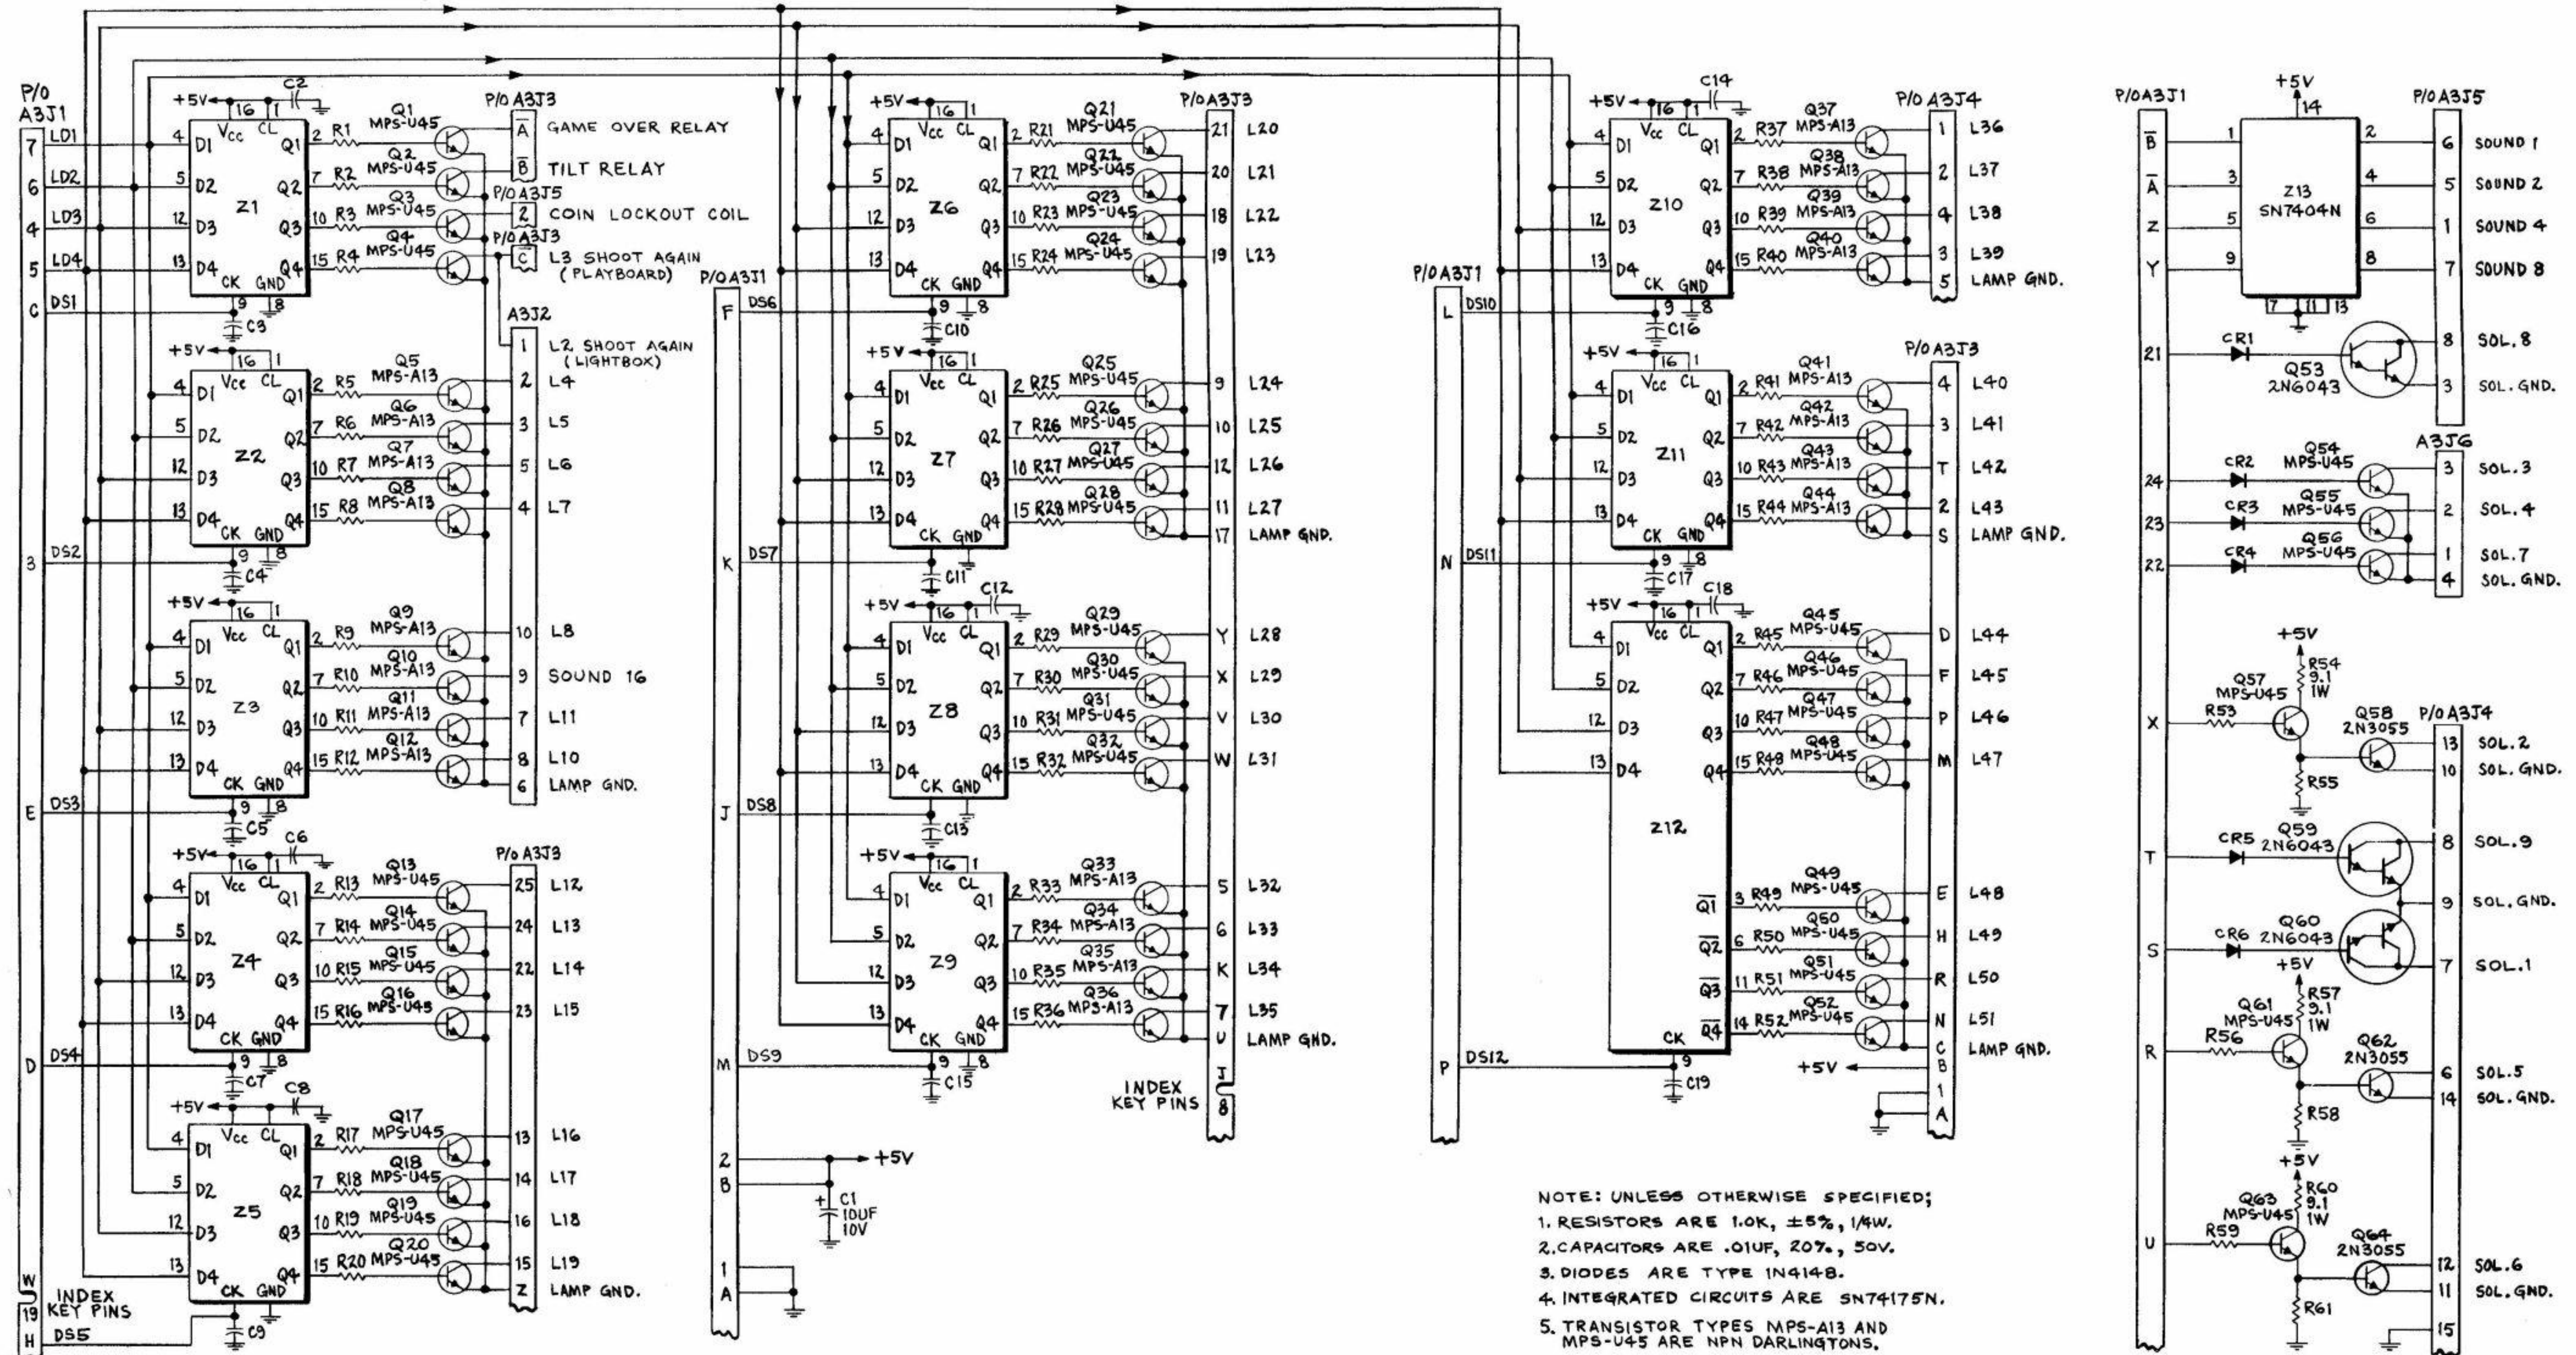


NOTE: UNLESS OTHERWISE SPECIFIED;
 1. RESISTORS ARE 1.0K, ±5%, 1/4W.
 2. CAPACITORS ARE .01UF, 20%, 50V.
 3. DIODES ARE TYPE 1N4148.
 4. INTEGRATED CIRCUITS ARE SN74175N.
 5. TRANSISTOR TYPES MPS-A13 AND MPS-U45 ARE NPN DARLINGTONS.

D. GOTTLIEB & CO.	
TITLE	DRIVER BOARD (A3)
USED ON	SYSTEM 80
DRAWN	APPROVED DATE
8/2/80	12/12/80
	E-20915

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS


SOUND/SPEECH BOARD (A6) COMPONENT LOCATION

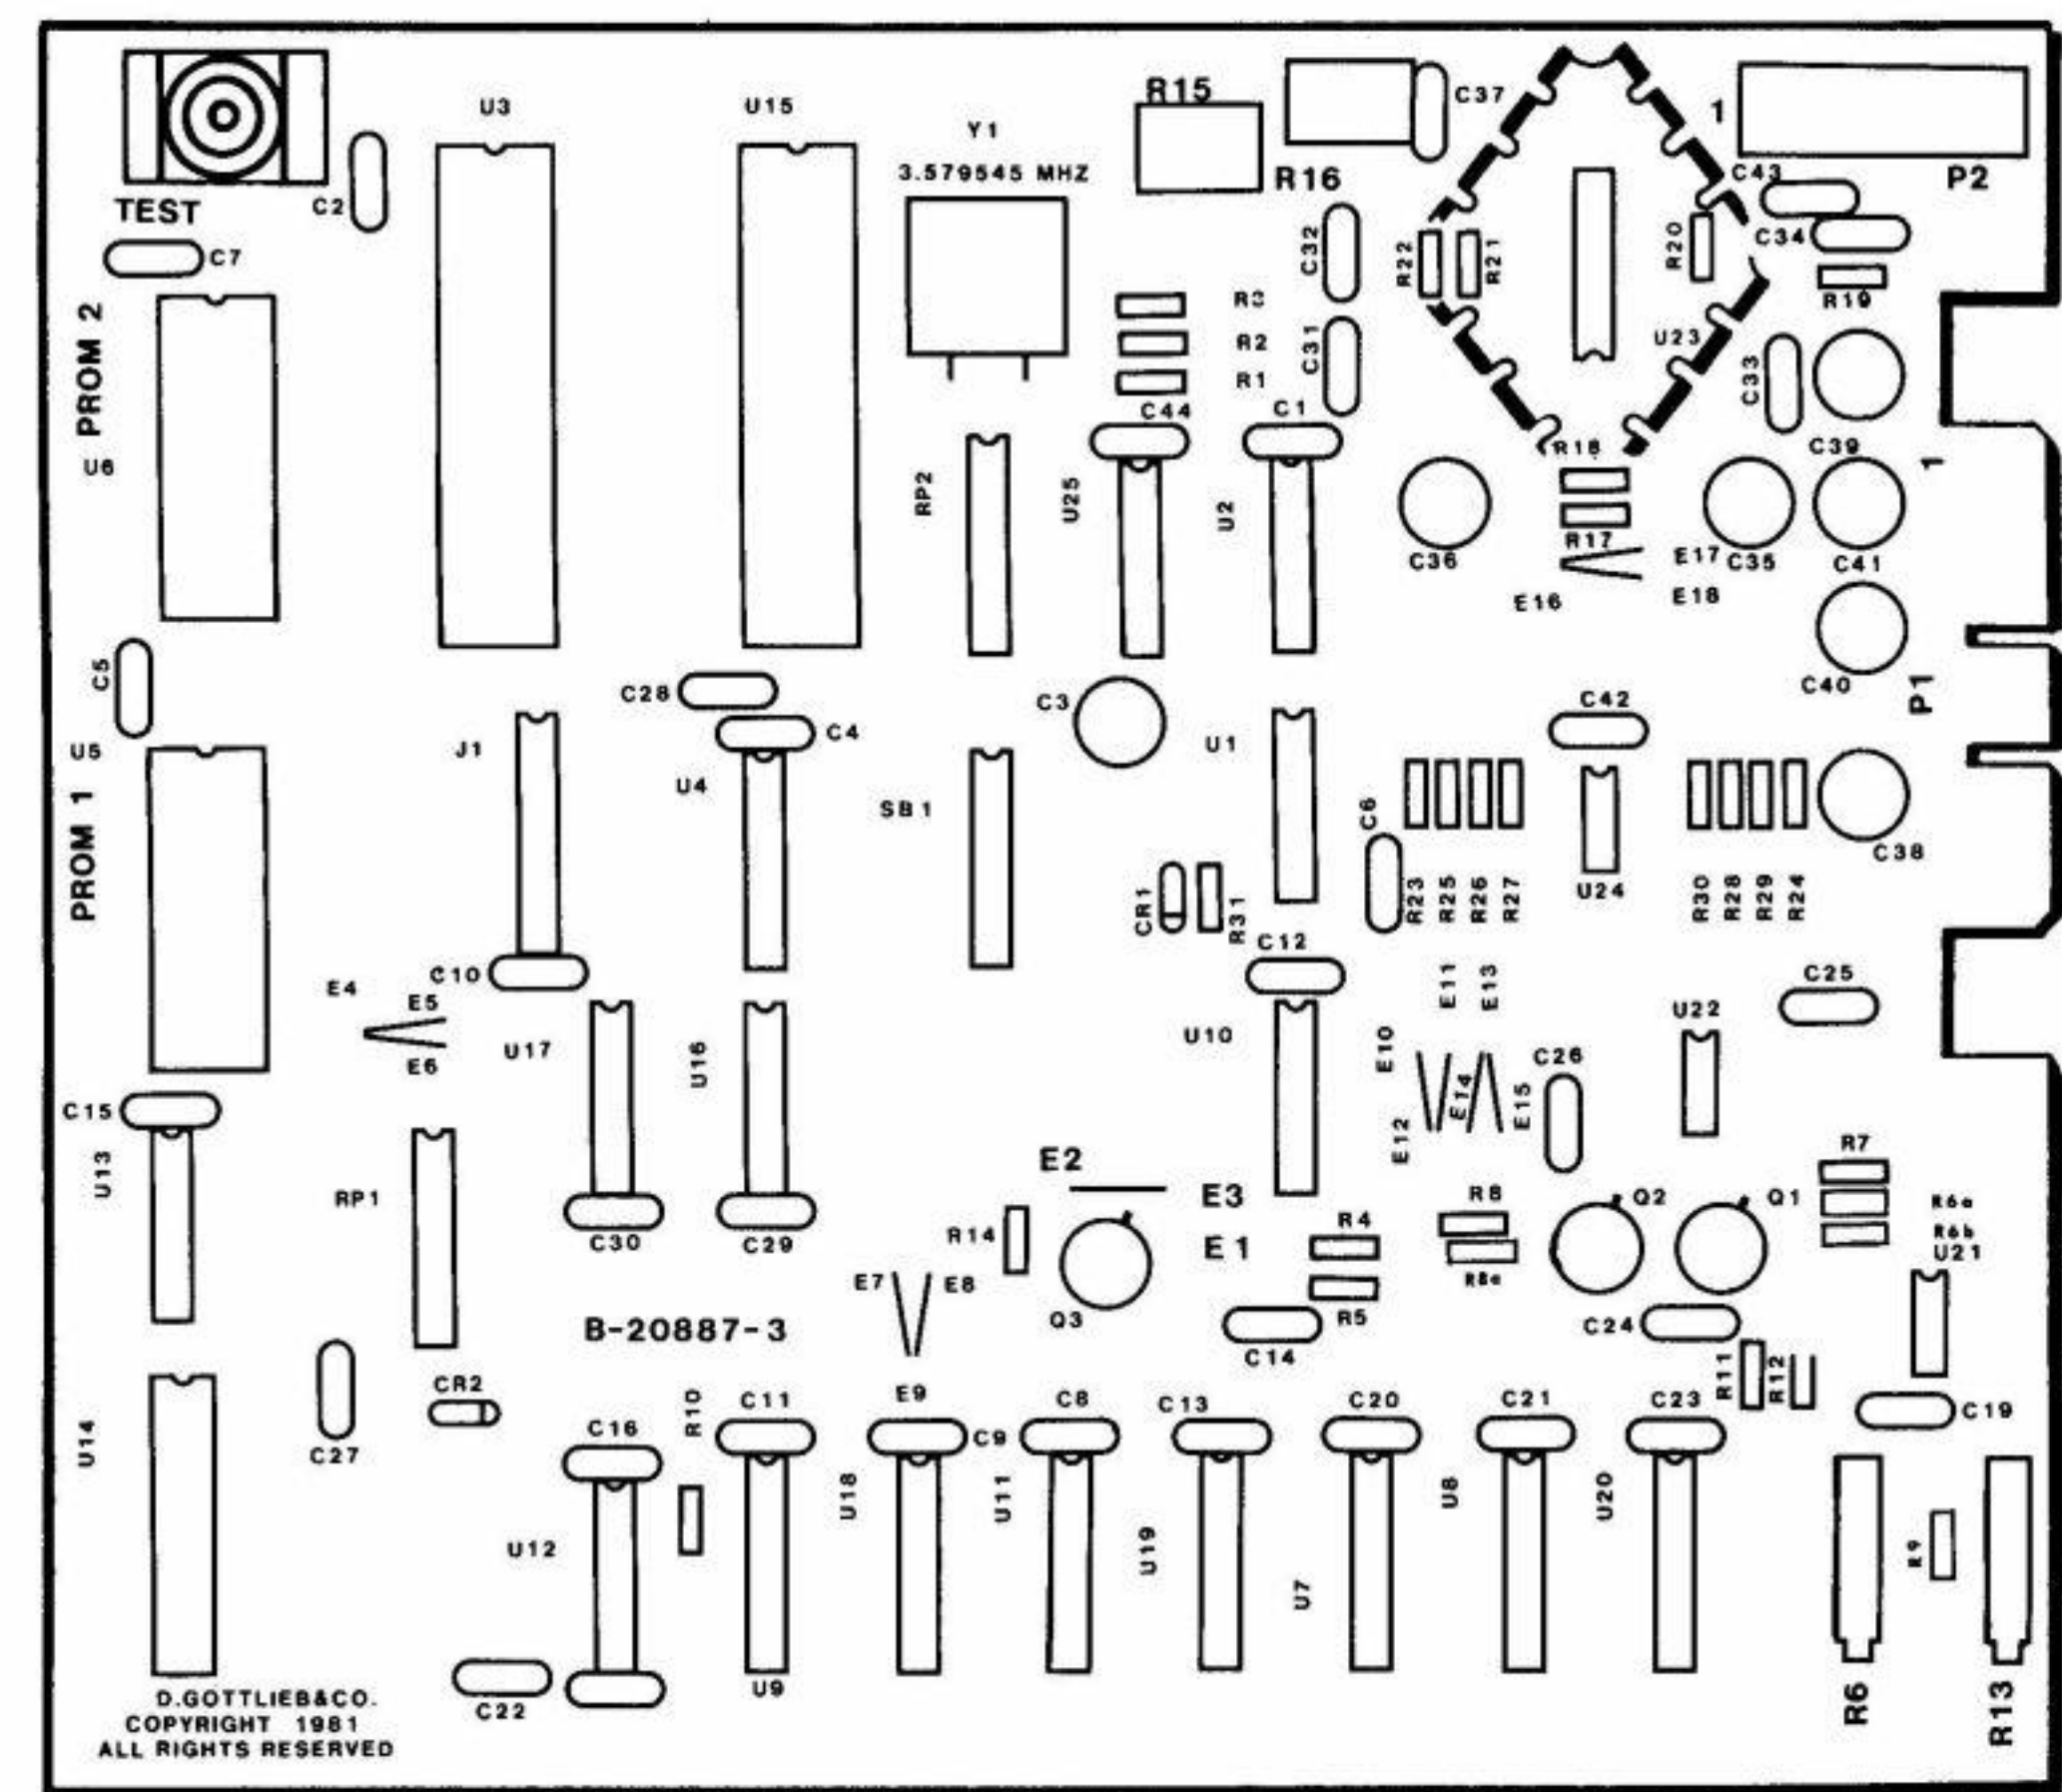


SOUND/SPEECH BOARD (A6) PARTS LIST

REFERENCE	DESCRIPTION	PART NUMBER	REFERENCE	DESCRIPTION	PART NUMBER
C1, C2	Capacitor, .1 UF 25V, CMD		R18, R21	Resistor, 100K ohm, 1/4W	
C4-C13			R22	Resistor, 2K ohm, 1/4W, 5%	
C15, C16			R23-R30	Resistor, 10K ohm, 1/4W	
C19, C20			R31	Resistor, 3.3K ohm, 1/4W, 5%	
C21			RP1, RP2	Resistor, Dip	4116R-002-222
C23, C25, C26			SB1	Dip Switch	1008-692
C29, C30			SW1	Moment Pushbutton Switch	
C28			U1	IC, Trigger	7414
C31-C32	Capacitor, 0.05 MF, 25V, CMD		U2	IC	SN74LS74N
C42, C44			U3	CPU	R6502-13
C37	Capacitor, 4.7 MF, 25V Tantalum		U4	IC	SN74LS138N
C3, C38-C41	Capacitor, 47 MF, 50V		U5, U6	E Prom	2716
C14, C24	Capacitor, 100 PF, 250V, 20%		U7-U9, U11, U18	IC	SN74LS75
C22	Capacitor, 300 PF, CMD		U10	IC	SN74LS02N
C27	Capacitor, 1 UF, 50V, TNT		U12	IC	SN7407N
C36	Capacitor, 470 MF, 35V		U13	IC, Inverter	SN74LS05N
CR1	Diode	1N4148	U14 not used	Voice Chip	SC01
CR2	Diode, Zener	1N5225B		RR10T	R6532-18
O1, O3	Transistor, NPN	2N2222A	U16	IC	SN74LS04N
O2	Transistor, PNP	2N2907A	U17	IC	SN74LS30N
R1, R4, R5, R11, R12	Resistor, 5.6K ohm, 1/4W		U19, U20	Converter, PMI	1408A-6P
R2, R3	Resistor, 2K ohm, 1/4W, 5%		U21, U22	IC	LM741CP
R6, R13	Potentiometer, 10K, Bourns	3006-103	U23	IC	LM379S
R7	Resistor, 10K ohm, 1/4W, 5%		U24	IC, Dual Comparator	LM193
R8, RBA, R14	Resistor, 1K ohm, 1/4W, 5%		U25	Inverter	7404
R6A, R6B	Resistor, 1.8K ohm, 5%, 1/4 watt		Y1	Crystal, 3.579545 MHZ	
R9	Resistor, 2.2K ohm, 5%, 1/4W			Socket 22 Pin Dip	640361-3
R10	Resistor, 1.5K ohm, 1/4W, 5%			Socket 40 Pin [2]	640379-3
R15, R16	Potentiometer, 10K, CTS	X201R			


X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

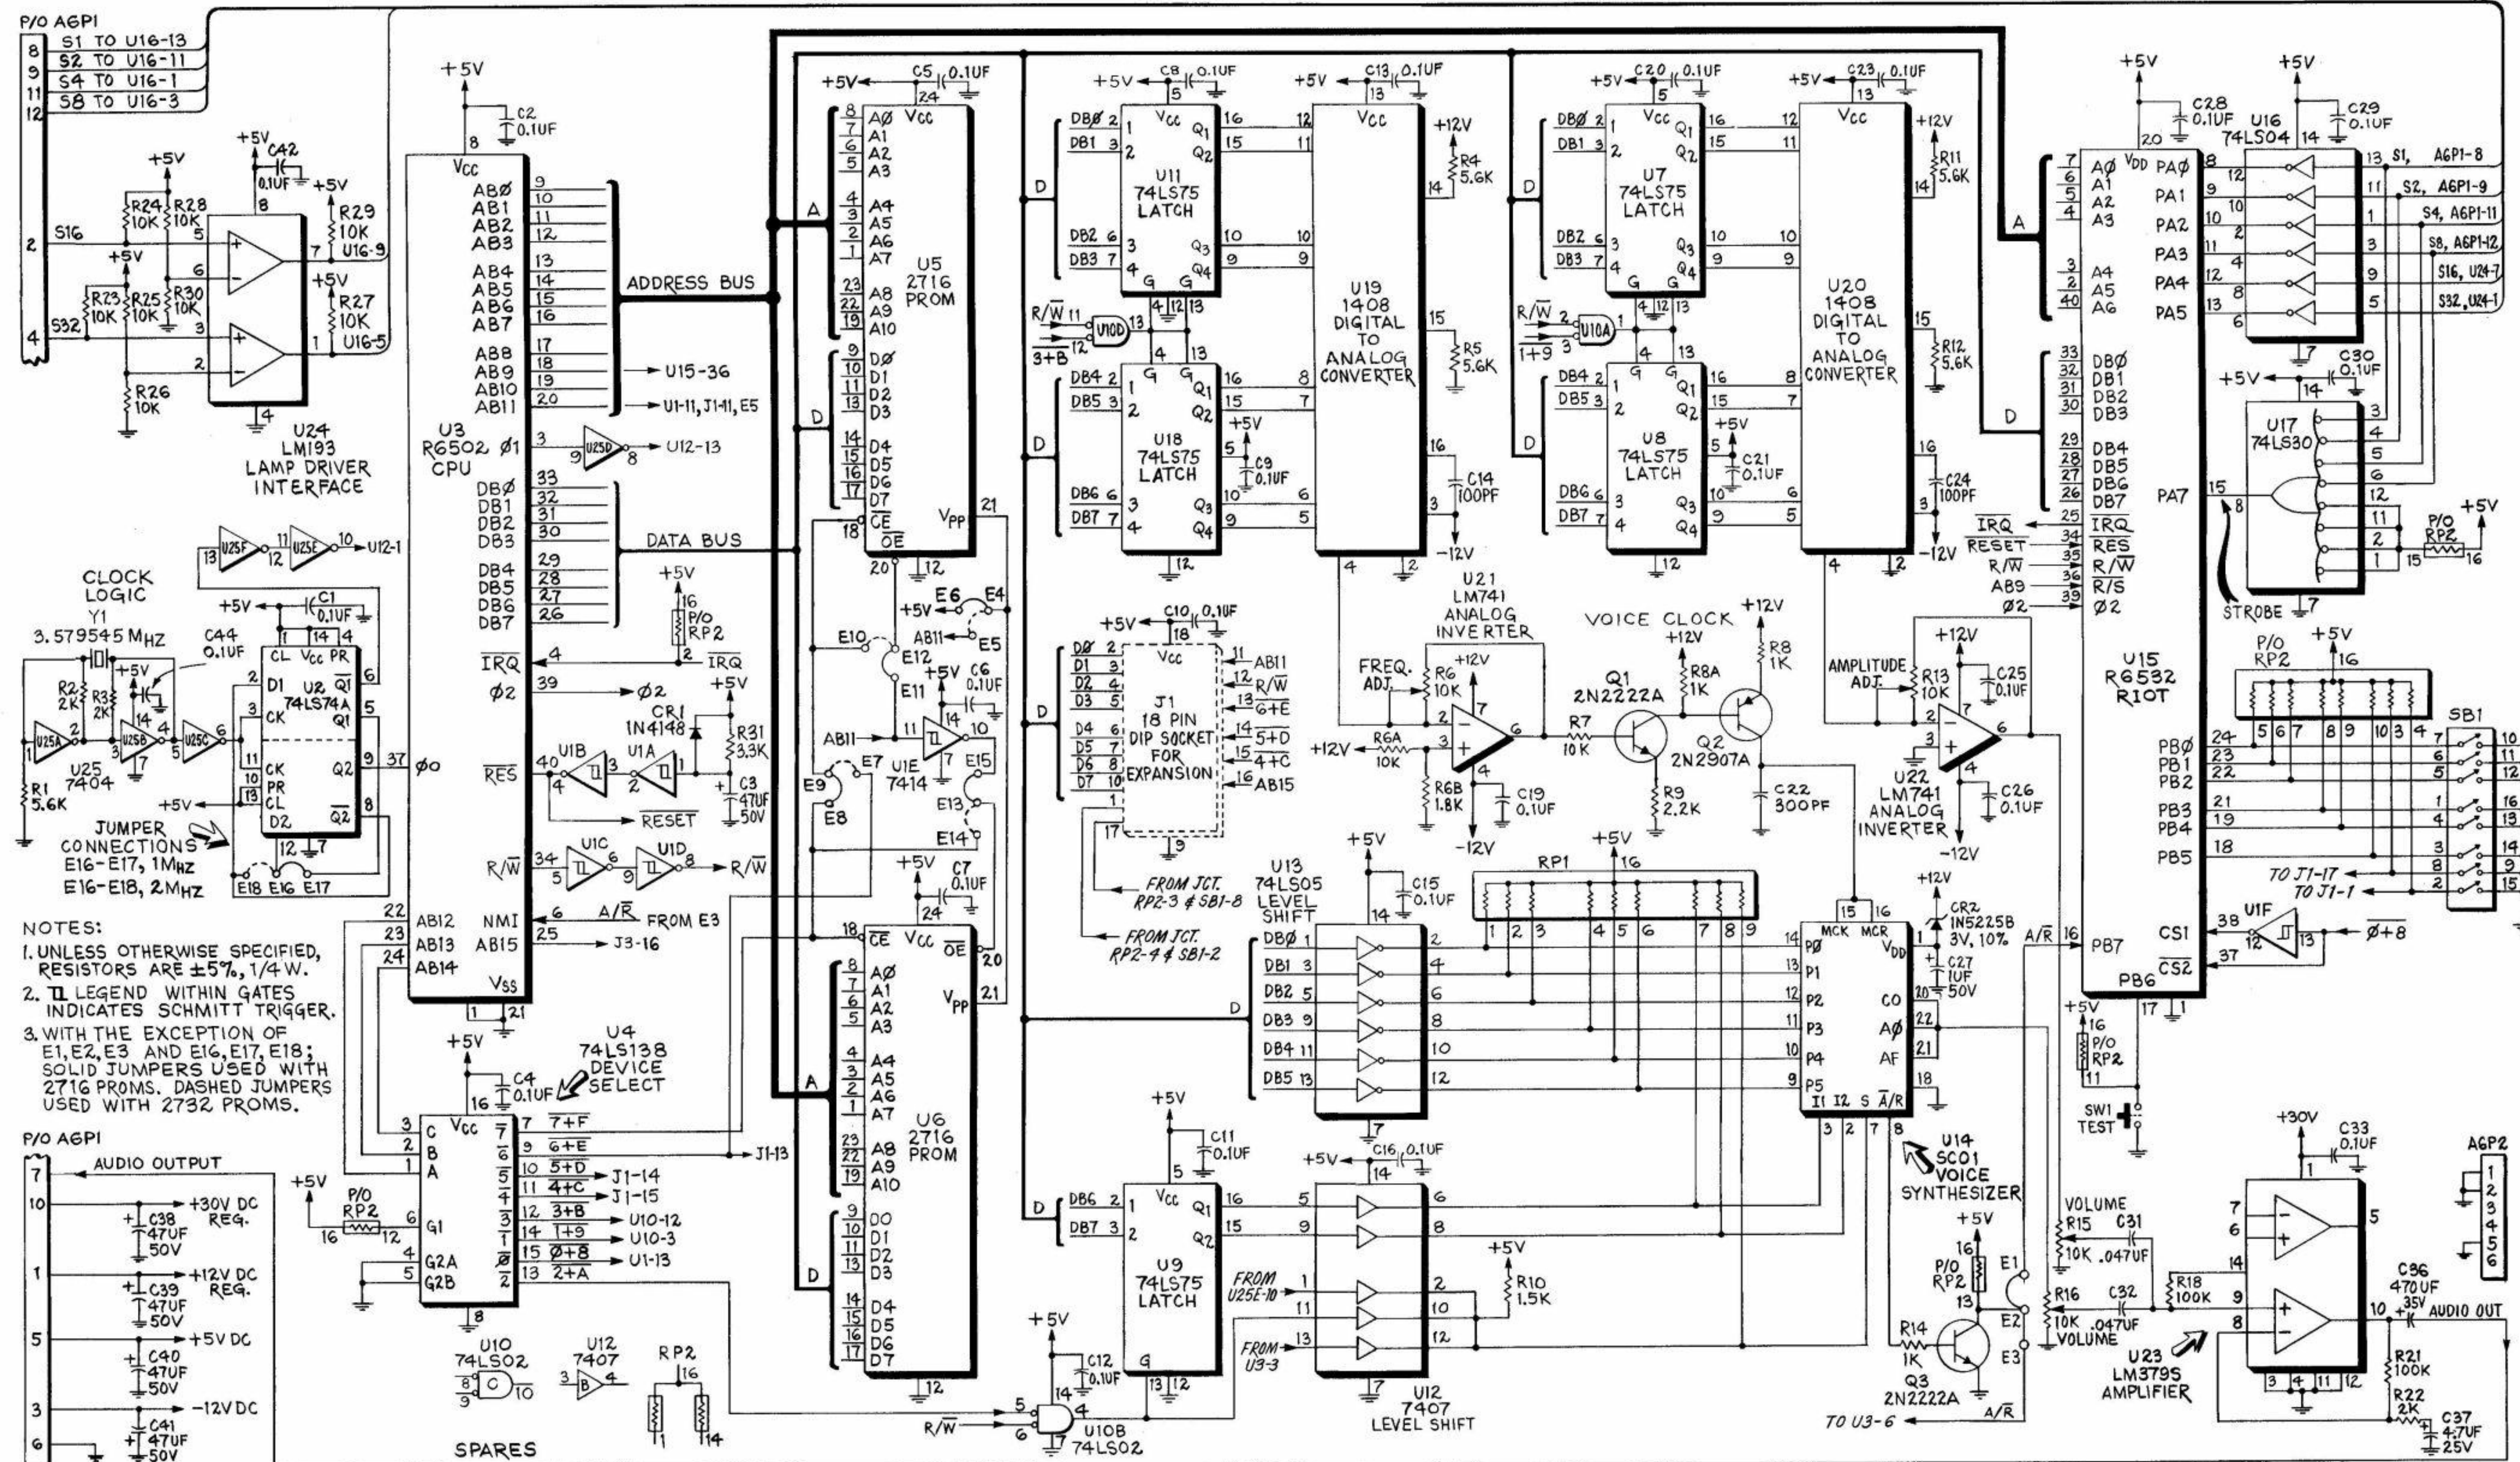


NOTES:
 1. UNLESS OTHERWISE SPECIFIED, RESISTORS ARE ±5%, 1/4W.
 2. TL LEGEND WITHIN GATES INDICATES SCHMITT TRIGGER.
 3. WITH THE EXCEPTION OF E1, E2, E3 AND E16, E17, E18; SOLID JUMPERS USED WITH 2716 PROMS. DASHED JUMPERS USED WITH 2732 PROMS.

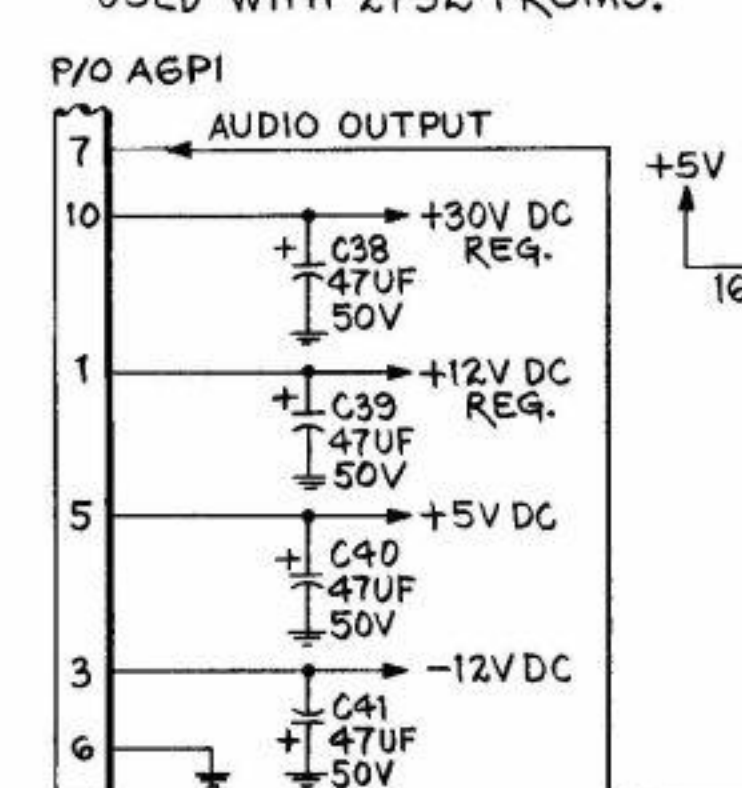

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

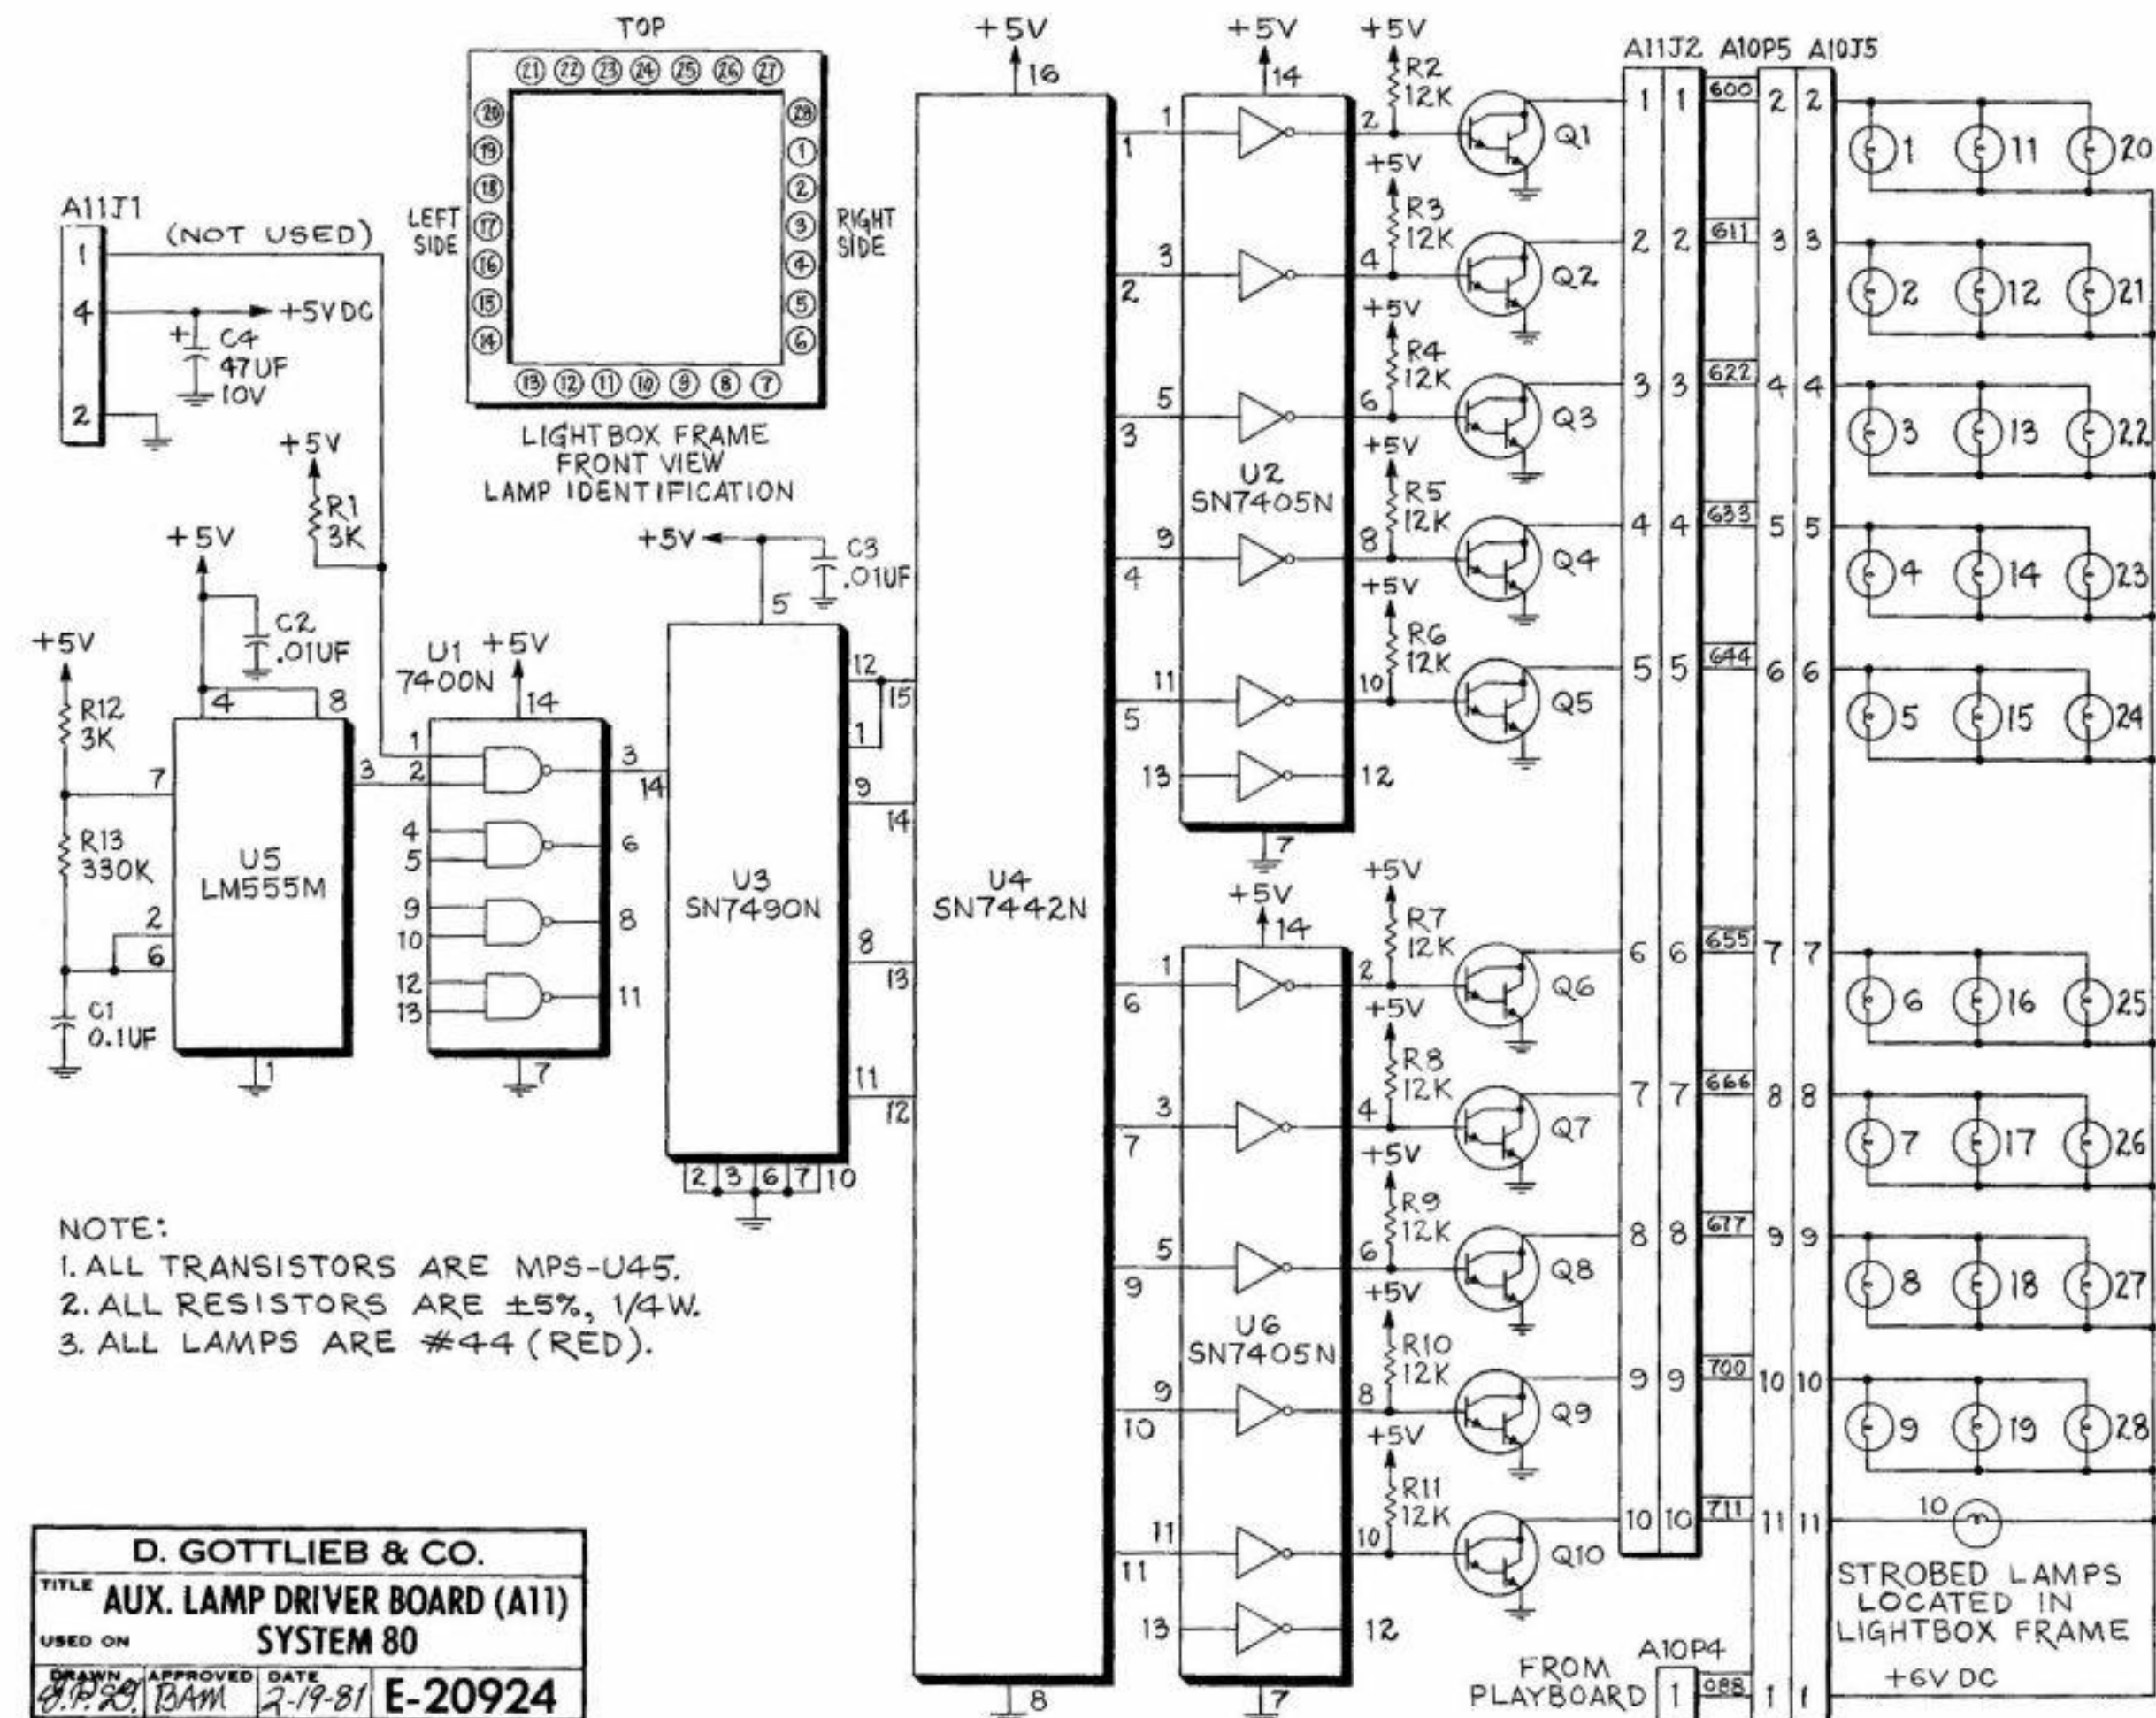


AUXILIARY LAMP DRIVER BOARD (A11) COMPONENT LOCATION

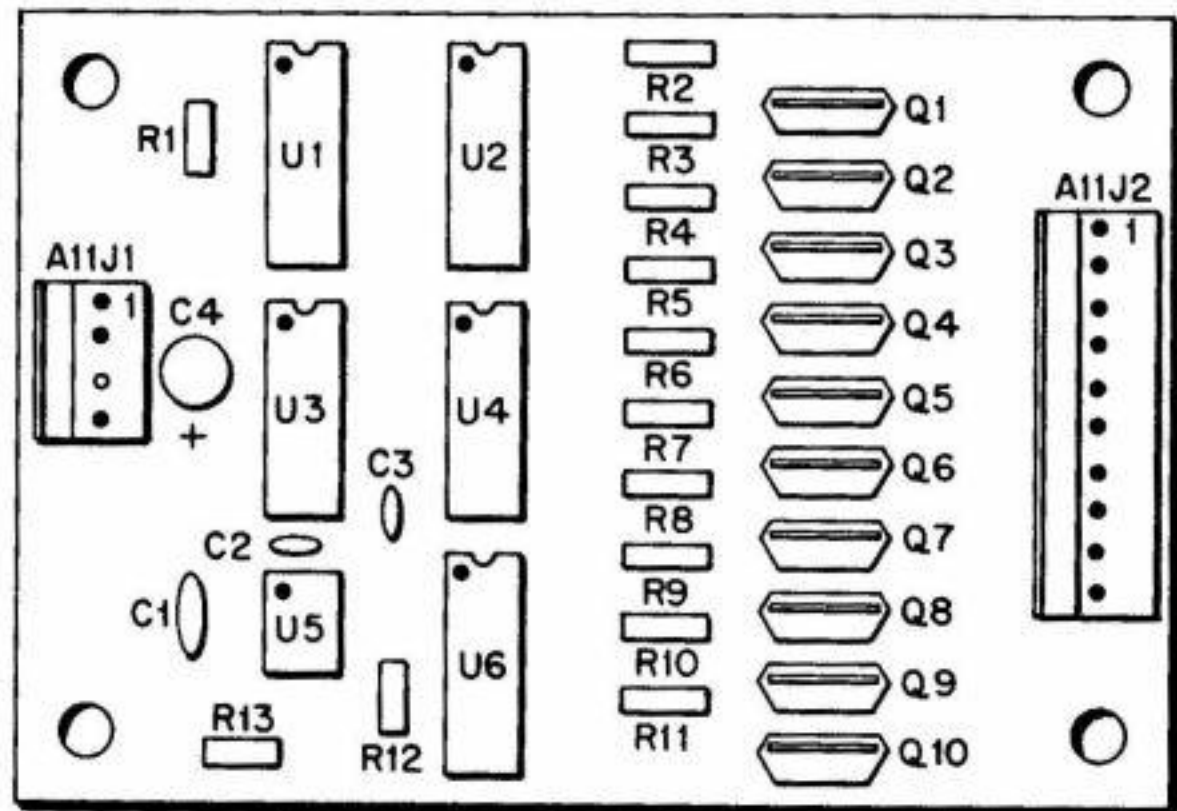

AUXILIARY LAMP DRIVER BOARD (A11) PARTS LIST


REFERENCE	DESCRIPTION	PART NUMBER
C1	CAPACITOR, .1 MFD, 100V CERAMIC RADIAL LEAD	
C2-C3	CAPACITOR, .01 MFD, 100V RADIAL LEAD	
C4	CAPACITOR, 47 MFD, 10V ELECTROLYTIC RADIAL LEAD	
Q1-Q10	TRANSISTOR, NPN DARLINGTON	MPS-U45
R1, R12	RESISTOR, 3K OHM, 5%, 1/4 W	
R2-R11	RESISTOR, 12K OHM, 5%, 1/4 W	
R13	RESISTOR, 330K OHM, 5%, 1/4 W	
U1	I.C. 2-INPUT NAND	SN7400N
U2, U6	I.C. INVERTER	SN7405N
U3	I.C. DECADE COUNTER	SN7490N
U4	I.C. DECODER	SN7442N
U5	I.C. TIMER	LM555N

10 POS. SQUARE WIRE FRICTION LOCK CONNECTOR
 4 POS. SQUARE WIRE FRICTION LOCK CONNECTOR

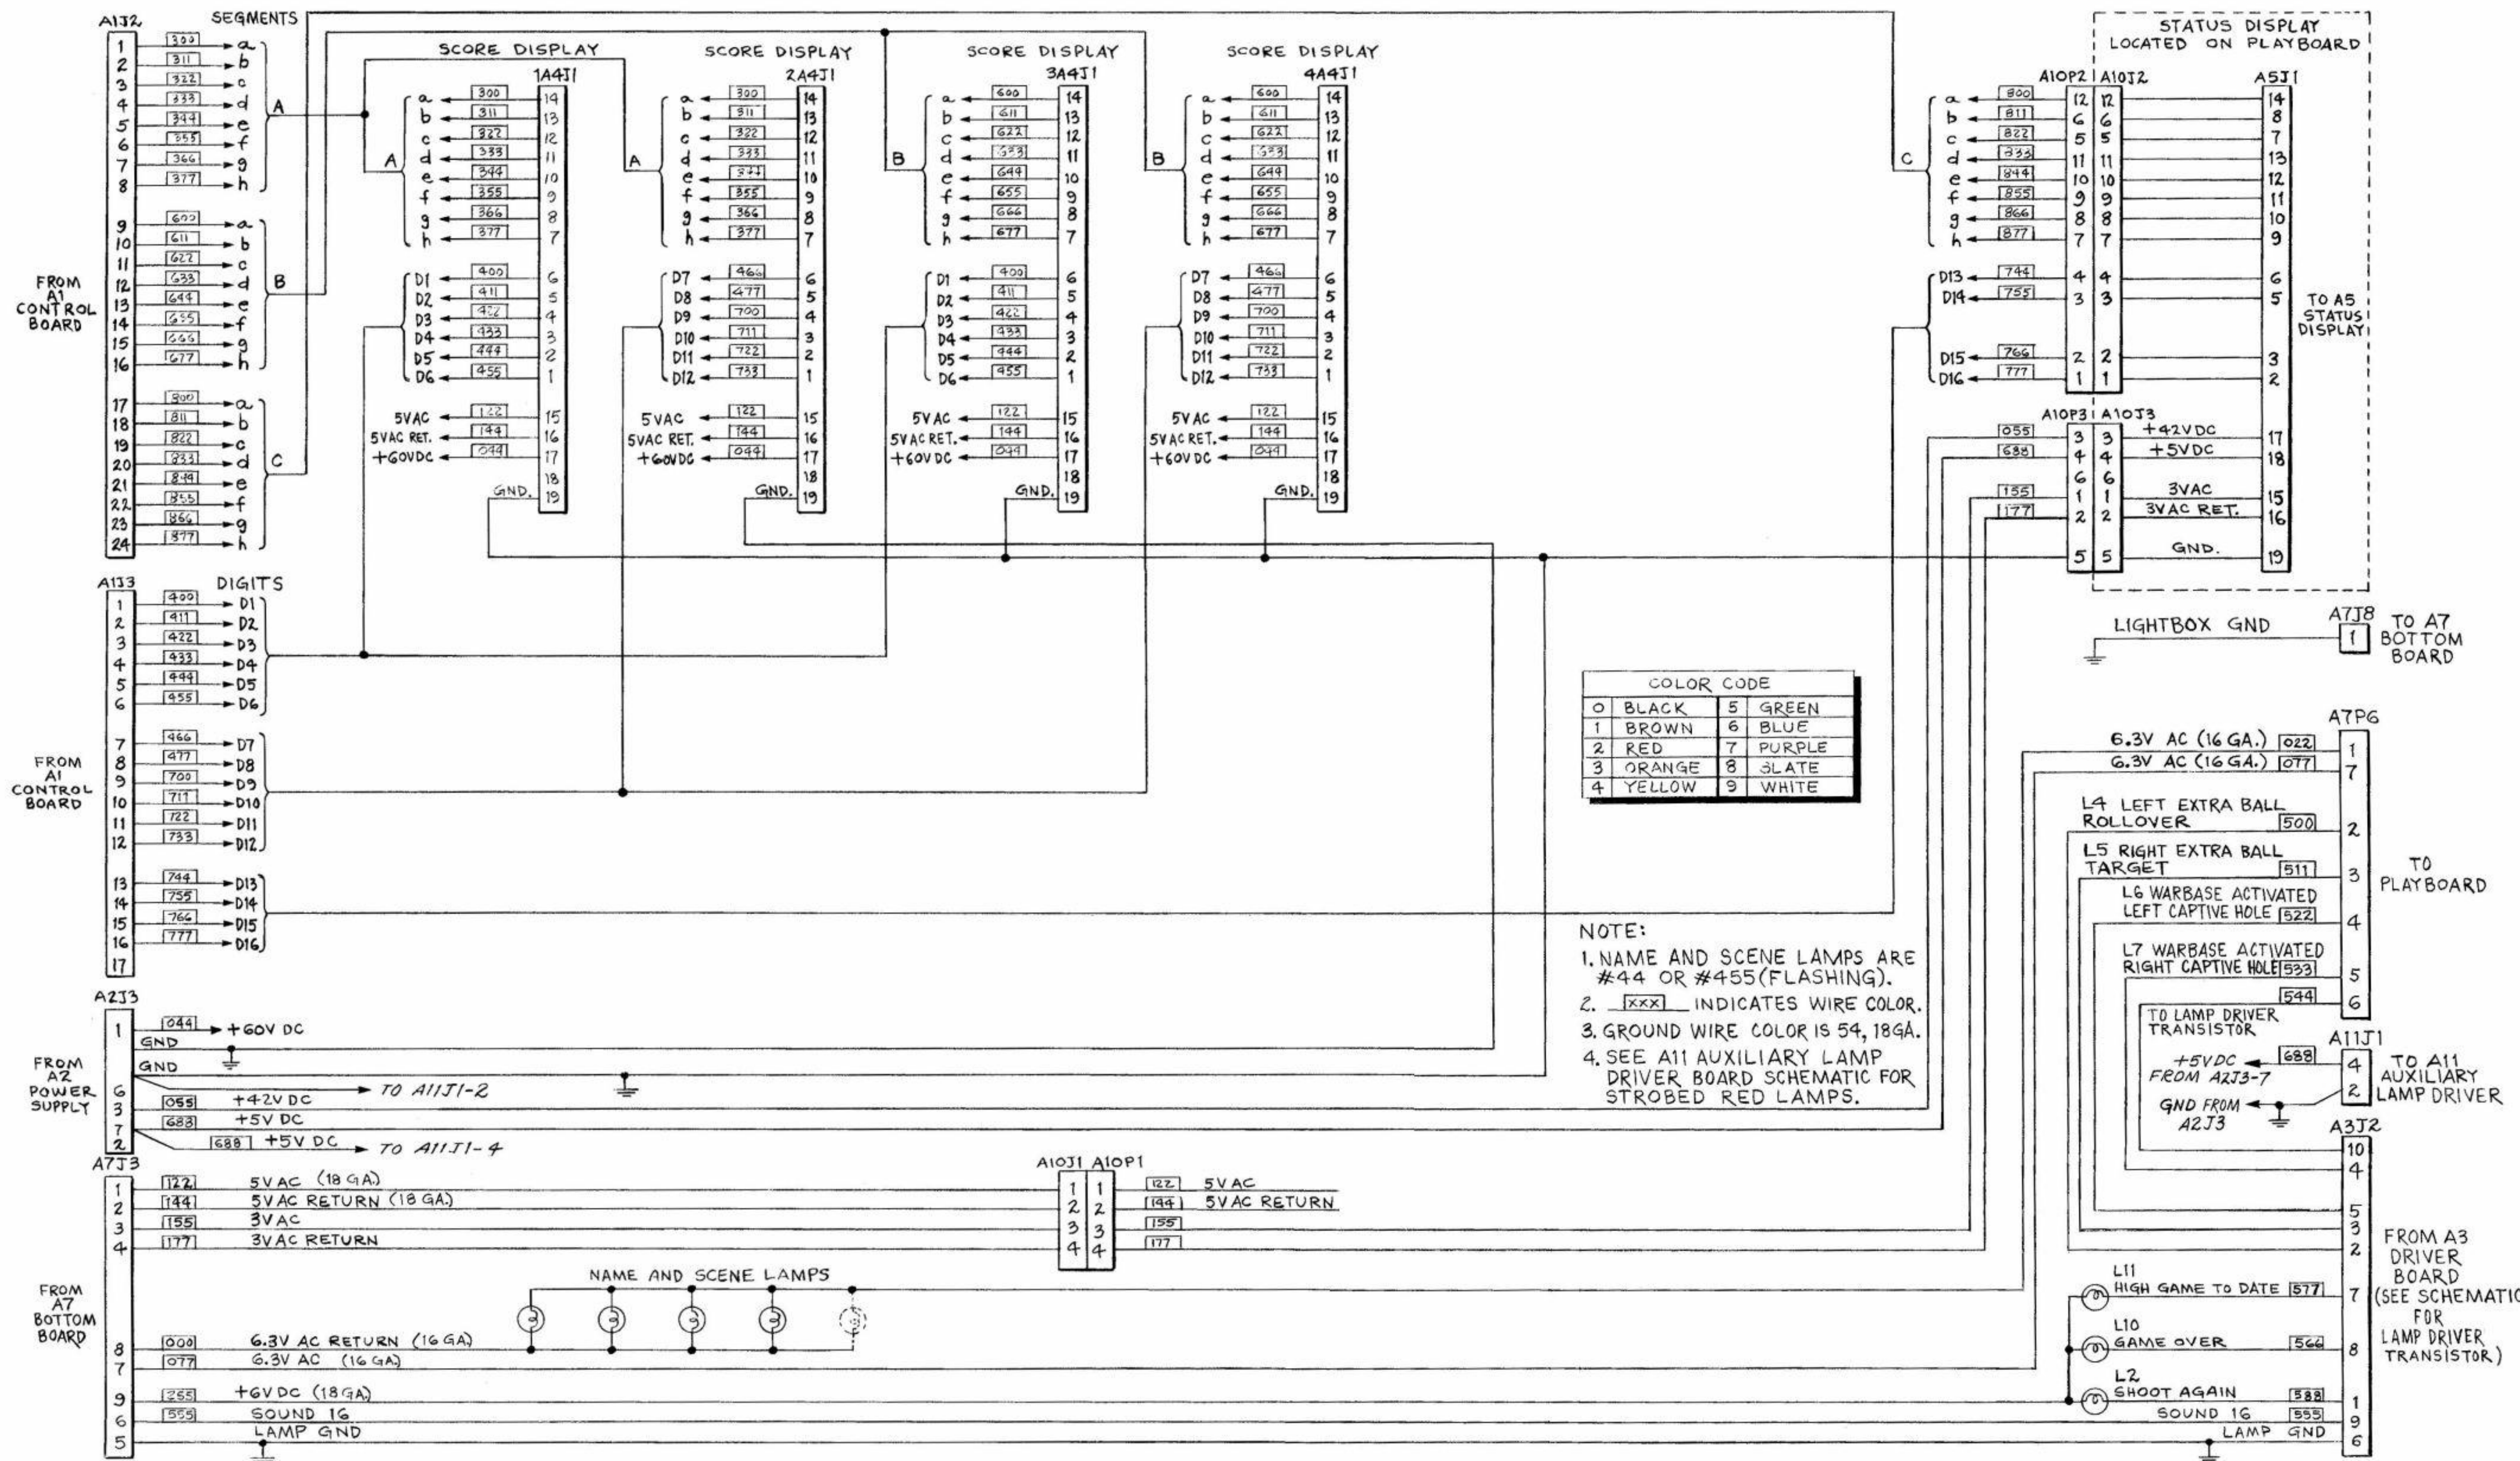


D. GOTTLIEB & CO.
 TITLE: LIGHTBOX WIRING
 USED ON: SYSTEM 80, GAME #666
 DRAWN: [Signature] APPROVED: [Signature] DATE: 1-29-81 E-2091

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LIST

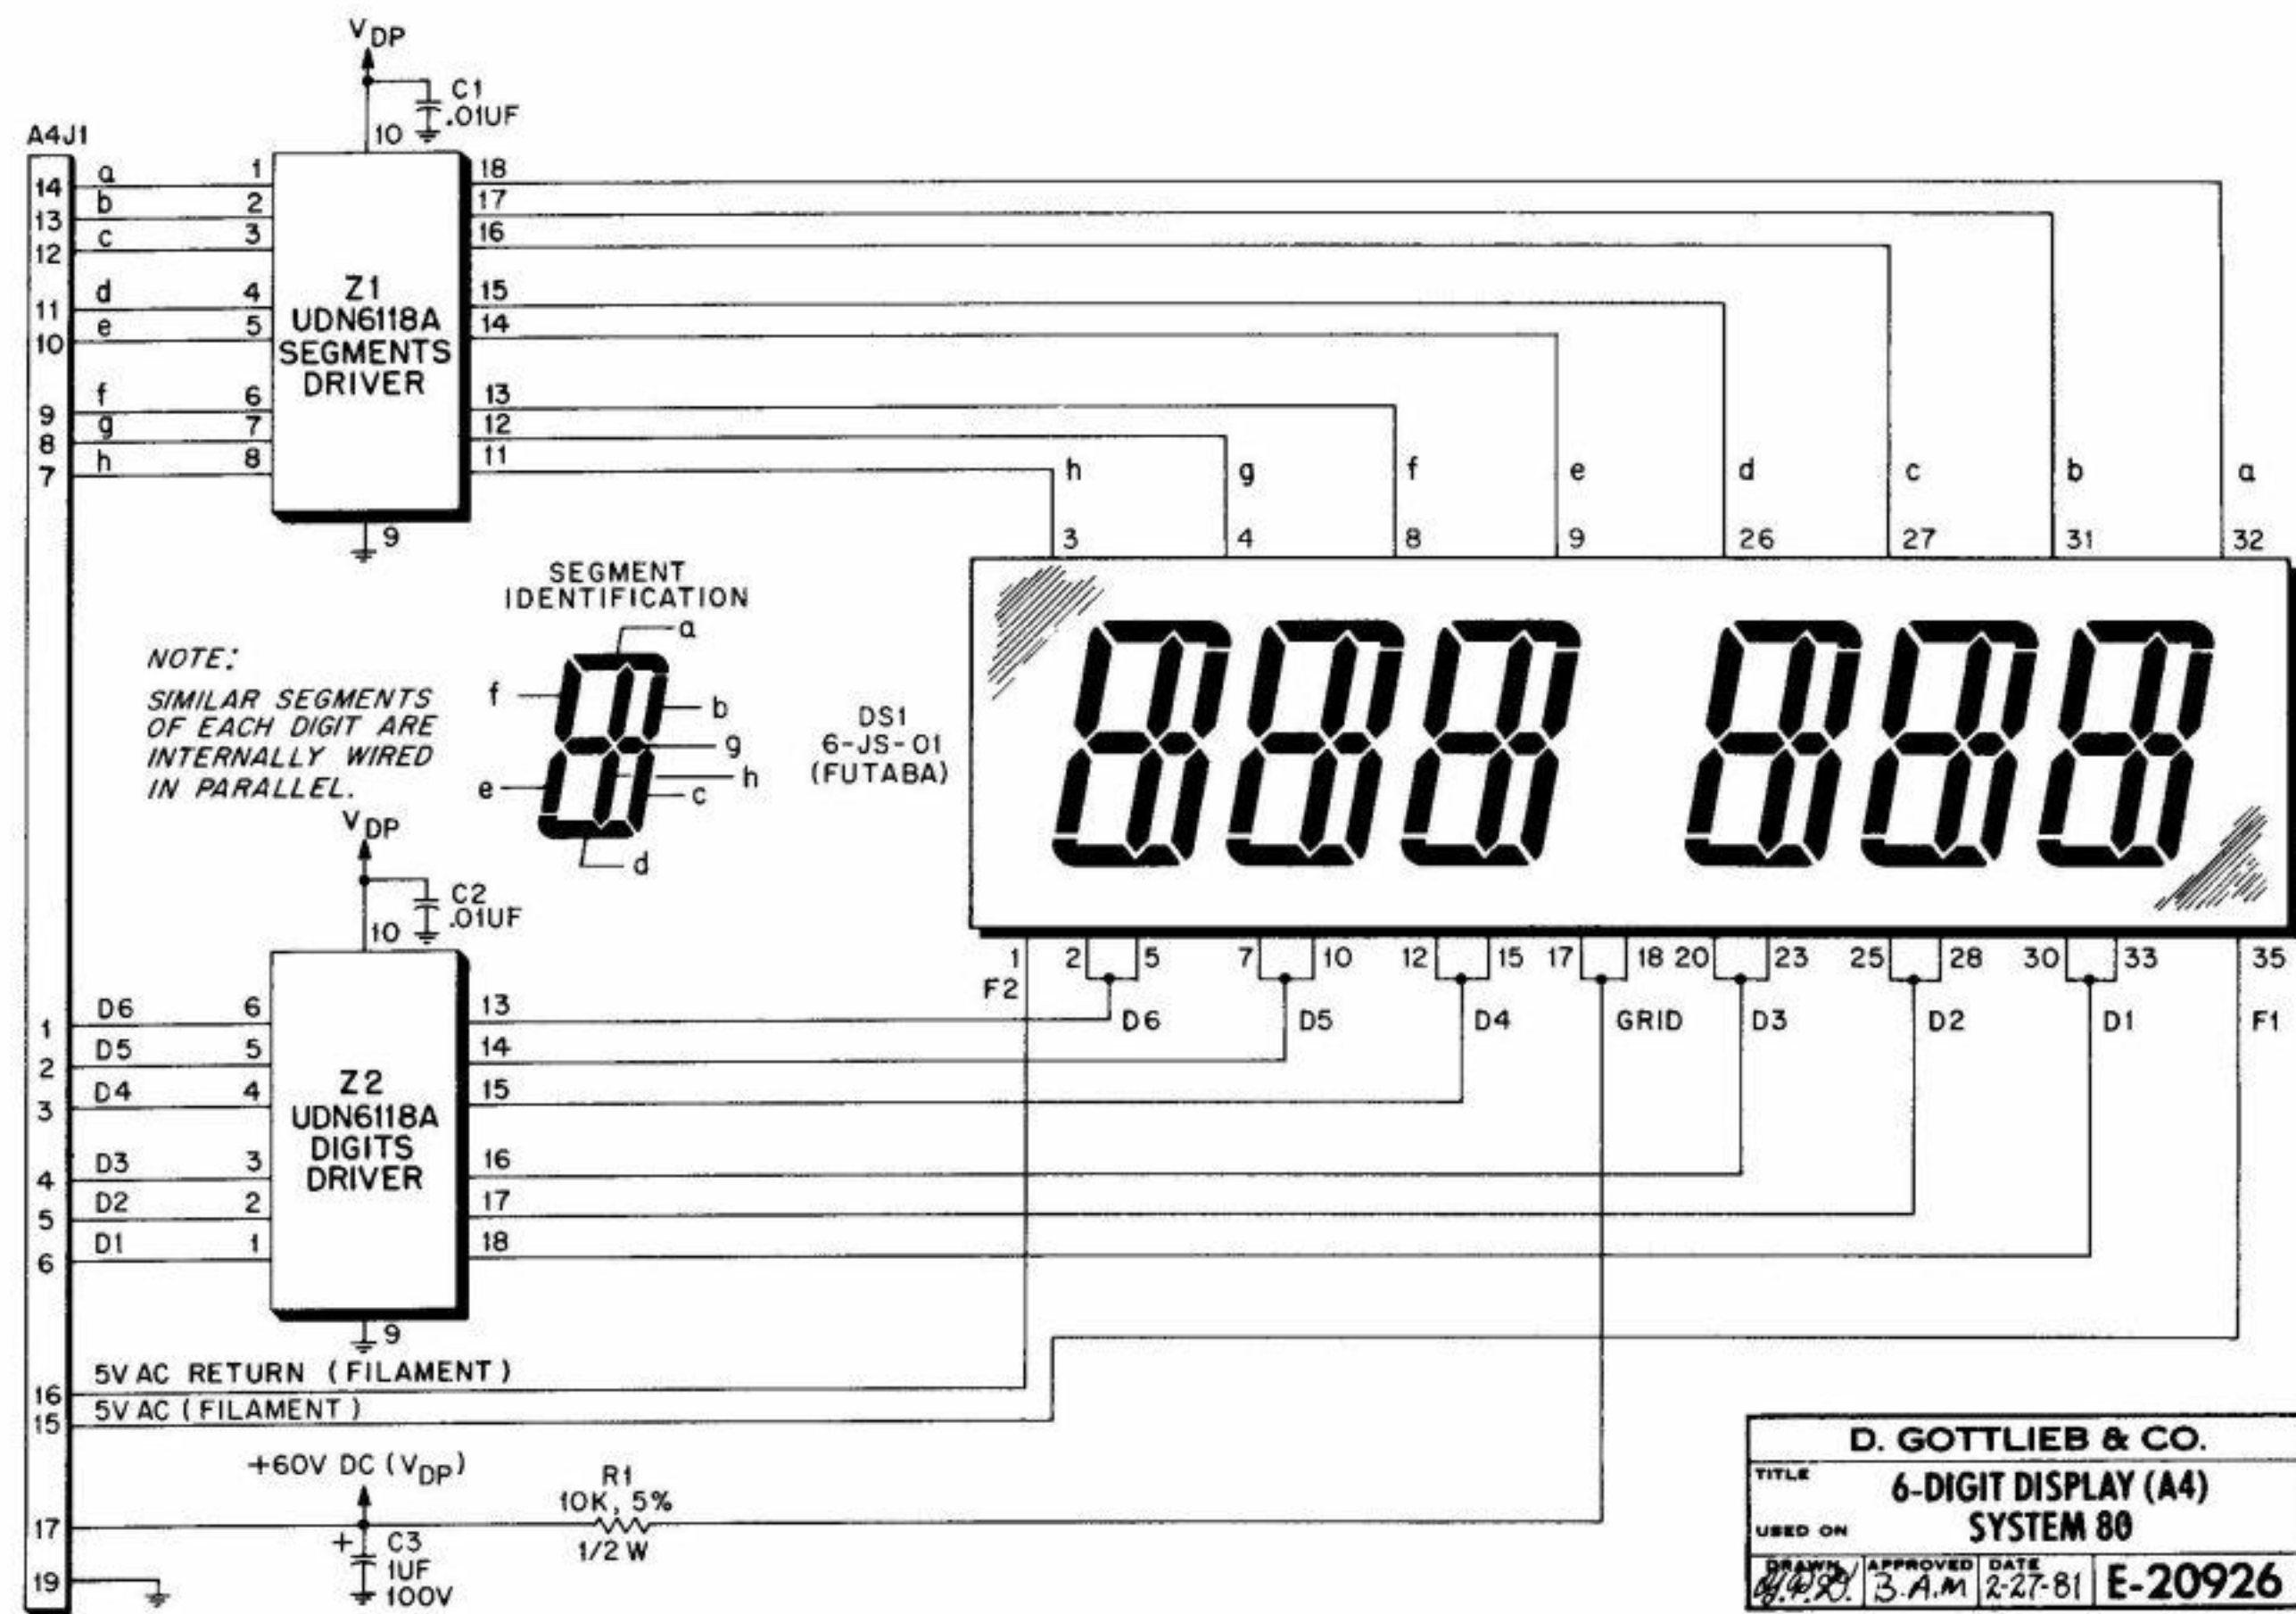


6-DIGIT DISPLAY (A4) COMPONENT LOCATION

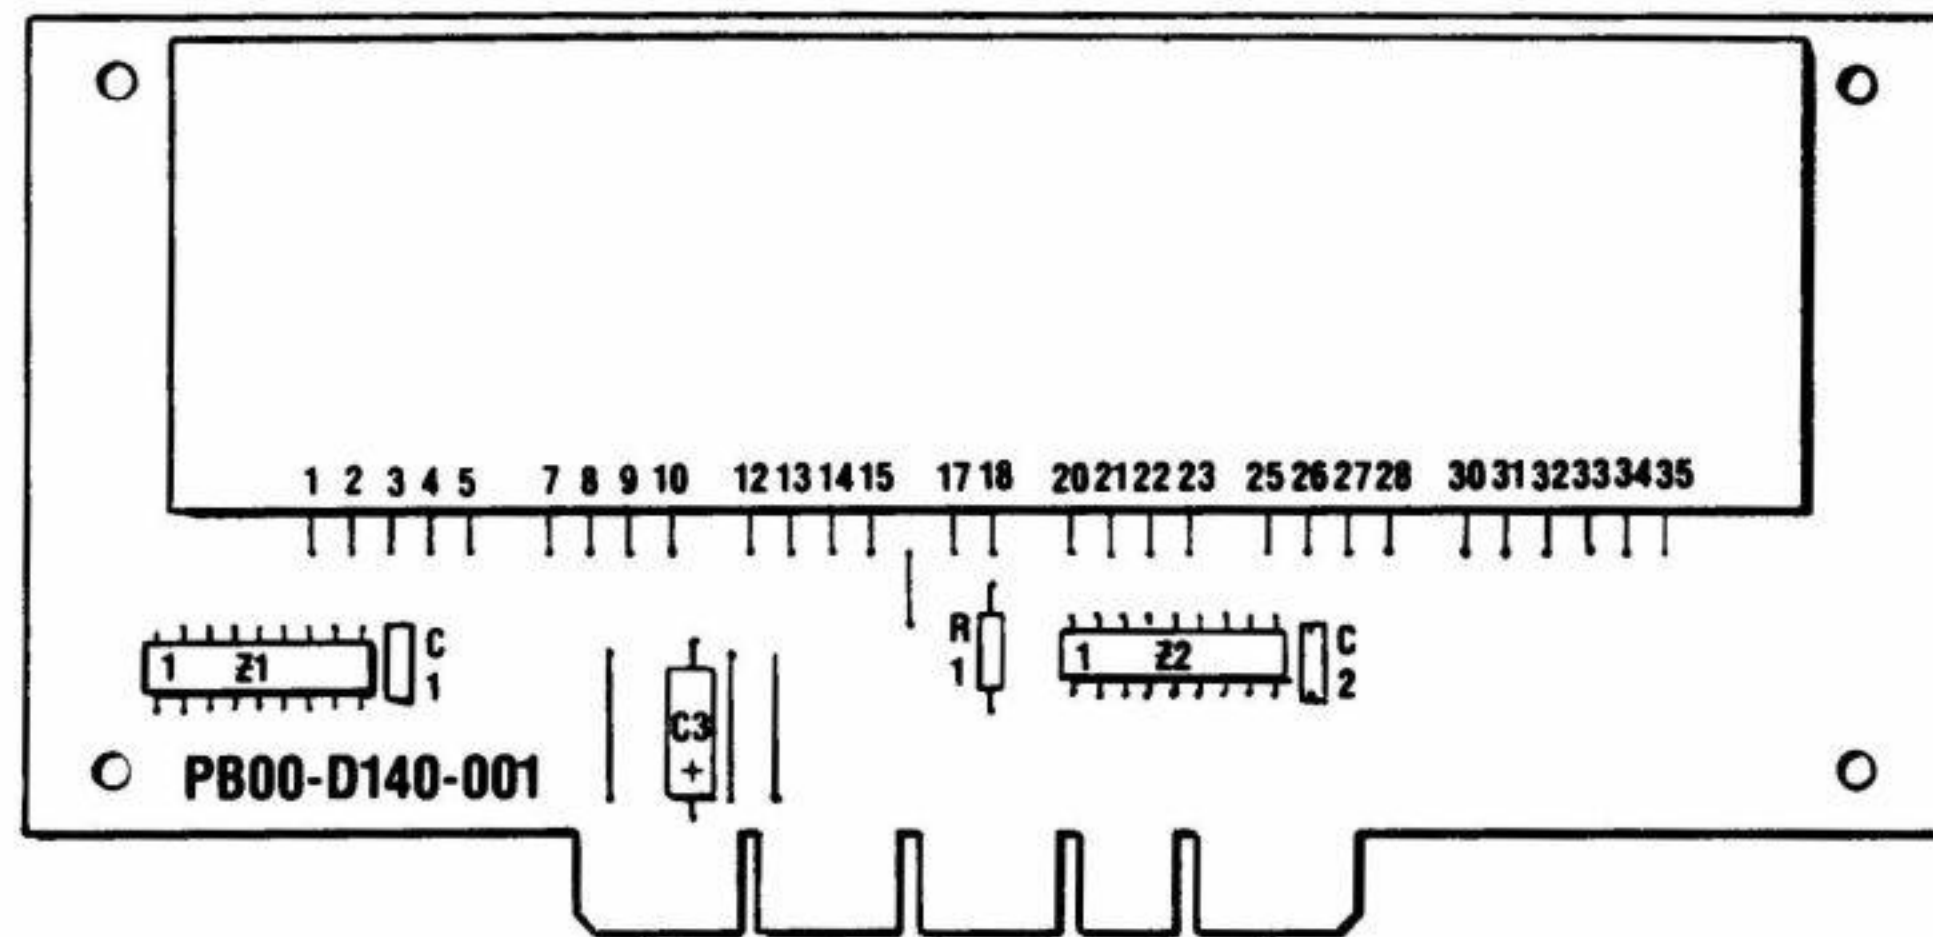


6-DIGIT DISPLAY (A4) PARTS LIST

REFERENCE	DESCRIPTION	PART NUMBER
C1, C2	Capacitor, .01 mfd., 100V Kemet	C320C103MIR5CA
C3	Capacitor, 1 mfd., 100V Sprague	TE1400
DS1	6-Digit Display Tube—FUTABA	6-JS-01
R1	Resistor, 10K ohm, 5%, 1/2W	RC20GF103
Z1, Z2	IC—Fluorescent Display Driver—Sprague	UDN6118A

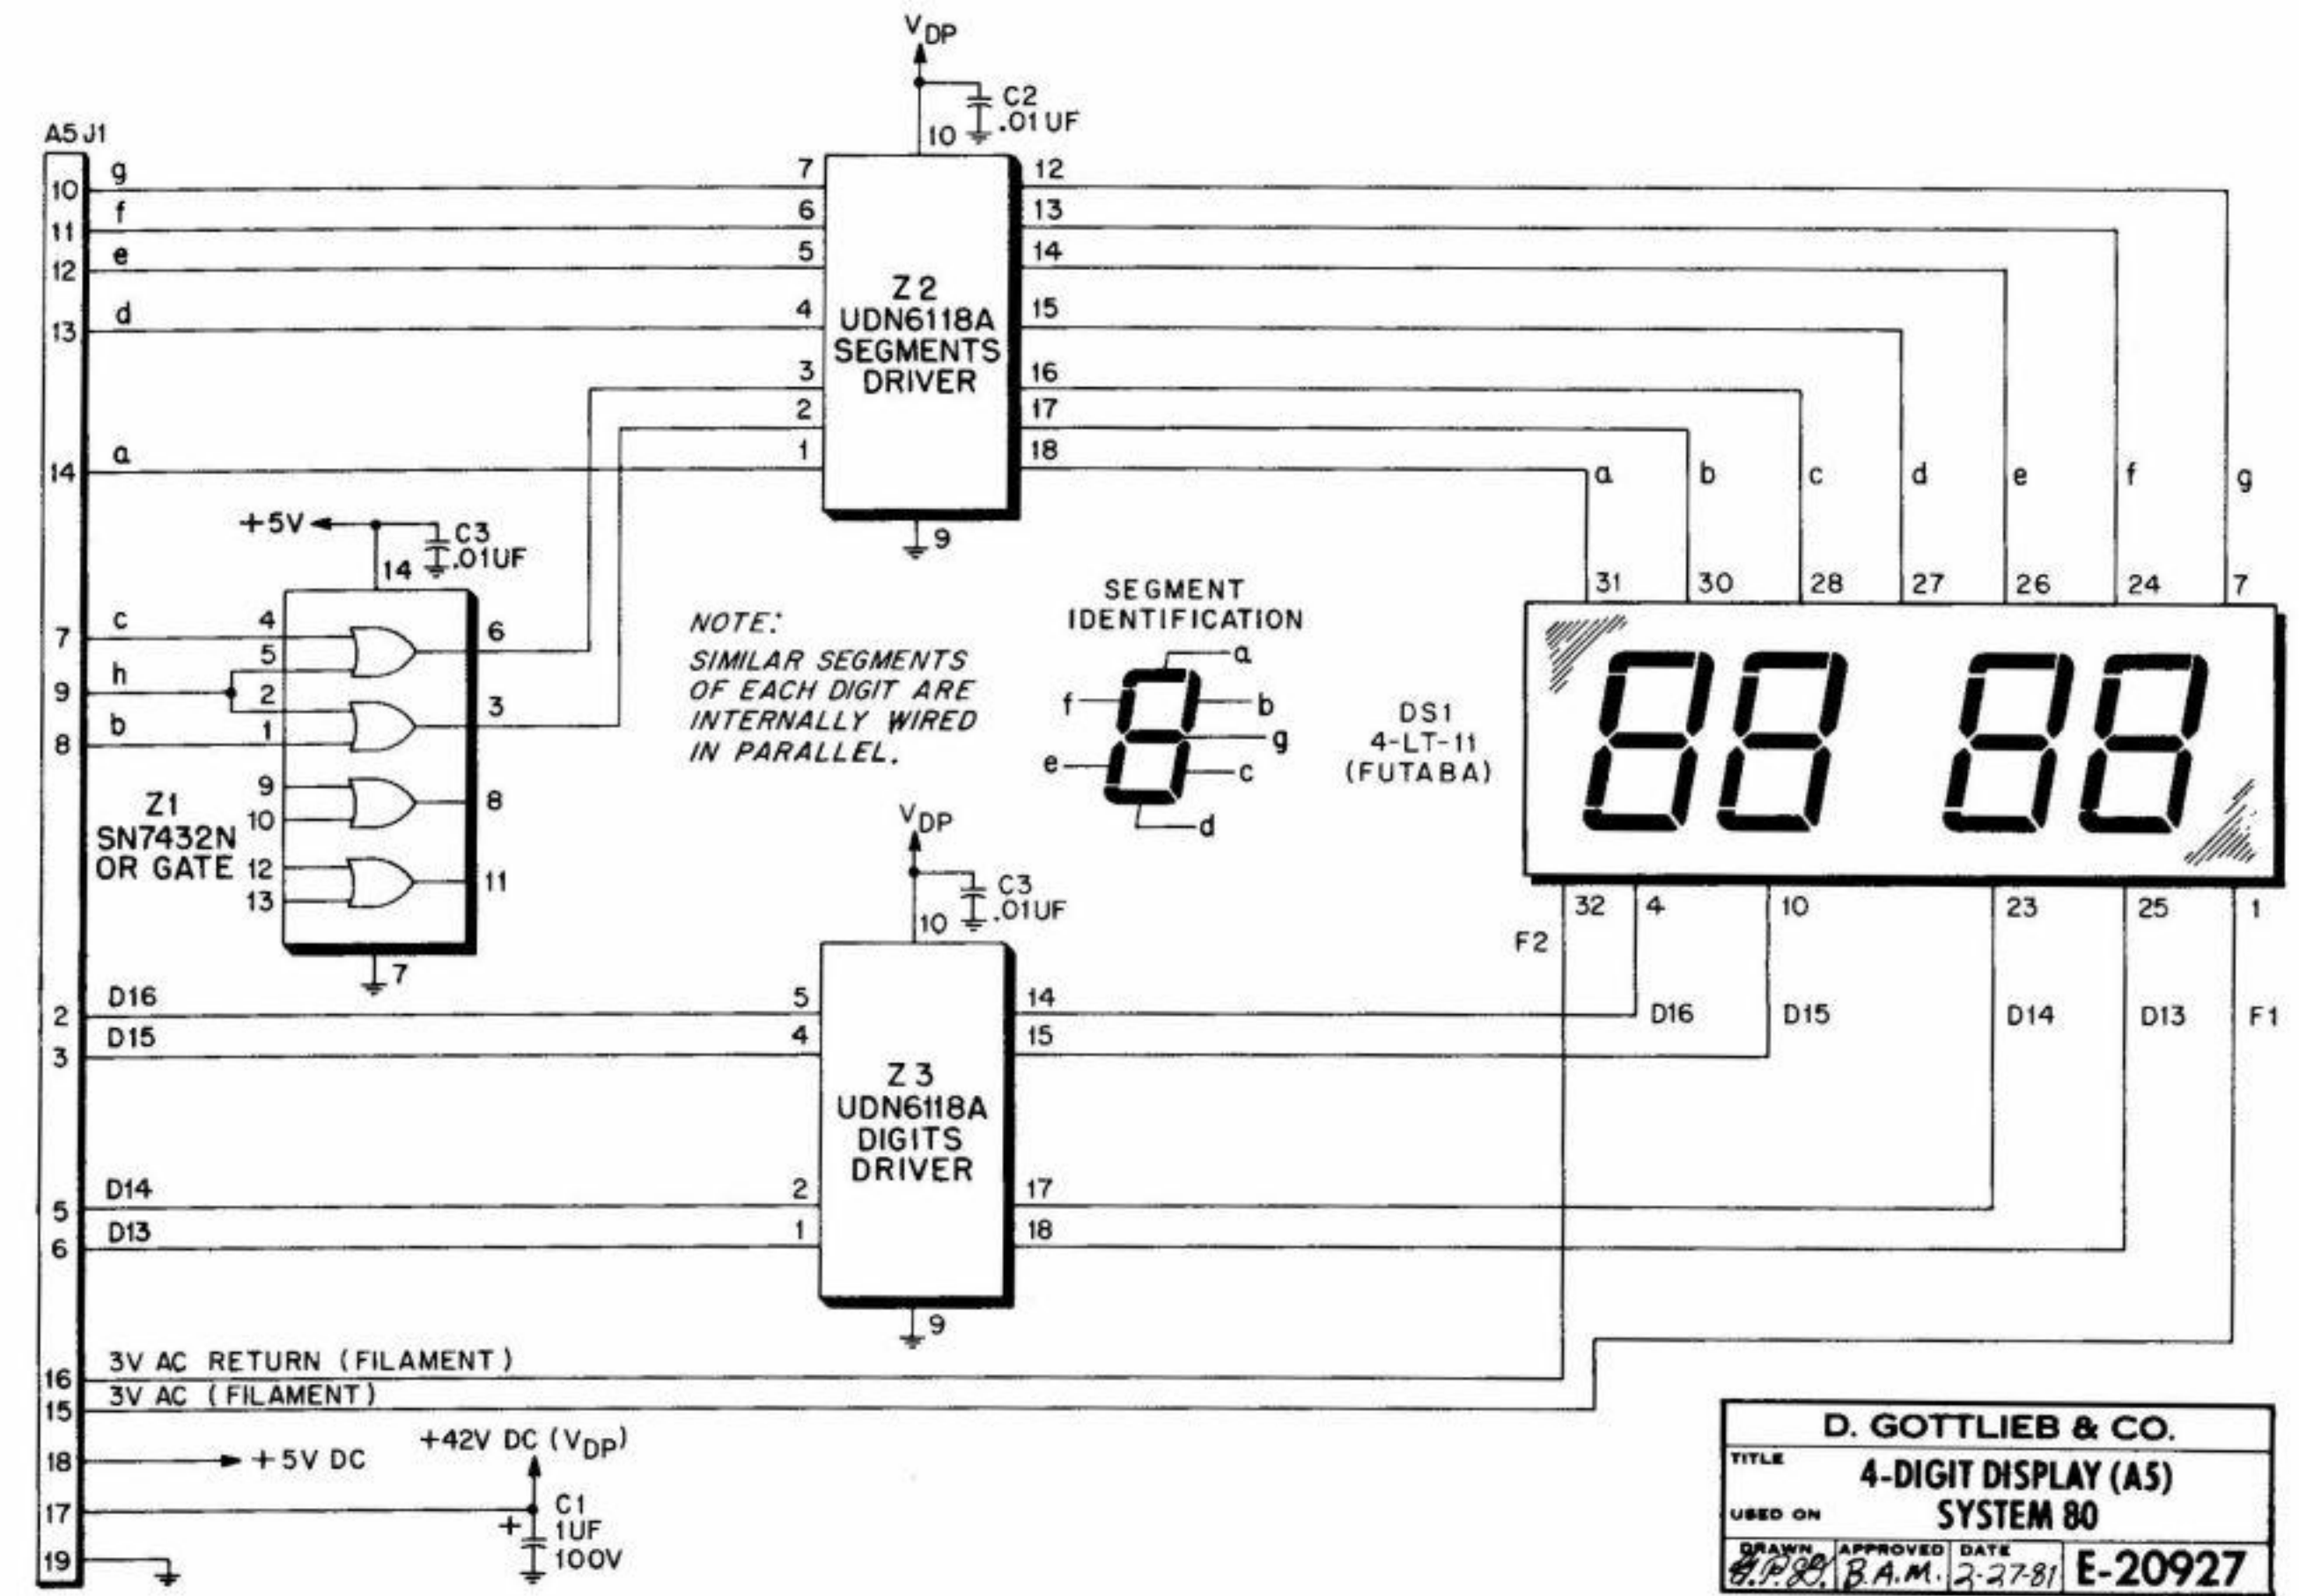


4-DIGIT DISPLAY (A5) COMPONENT LOCATION

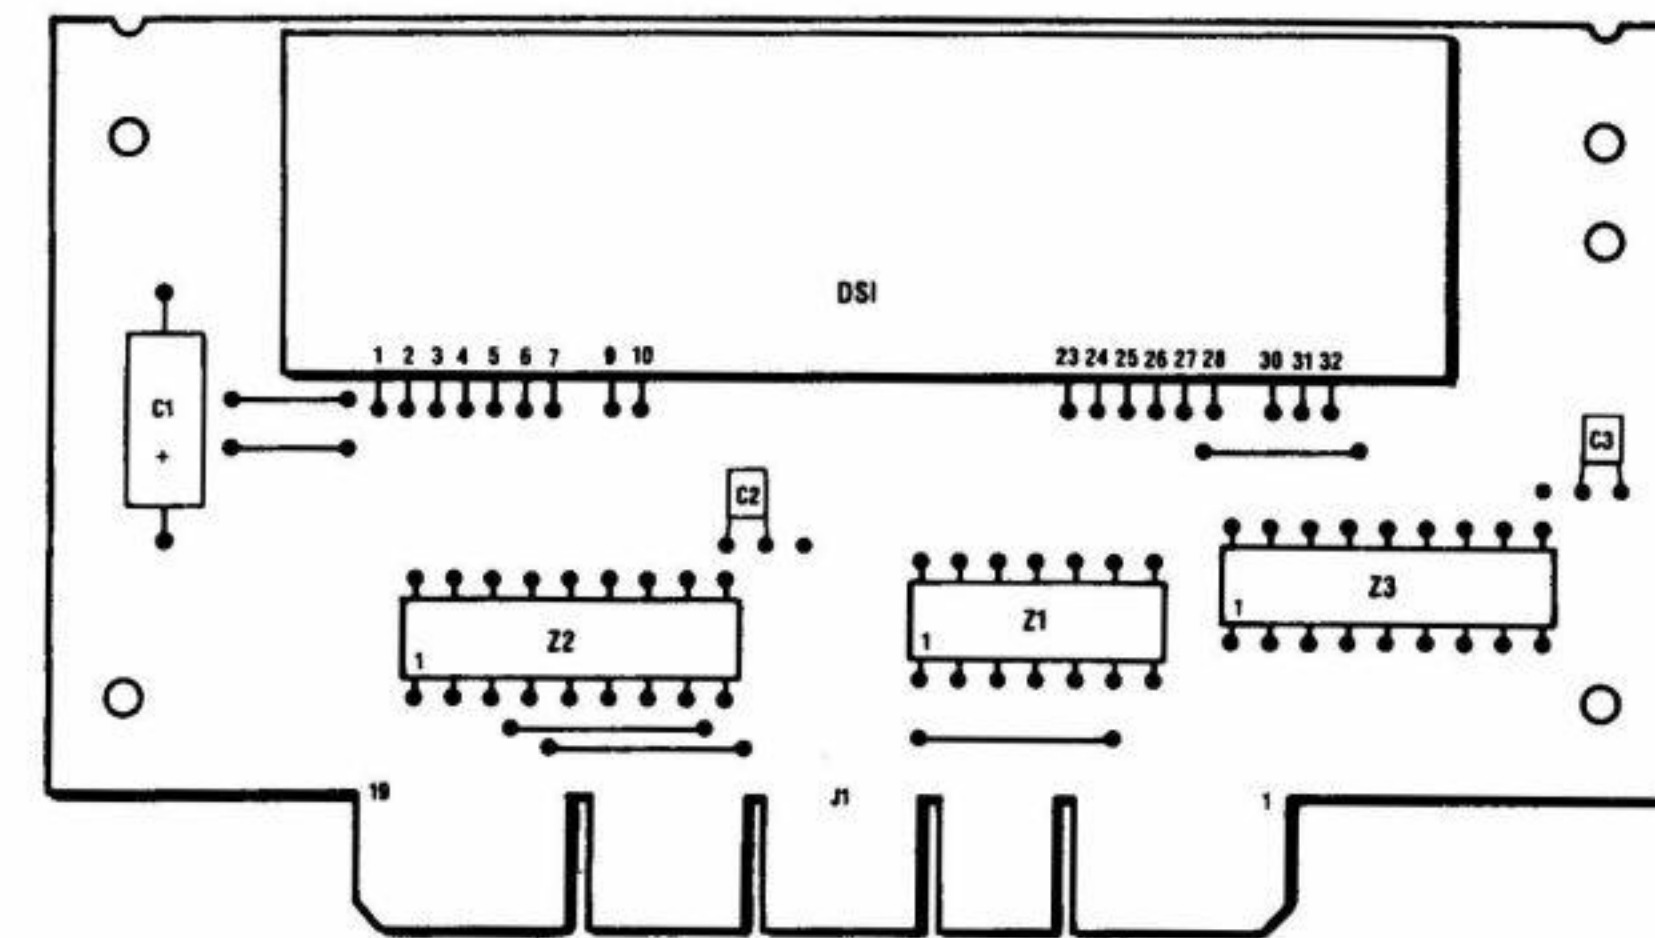

4-DIGIT DISPLAY (A5) PARTS LIST

REFERENCE	DESCRIPTION	PART NUMBER
C1	Capacitor, 1 mfd., 100V Sprague	TE1400
C2, C3	Capacitor, .01 mfd., 100V Kemet	C320C103MIR5CA
DS1	4-Digit Display Tube—FUTABA	4-LT-11
Z1	IC—Quad or Gate—T.I.	SN7432N
Z2, Z3	IC—Fluorescent Display Driver—Sprague	UDN6118A

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

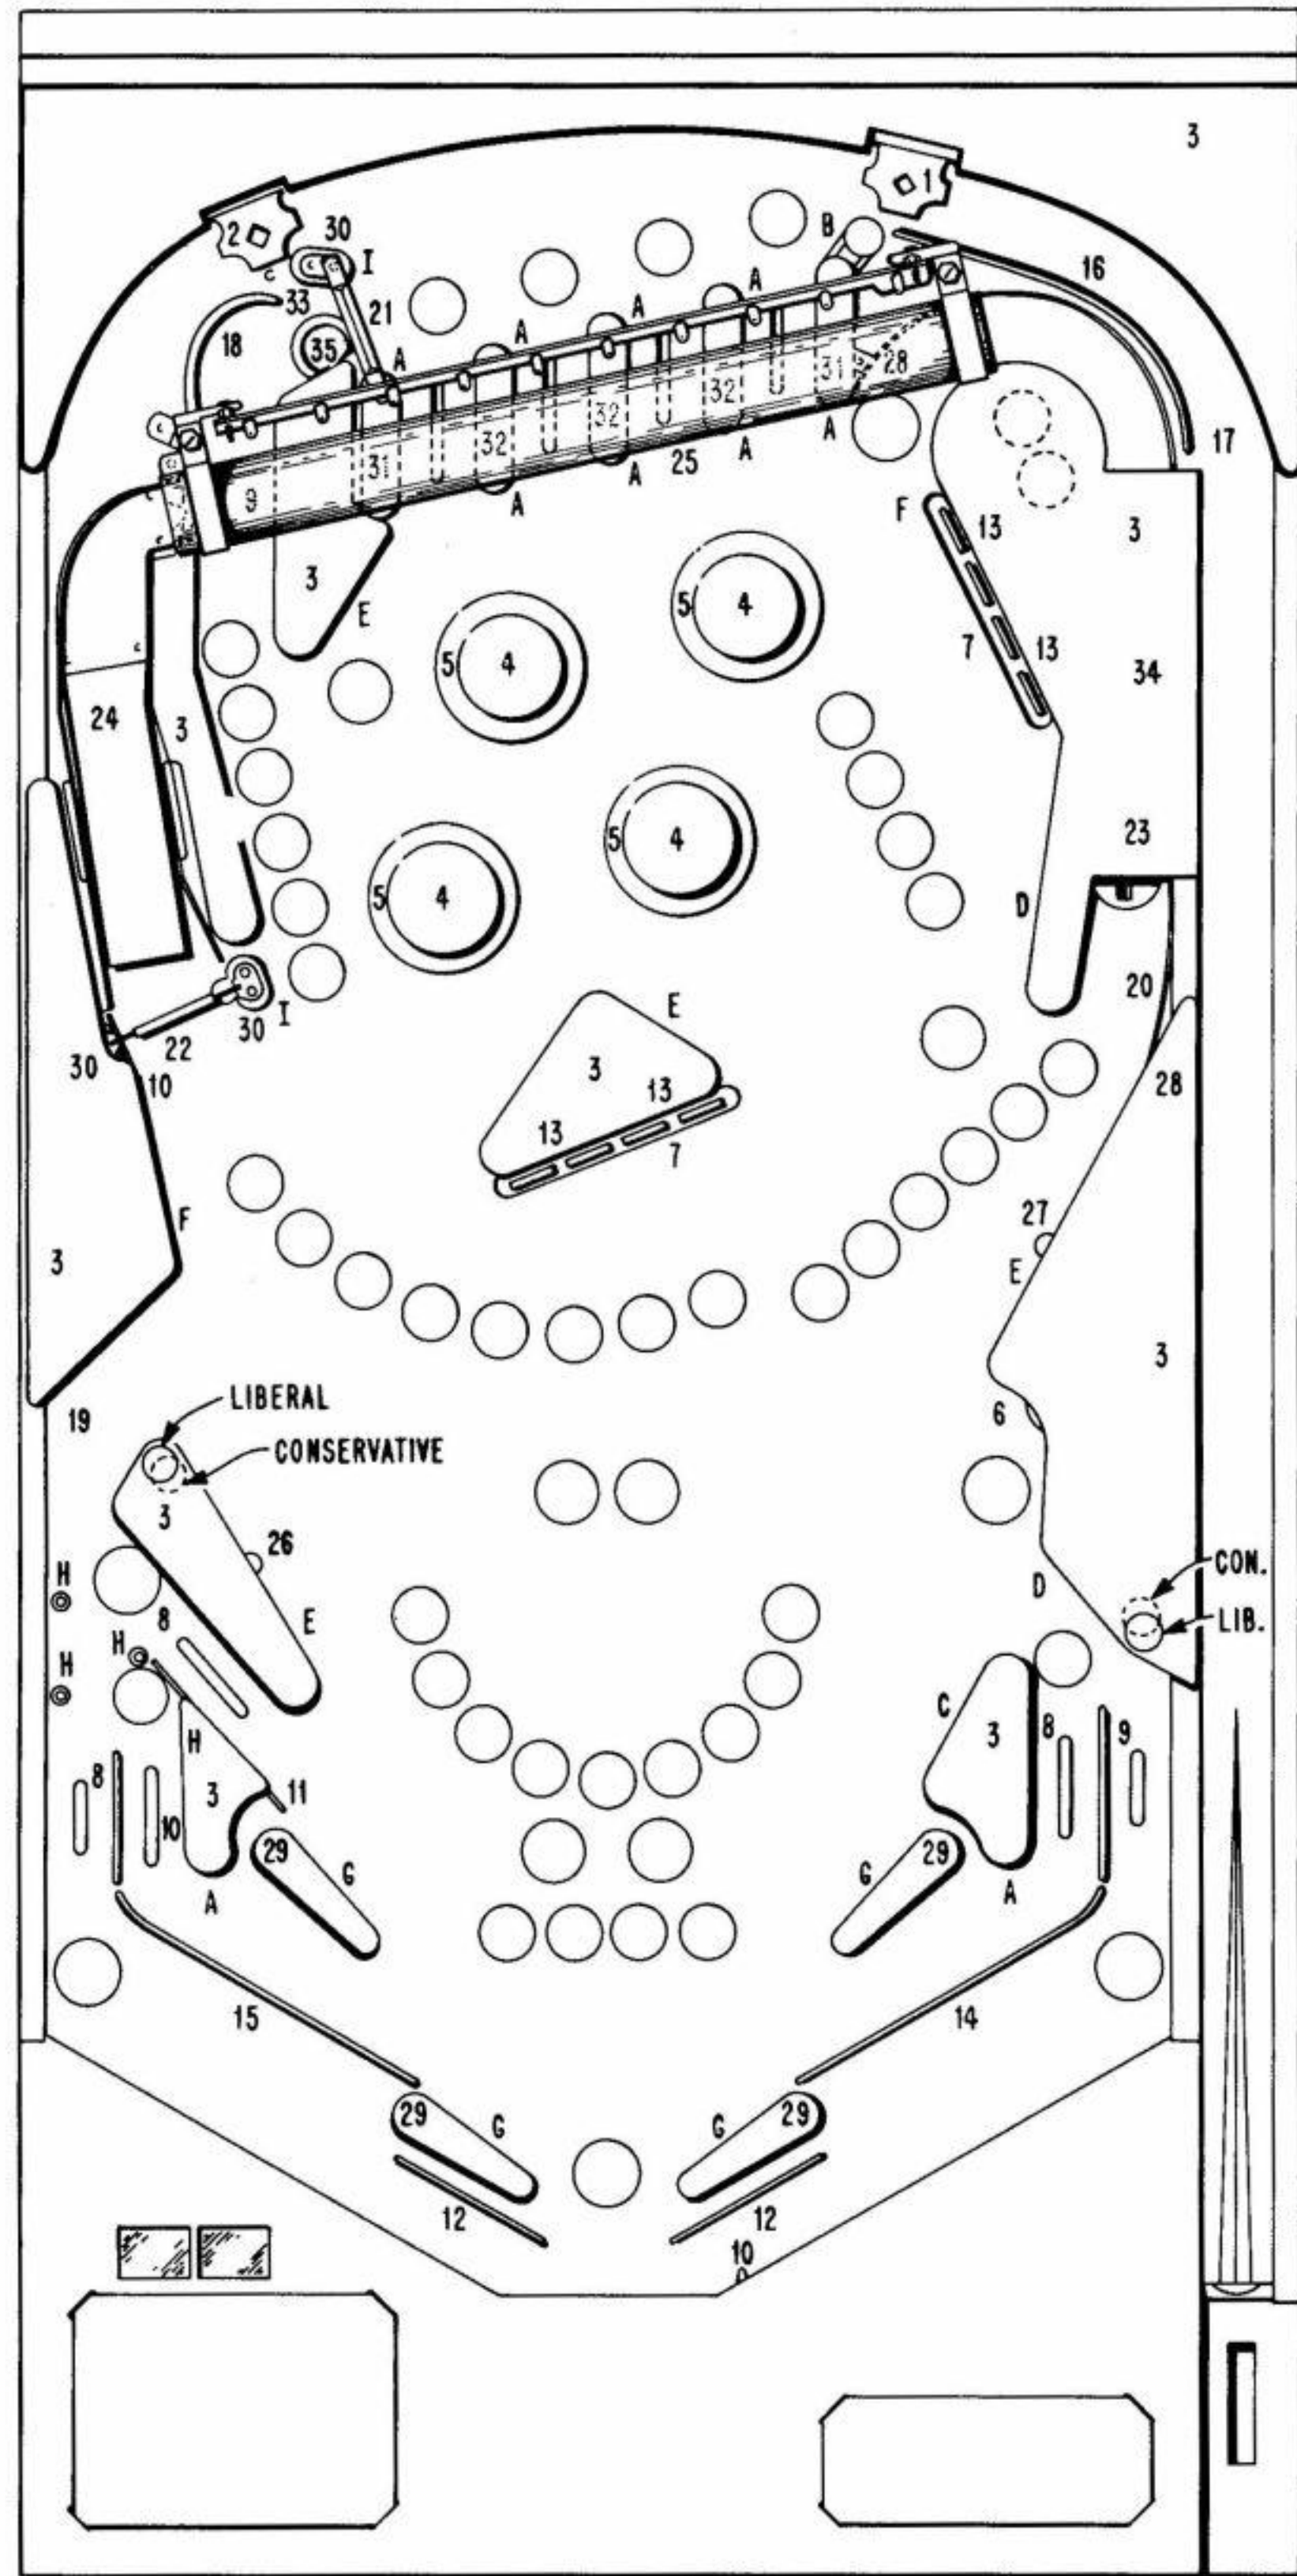

PLAYBOARD INFORMATION

RUBBER RINGS


A	A-10217	5/16"	(10)
B	A-10218	3/4"	(1)
C	A-10220	1-1/2"	(1)
D	A-10221	2"	(2)
E	A-10222	2-1/2"	(5)
F	A-10223	3"	(2)
G	A-13151		(4)
H	A-15705		(4)
I	A-17493		(2)

PARTS LIST

1. A-19645 Ball Gate Right.
2. A-19646 Ball Gate Left.
3. D-20632 Plastic Shield Set.
4. Red Pop Bumper D-10435 and A-20820 Cap in Black (4).
5. Red Pop Bumper Skirt (4).
6. A-9374 Yellow Plastic Target.
7. A-20818 Red Drop Target in black (8).
8. A-3722 Ball Guide Rail (3).
9. A-4832 Ball Guide Rail (2).
10. A-6934 Ball Guide Rail (3).
11. A-13782 Ball Guide Rail.
12. A-13798 Ball Snubber Rail (2).
13. A-18070 Ball Guide Rail (4).
14. A-19995 Ball Guide Rail.
15. A-19996 Ball Guide Rail.
16. B-20640 Ball Guide Rail.
17. B-20641 Ball Guide Rail.
18. B-20787 Ball Guide Rail.
19. A-8688 Metal Flat Rail.
20. D-20642 Metal Flat Rail.
21. A-17300 Roll Under Gate.
22. A-20388 Spinning Target.
23. A-16038 Ball Snubber.
24. C-20859 Ramp & Platform Assembly.
25. D-20894 Tube Assembly.
26. A-15636 Left Kicking Rubber.
27. A-15638 Right Kicking Rubber.
28. A-20362 Flat Rail Clip (use with D-20642) (2).
29. C-13150 White Jumbo Flipper (4).
30. C-17492 White Siamese Post (3).
31. A-9395 Red Plastic Guide Rail (2).
32. A-9396 Red Plastic Guide Rail (3).
33. A-20645 Plastic Tubing.
34. A-15838 Ball Contact Kicker.
35. A-20950 Ball Snubber.

C-11561 Clear 1" High Post (39).

CON. = CONSERVATIVE.
LIB. = LIBERAL.

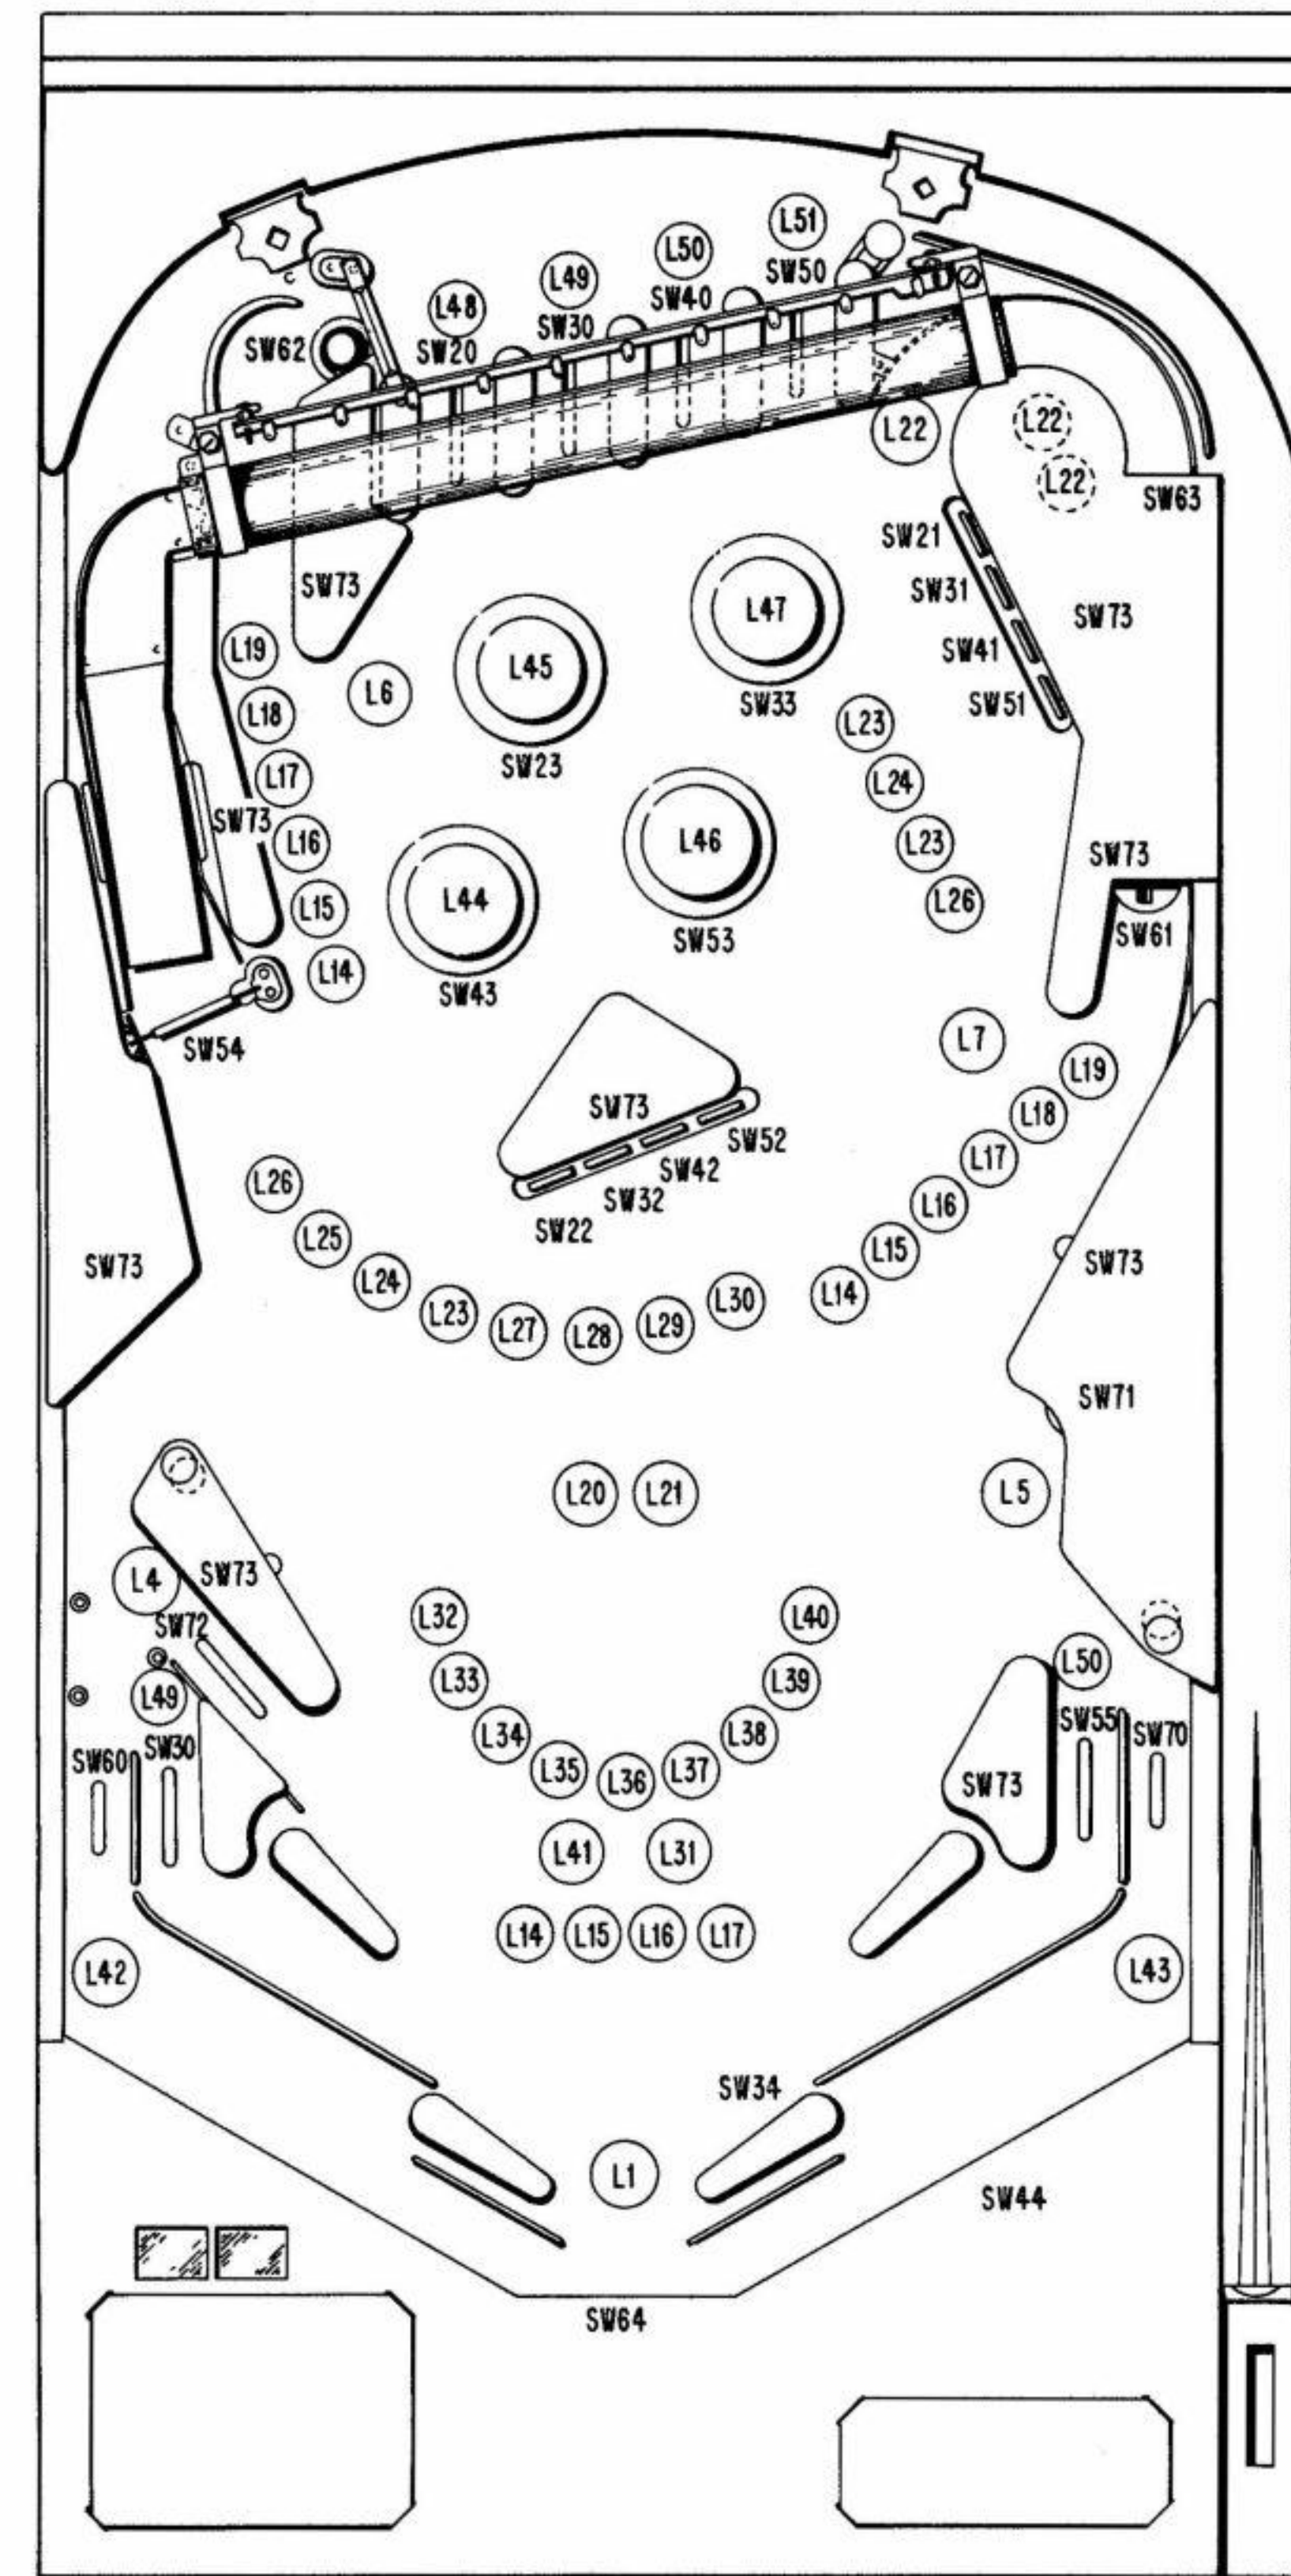

PLAYBOARD SWITCH AND LAMP ASSIGNMENTS

SWITCH MATRIX NUMBER

SWITCH ASSIGNMENT


- | | |
|----|-------------------------|
| 20 | "M" Rollover |
| 21 | #1 Right Drop Target |
| 22 | #1 Center Drop Target |
| 23 | Left Top Pop Bumper |
| 30 | "A" Rollovers (2) |
| 31 | #2 Right Drop Target |
| 32 | #2 Center Drop Target |
| 33 | Right Top Pop Bumper |
| 34 | Right Flipper |
| 40 | "R" Rollover (Top) |
| 41 | #3 Right Drop Target |
| 42 | #3 Center Drop Target |
| 43 | Left Bottom Pop Bumper |
| 44 | Trough |
| 50 | "S" Rollover |
| 51 | #4 Right Drop Target |
| 52 | #4 Center Drop Target |
| 53 | Right Bottom Pop Bumper |
| 54 | Spin Target |
| 55 | "R" Rollover (Bottom) |
| 57 | Tilt |
| 60 | left Outlane Rollover |
| 61 | Right Warbase Hole |
| 62 | Left Warbase Hole |
| 63 | Right Launch Lane |
| 64 | Outhole |
| 70 | Right Outlane Rollover |
| 71 | Right Extra Ball Target |
| 72 | Extra Ball Rollover |
| 73 | 10-Point Switches (131) |

LAMP NUMBER

LAMP ASSIGNMENT

- | | |
|-----|---|
| L1 | Shoot Again |
| L4 | Left Extra Ball Rollover |
| L5 | Right Extra Ball Target |
| L6 | Left Captive (Hole) Activate Warbase |
| L7 | Right Captive (Hole) Activate Warebase |
| L14 | 2X (3) Multipliers |
| L15 | 3X (3) Multipliers |
| L16 | 4X (3) Multipliers |
| L17 | 5X (3) Multipliers |
| L18 | Left and Right Extra Ball (Hole) |
| L19 | Left and Right Special (Hole) |
| L20 | 3X Scoring |
| L21 | 5X Scoring |
| L22 | Launch (Right Shooter) (3) |
| L23 | #1 Right Drop Target and #1 Spin Target |
| L24 | #2 Right Drop Target and #2 Spin Target |
| L25 | #3 Right Drop Target and #3 Spin Target |
| L26 | #4 Right Drop Target and #4 Spin Target |
| L27 | #1 Center Drop Target |
| L28 | #2 Center Drop Target |
| L29 | #3 Center Drop Target |
| L30 | #4 Center Drop Target |
| L31 | 20,000 Bonus |
| L32 | 1,000 Bonus |
| L33 | 2,000 Bonus |
| L34 | 3,000 Bonus |
| L35 | 4,000 Bonus |
| L36 | 5,000 Bonus |
| L37 | 6,000 Bonus |
| L38 | 7,000 Bonus |
| L39 | 8,000 Bonus |
| L40 | 9,000 Bonus |
| L41 | 10,000 Bonus |
| L42 | Left Special Rollover |
| L43 | Right Special Rollover |
| L44 | Left Bottom Pop Bumper |
| L45 | Left Top Pop Bumper |
| L46 | Right Bottom Pop Bumper |
| L47 | Right Top Pop Bumper |
| L48 | "M" Rollover |
| L49 | "A" Rollover and Left Return Rollover |
| L50 | "R" Rollover and Right Return Rollover |
| L51 | "S" Rollover |

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

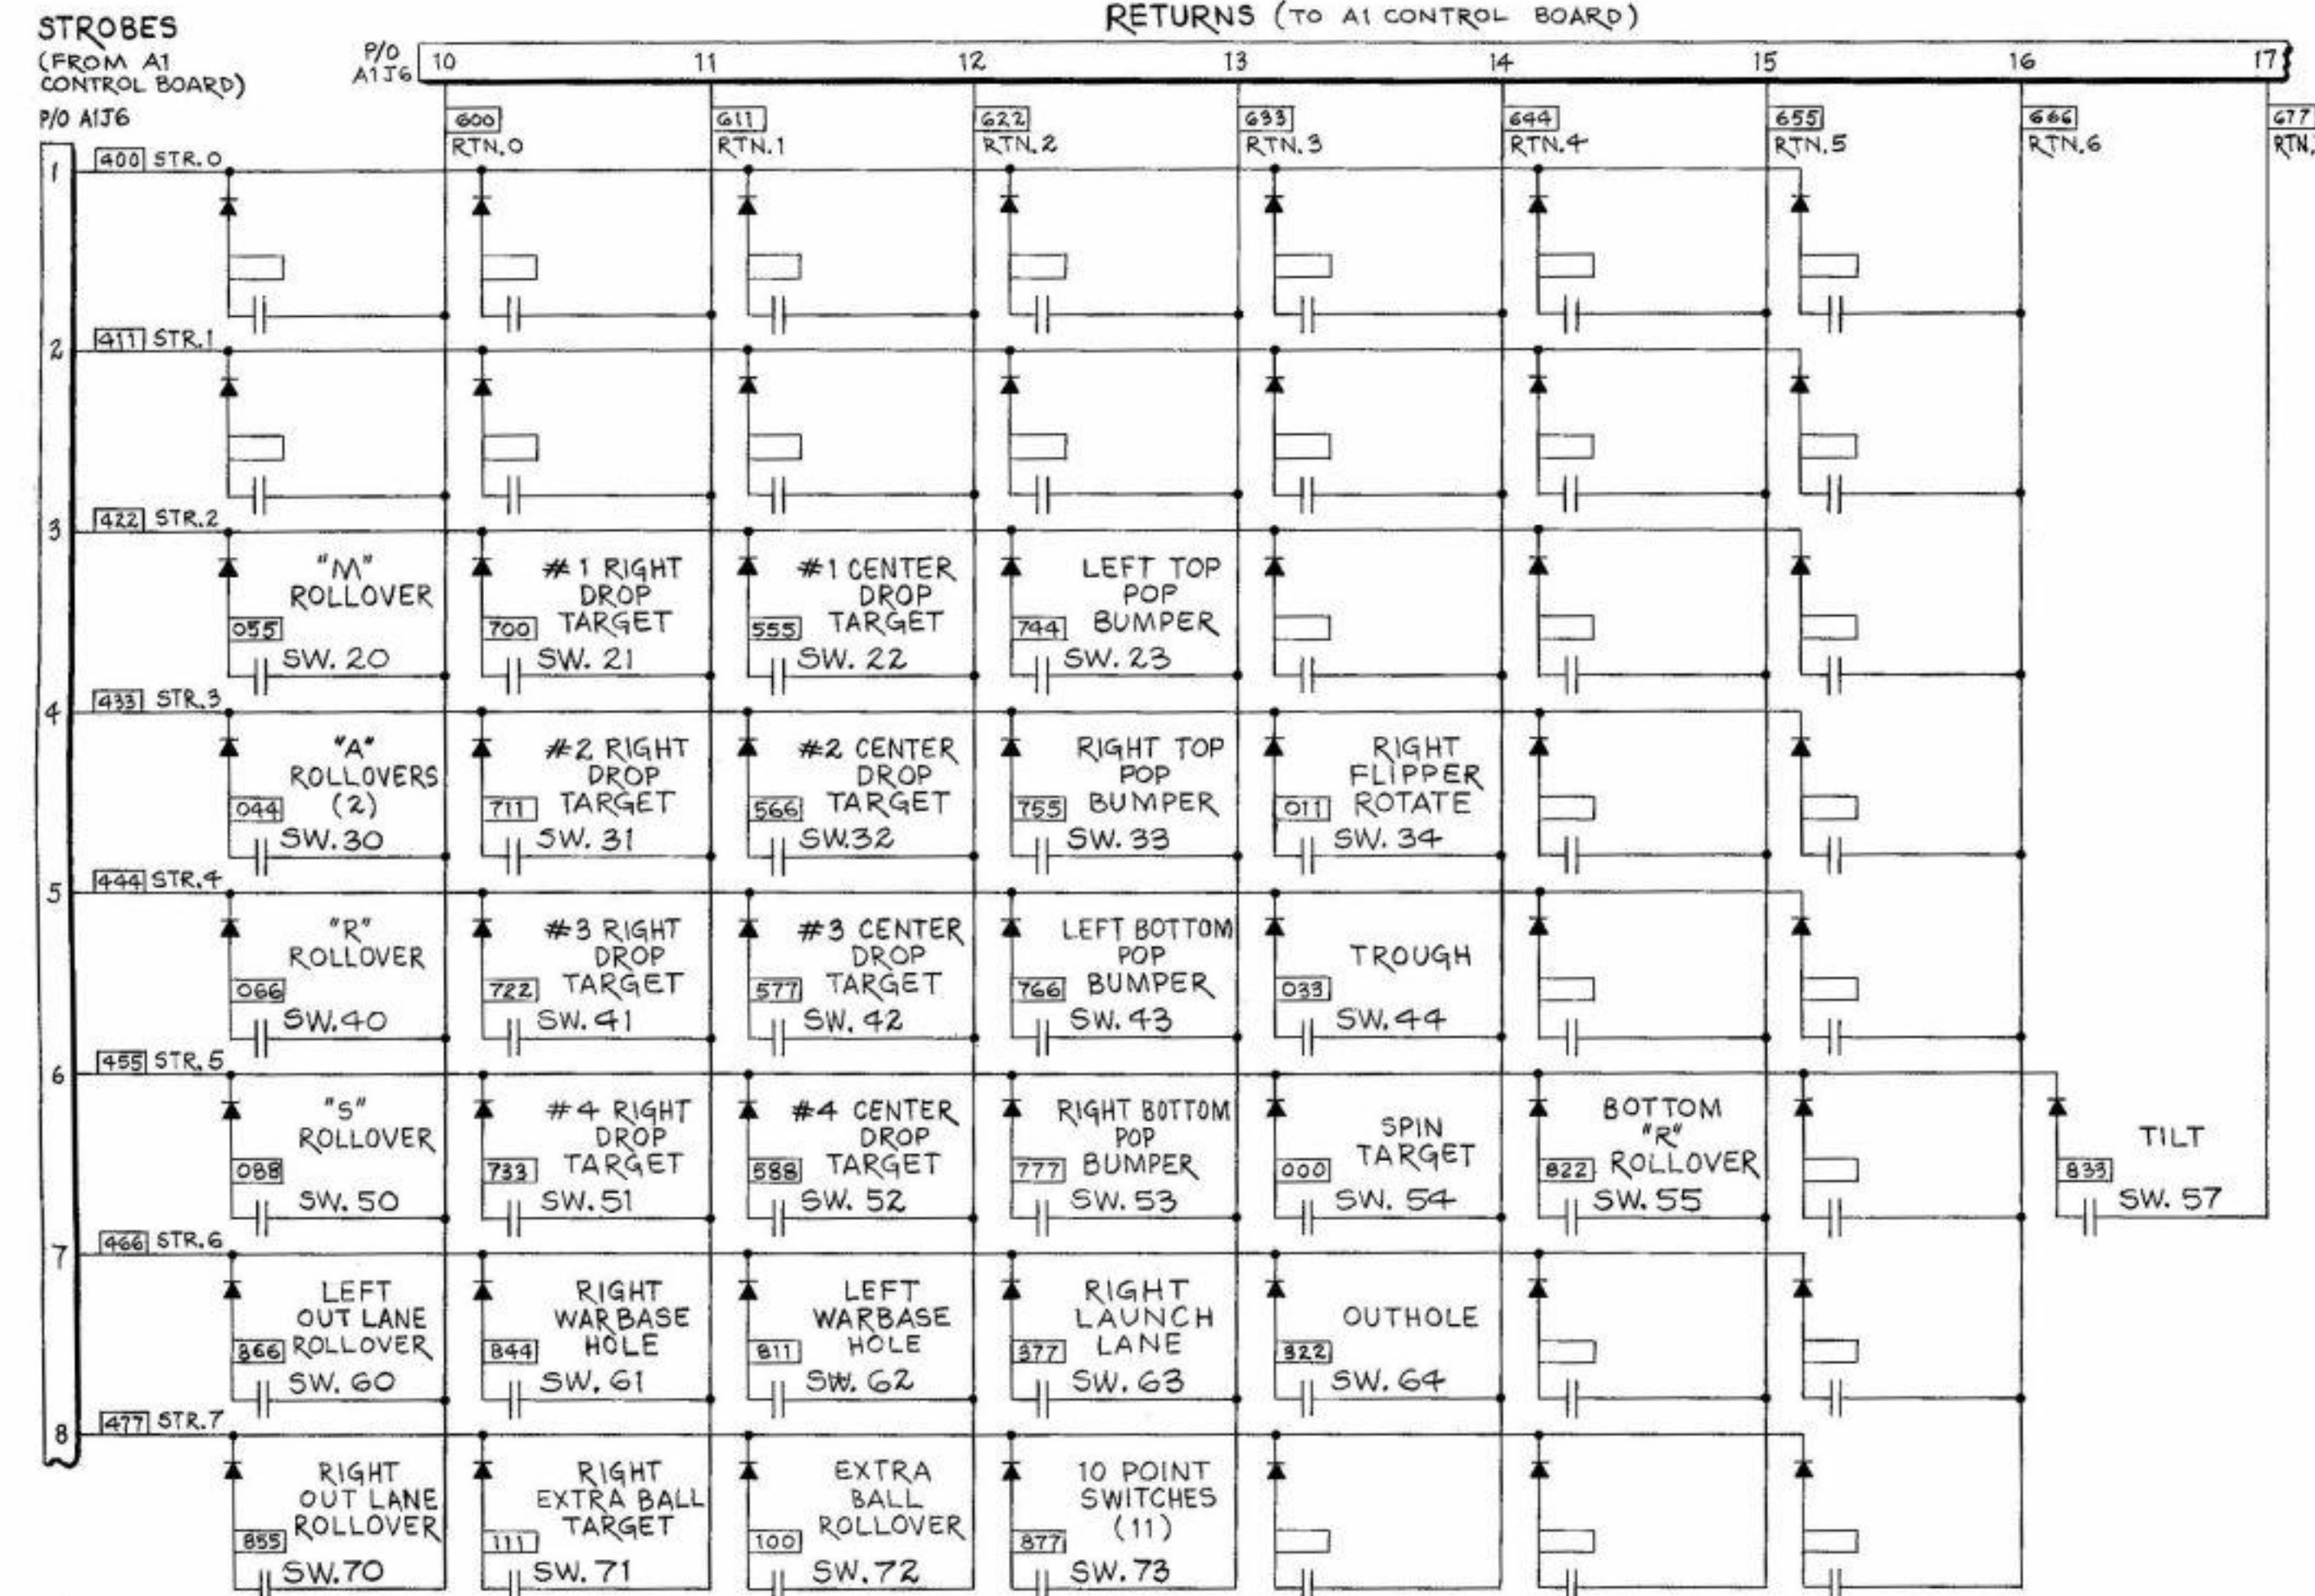


COLOR CODE	
0 BLACK	5 GREEN
1 BROWN	6 BLUE
2 RED	7 PURPLE
3 ORANGE	8 SLATE
4 YELLOW	9 WHITE

NOTE:
 1. ALL DIODES ARE 1N4004.
 2. STROBE 0, STROBE 1 AND RETURN 6 NOT USED.

D. GOTTLIEB & CO.
 TITLE: SWITCH MATRIX
 USED ON: SYSTEM 80, GAME #666
 DRAWN: [Signature] APPROVED DATE: 1-17-81 E-20920

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

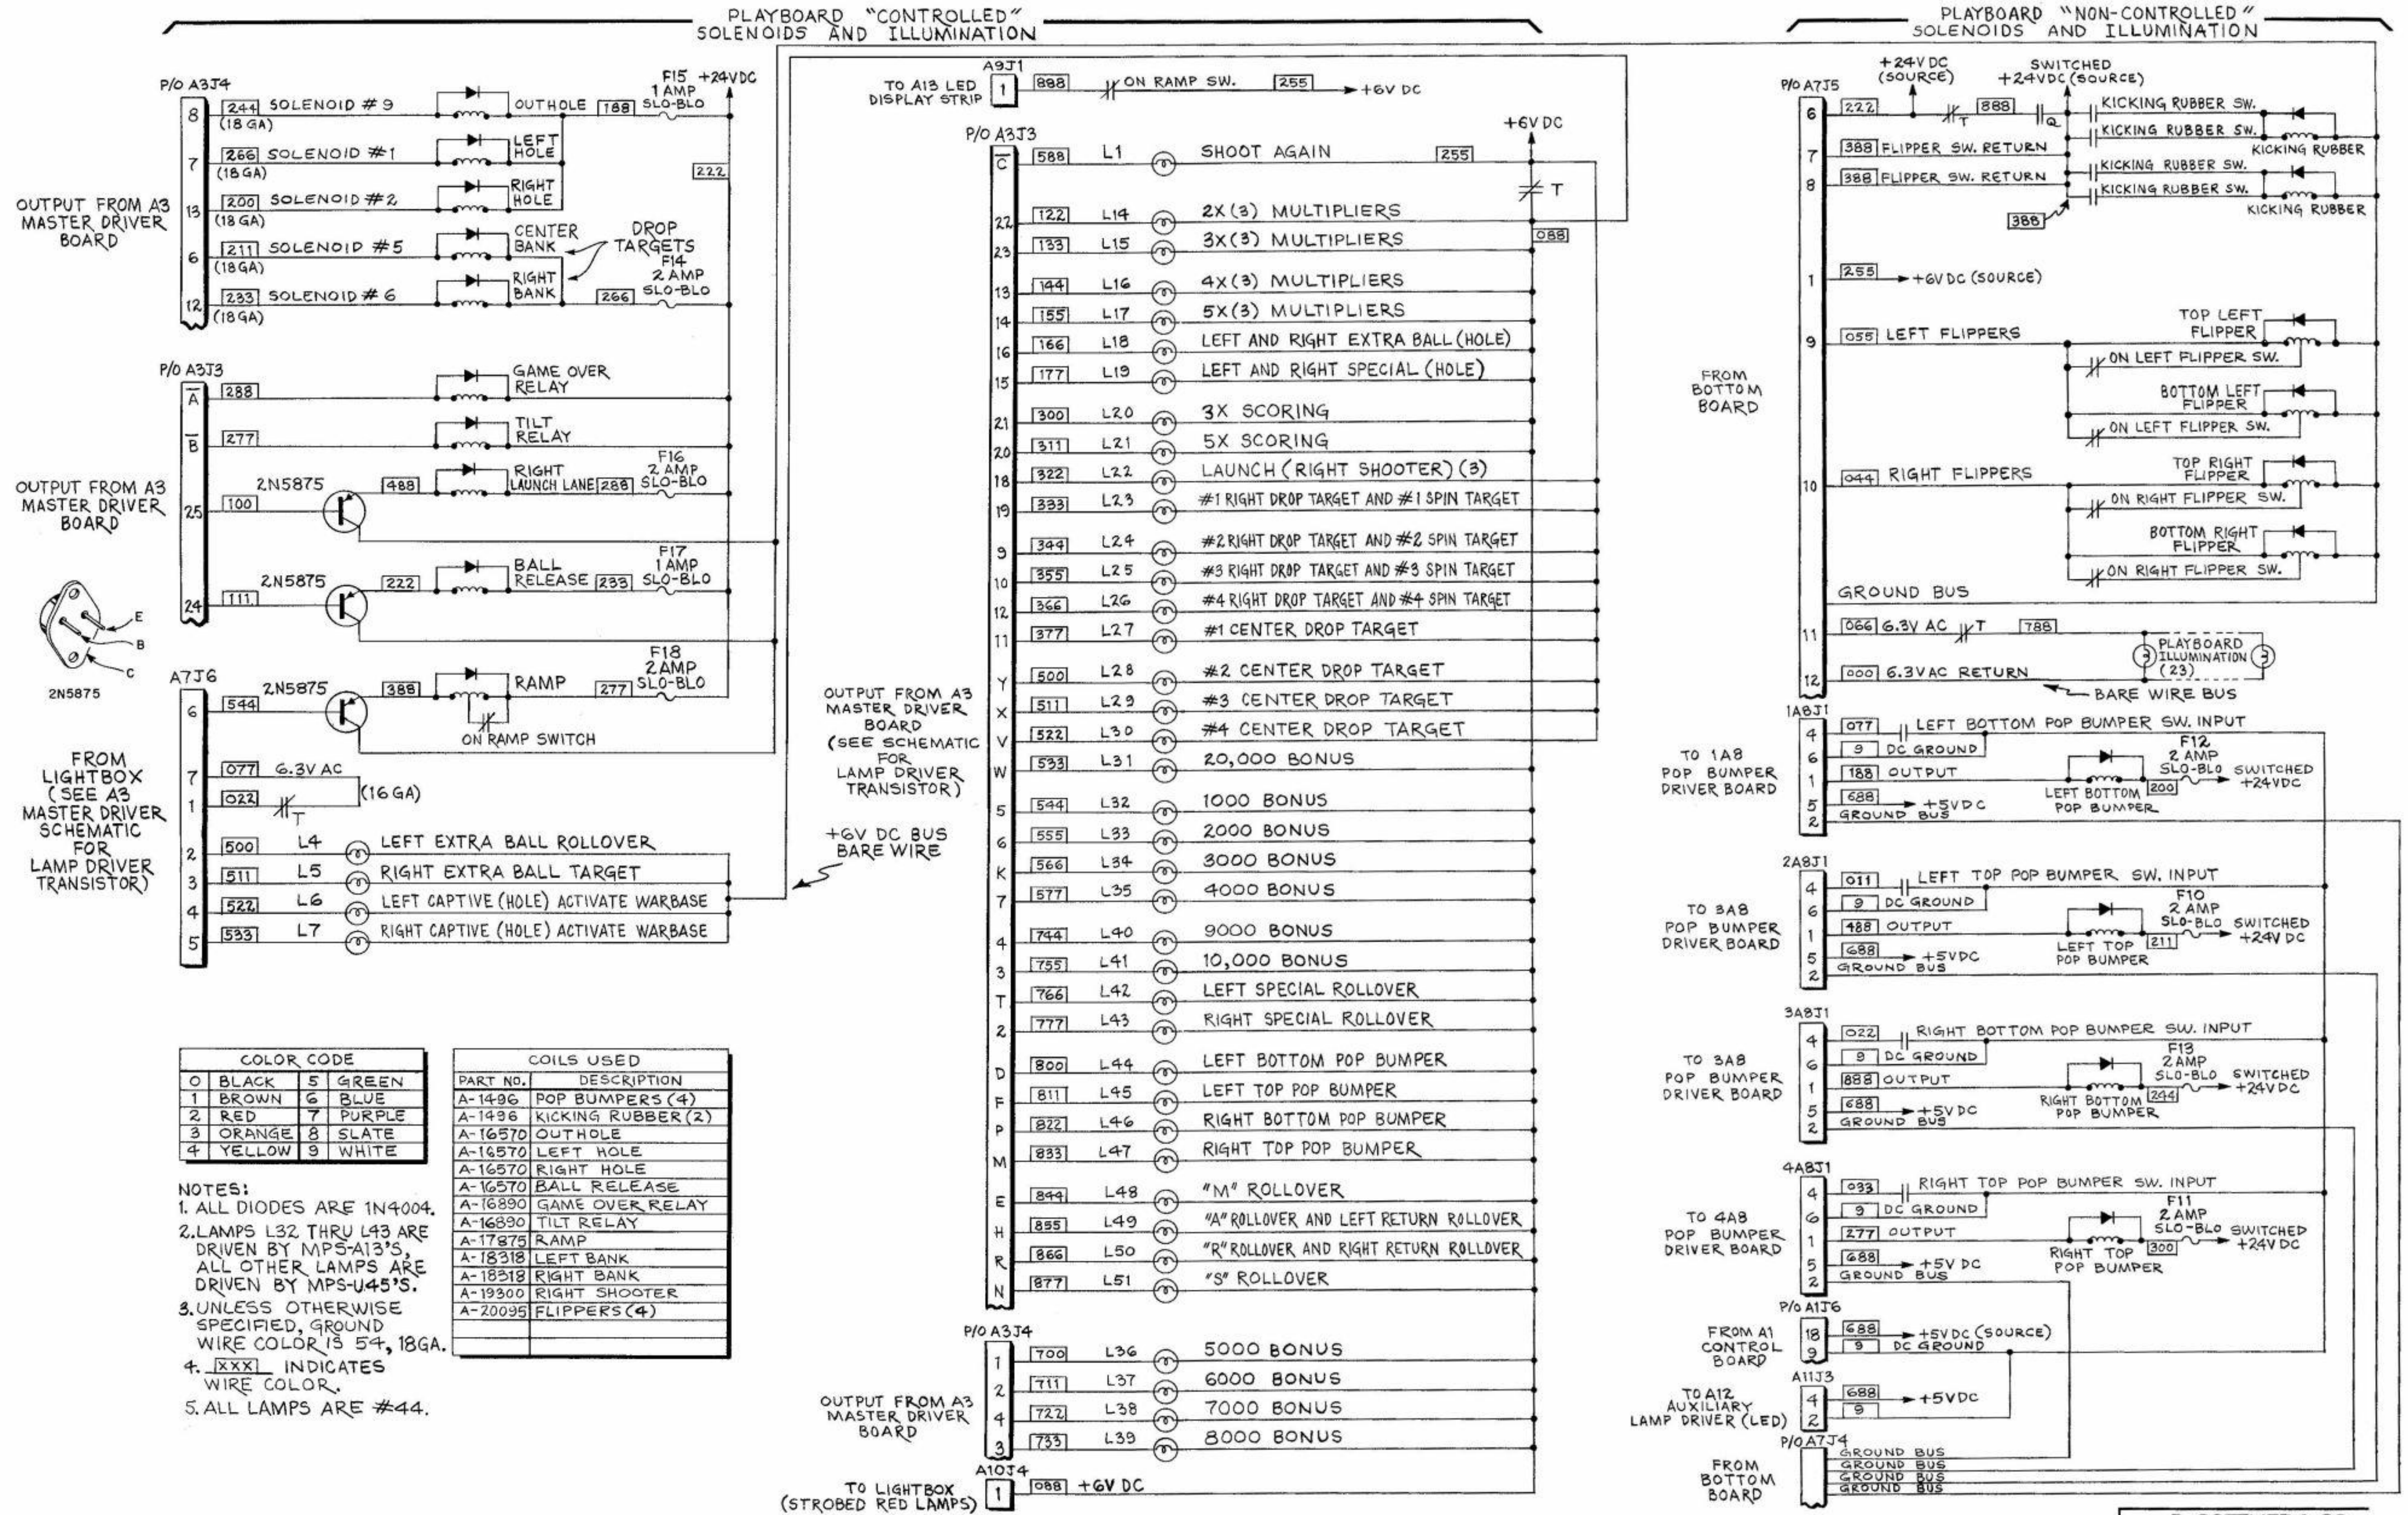

COLOR CODE	
0 BLACK	5 GREEN
1 BROWN	6 BLUE
2 RED	7 PURPLE
3 ORANGE	8 SLATE
4 YELLOW	9 WHITE

COILS USED	
PART NO.	DESCRIPTION
A-1496	POP BUMPER (4)
A-1496	KICKING RUBBER (2)
A-16570	OUT HOLE
A-16570	LEFT HOLE
A-16570	RIGHT HOLE
A-16570	BALL RELEASE
A-16890	GAME OVER RELAY
A-16890	TILT RELAY
A-17875	RAMP
A-18318	LEFT BANK
A-18318	RIGHT BANK
A-19300	RIGHT SHOOTER
A-20095	FLIPPERS (4)

NOTES:
 1. ALL DIODES ARE 1N4004.
 2. LAMPS L32 THRU L43 ARE DRIVEN BY MPS-A13'S. ALL OTHER LAMPS ARE DRIVEN BY MPS-U45'S.
 3. UNLESS OTHERWISE SPECIFIED, GROUND WIRE COLOR IS 54, 18GA.
 4. [XXX] INDICATES WIRE COLOR.
 5. ALL LAMPS ARE #44.



D. GOTTLIEB & CO.
 TITLE: PLAYBOARD SOLENOIDS AND ILLUMINATION
 USED ON: SYSTEM 80, GAME #666
 DRAWN: [Signature] APPROVED DATE: 1-13-81 E-209

SUBJECT: OEM POP BUMPER DRIVER BOARD
FILE: BHPOPBU2.DOC
11/26/94 02:48 PM

All OEM Pop Bumper Driver boards need to be examined to see if a factory rework/upgrade has been made to them. The rework corrects a design error and increases reliability of operation. The diagrams below show the schematic changes and the component locations.



To quickly identify this rework look for: 2 diodes = NOT reworked, or, 1 diode and 1 jumper wire = reworked.

ORIGINAL DESIGN / UNMODIFIED

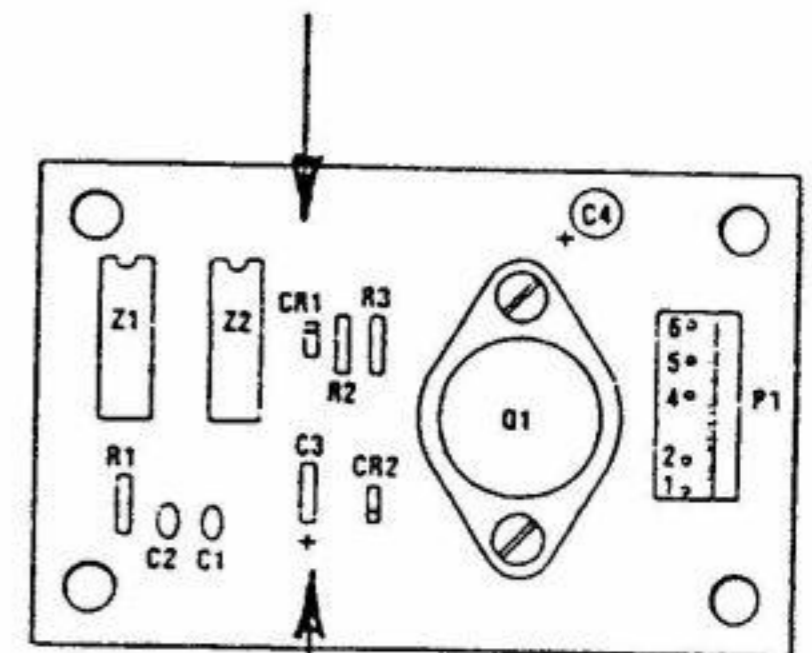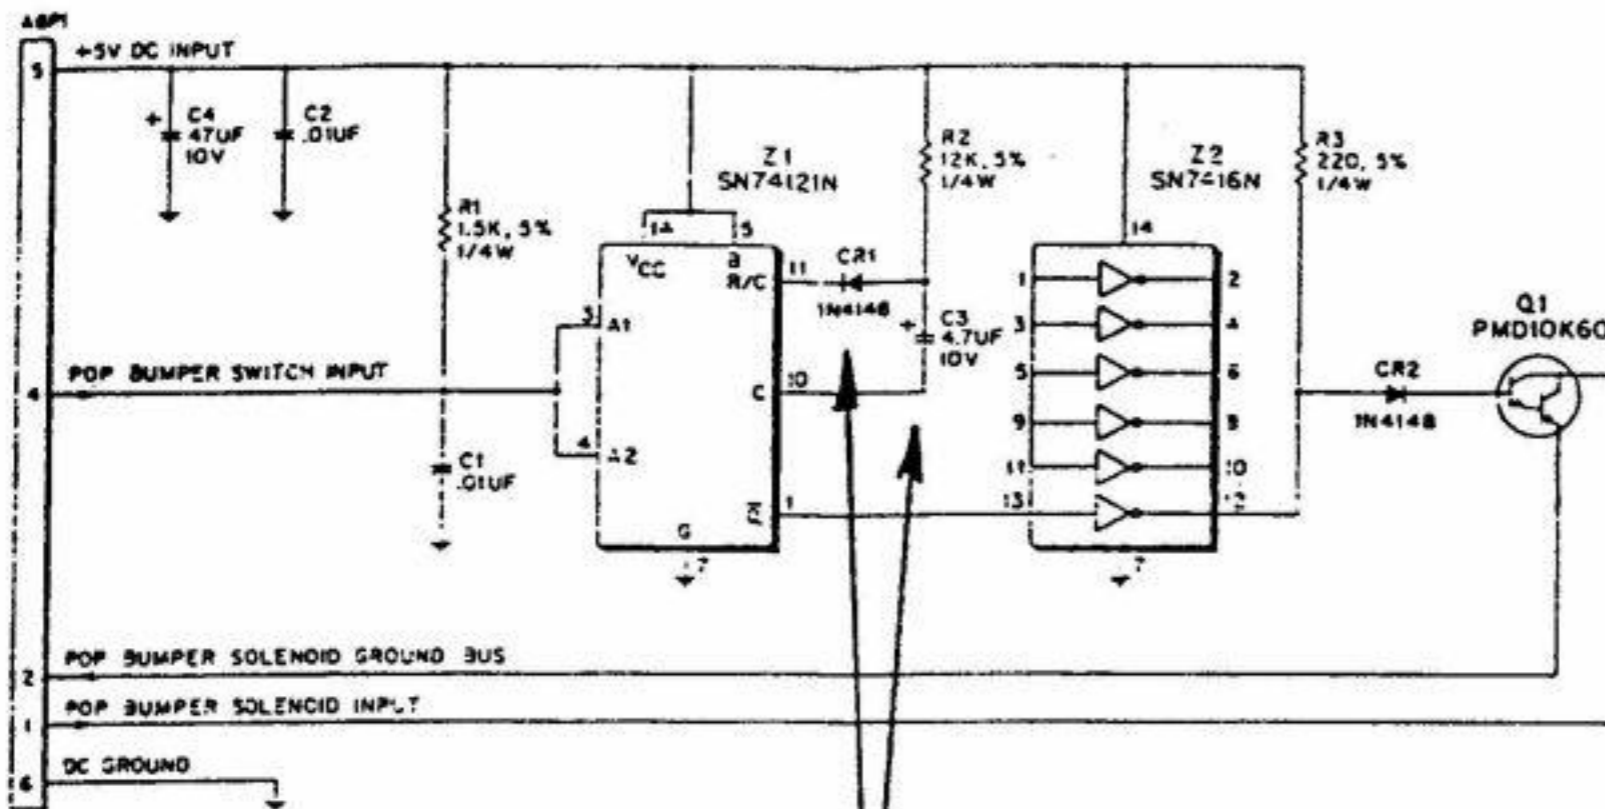

NOTE CHANGES!


NOTE!

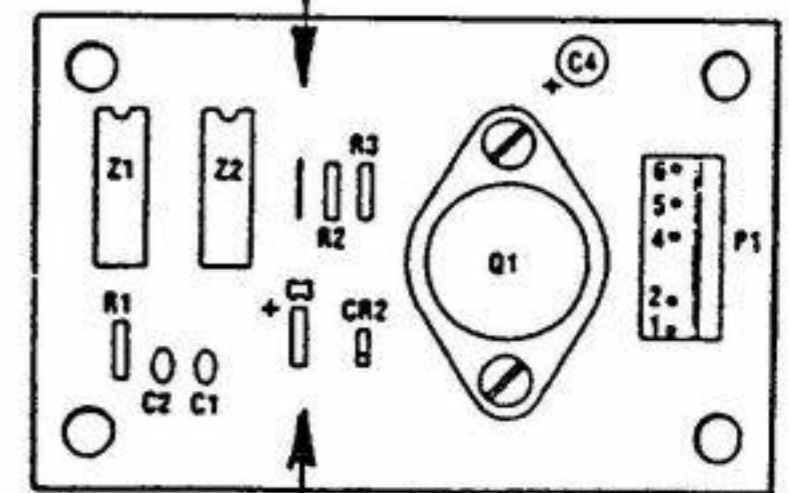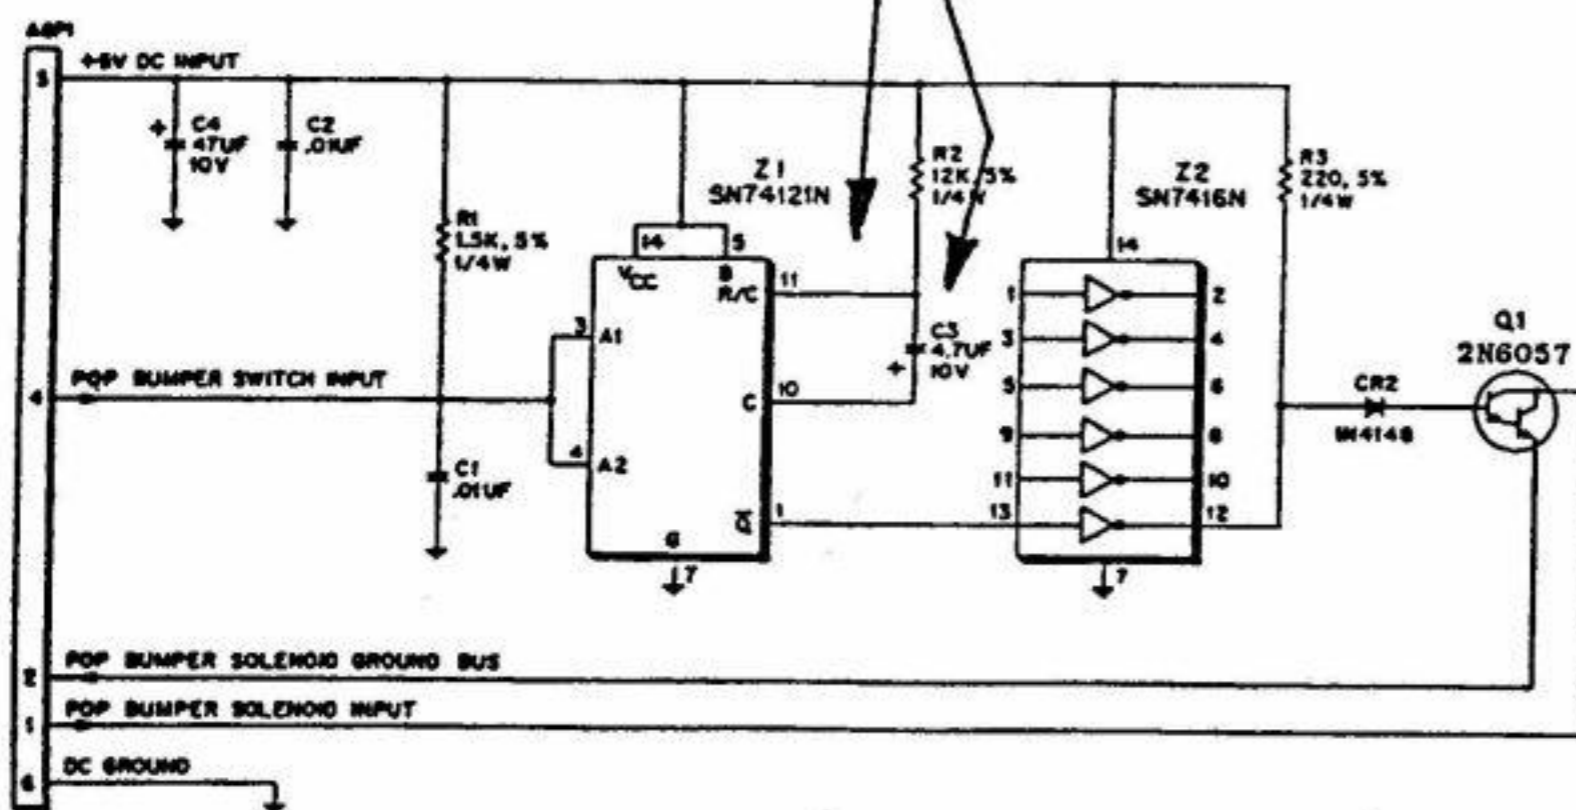

FINAL DESIGN / MODIFIED


NOTE! THE CAPACITOR MUST BE REPLACED NOT SIMPLY REVERSED AND RE-USED!

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

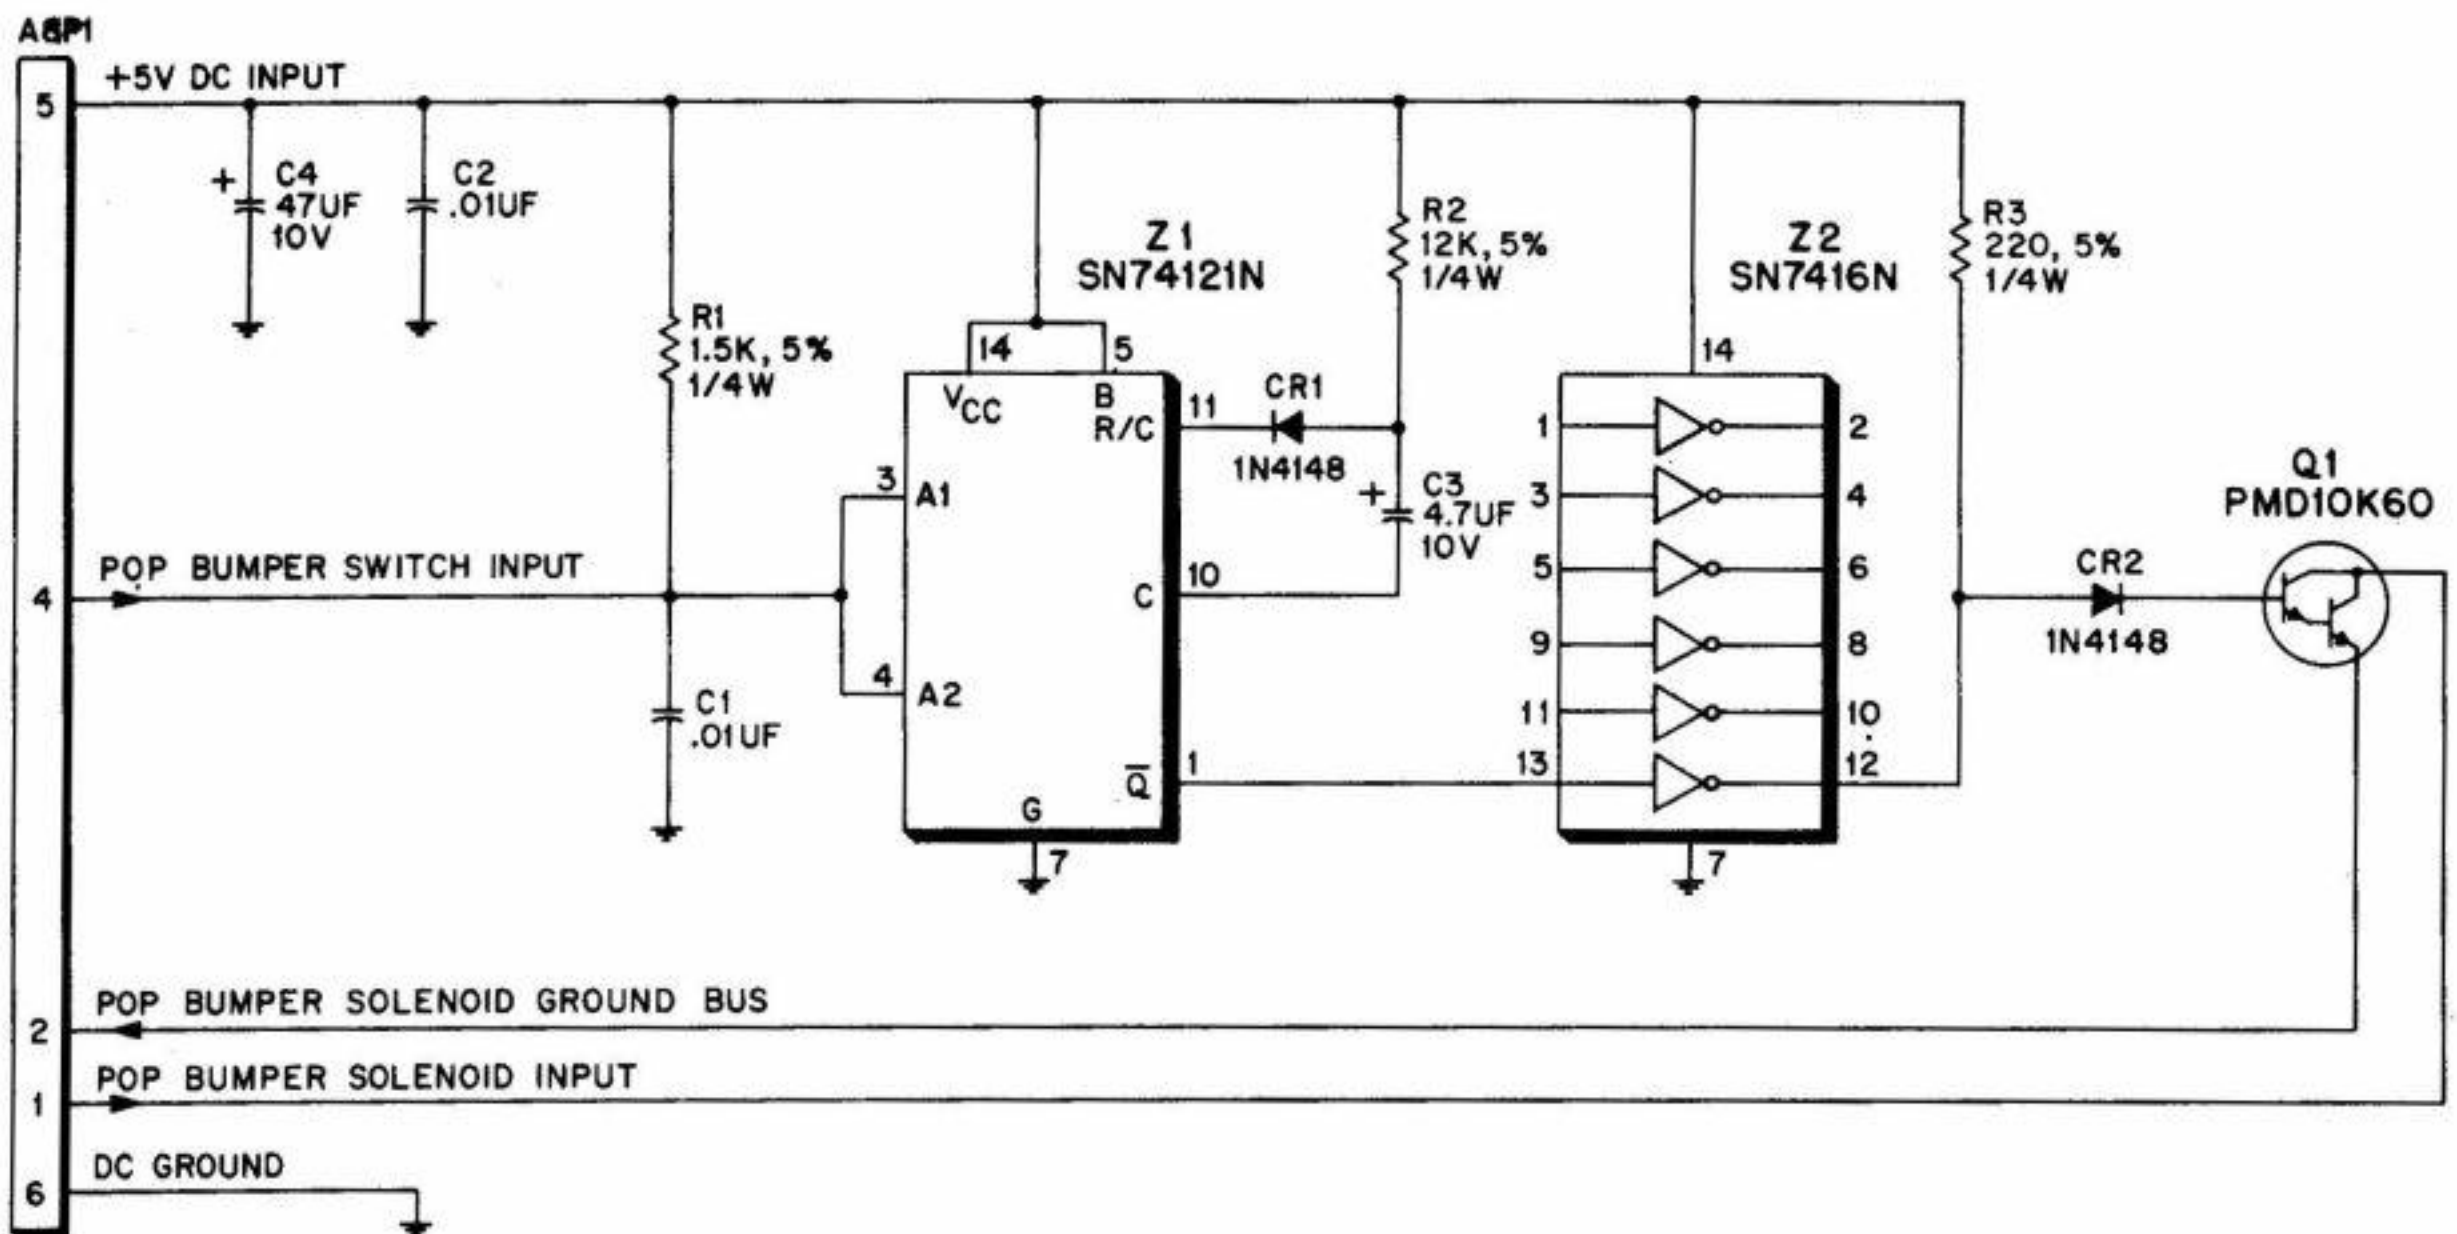

D. GOTTLIEB & CO.			
TITLE POP BUMPER DRIVER BOARD (A8)			
USED ON SYSTEM 80			
DRAWN BY	APPROVED BY	DATE	D-20923
<i>A.P.S.</i>	<i>B.A.M.</i>	2-9-81	


POP BUMPER DRIVER BOARD (A8) COMPONENT LOCATION

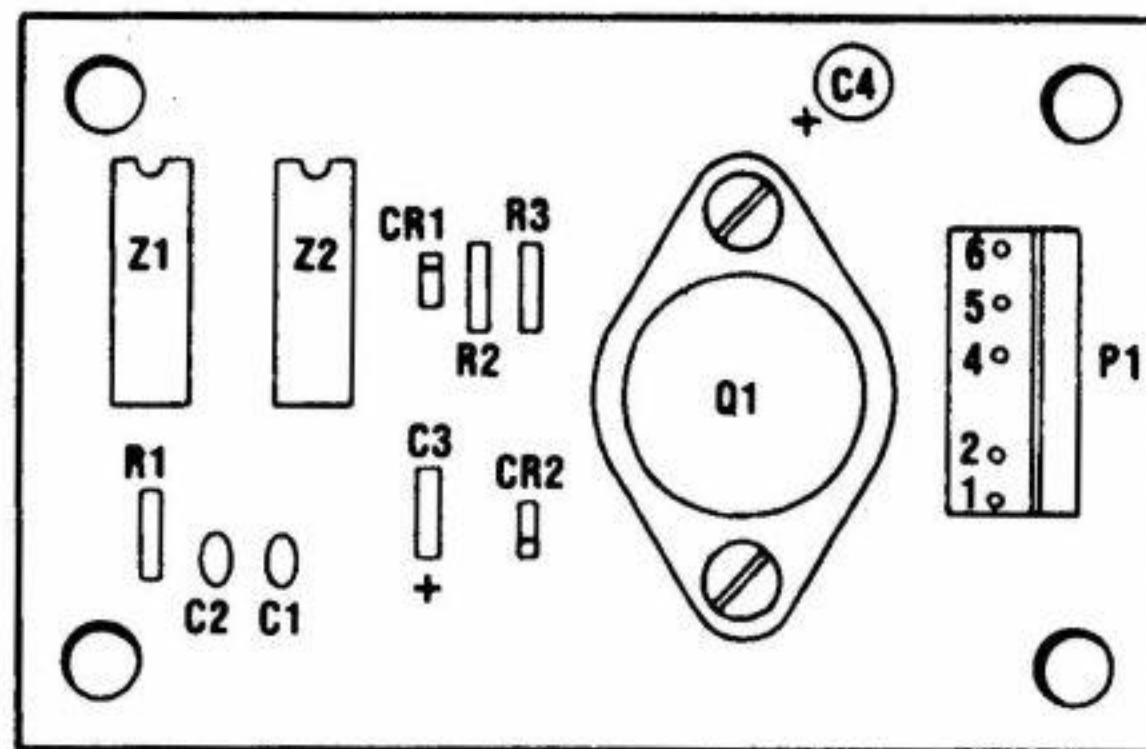

POP BUMPER DRIVER BOARD (A8) PARTS LIST


REFERENCE	DESCRIPTION	PART NUMBER
C1, C2	Capacitor, .01 mfd., 20%, 100V	
C3	Capacitor, 4.7 mfd., 10%, 10V	
C4	Capacitor, 47 mfd., 10V	
CR1, CR2	Diode	1N4148
P1	Connector	09-65-1061
R1	Resistor, 1.5K ohm, 5%, 1/4W	
R2	Resistor, 12K ohm, 5%, 1/4W	
R3	Resistor, 220 ohm, 1/4W, 5%	
Q1	Transistor—LAMBDA	PMD10K60
Z1	IC	SN74121N
Z2	IC	SN7416N

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS CORRECTED

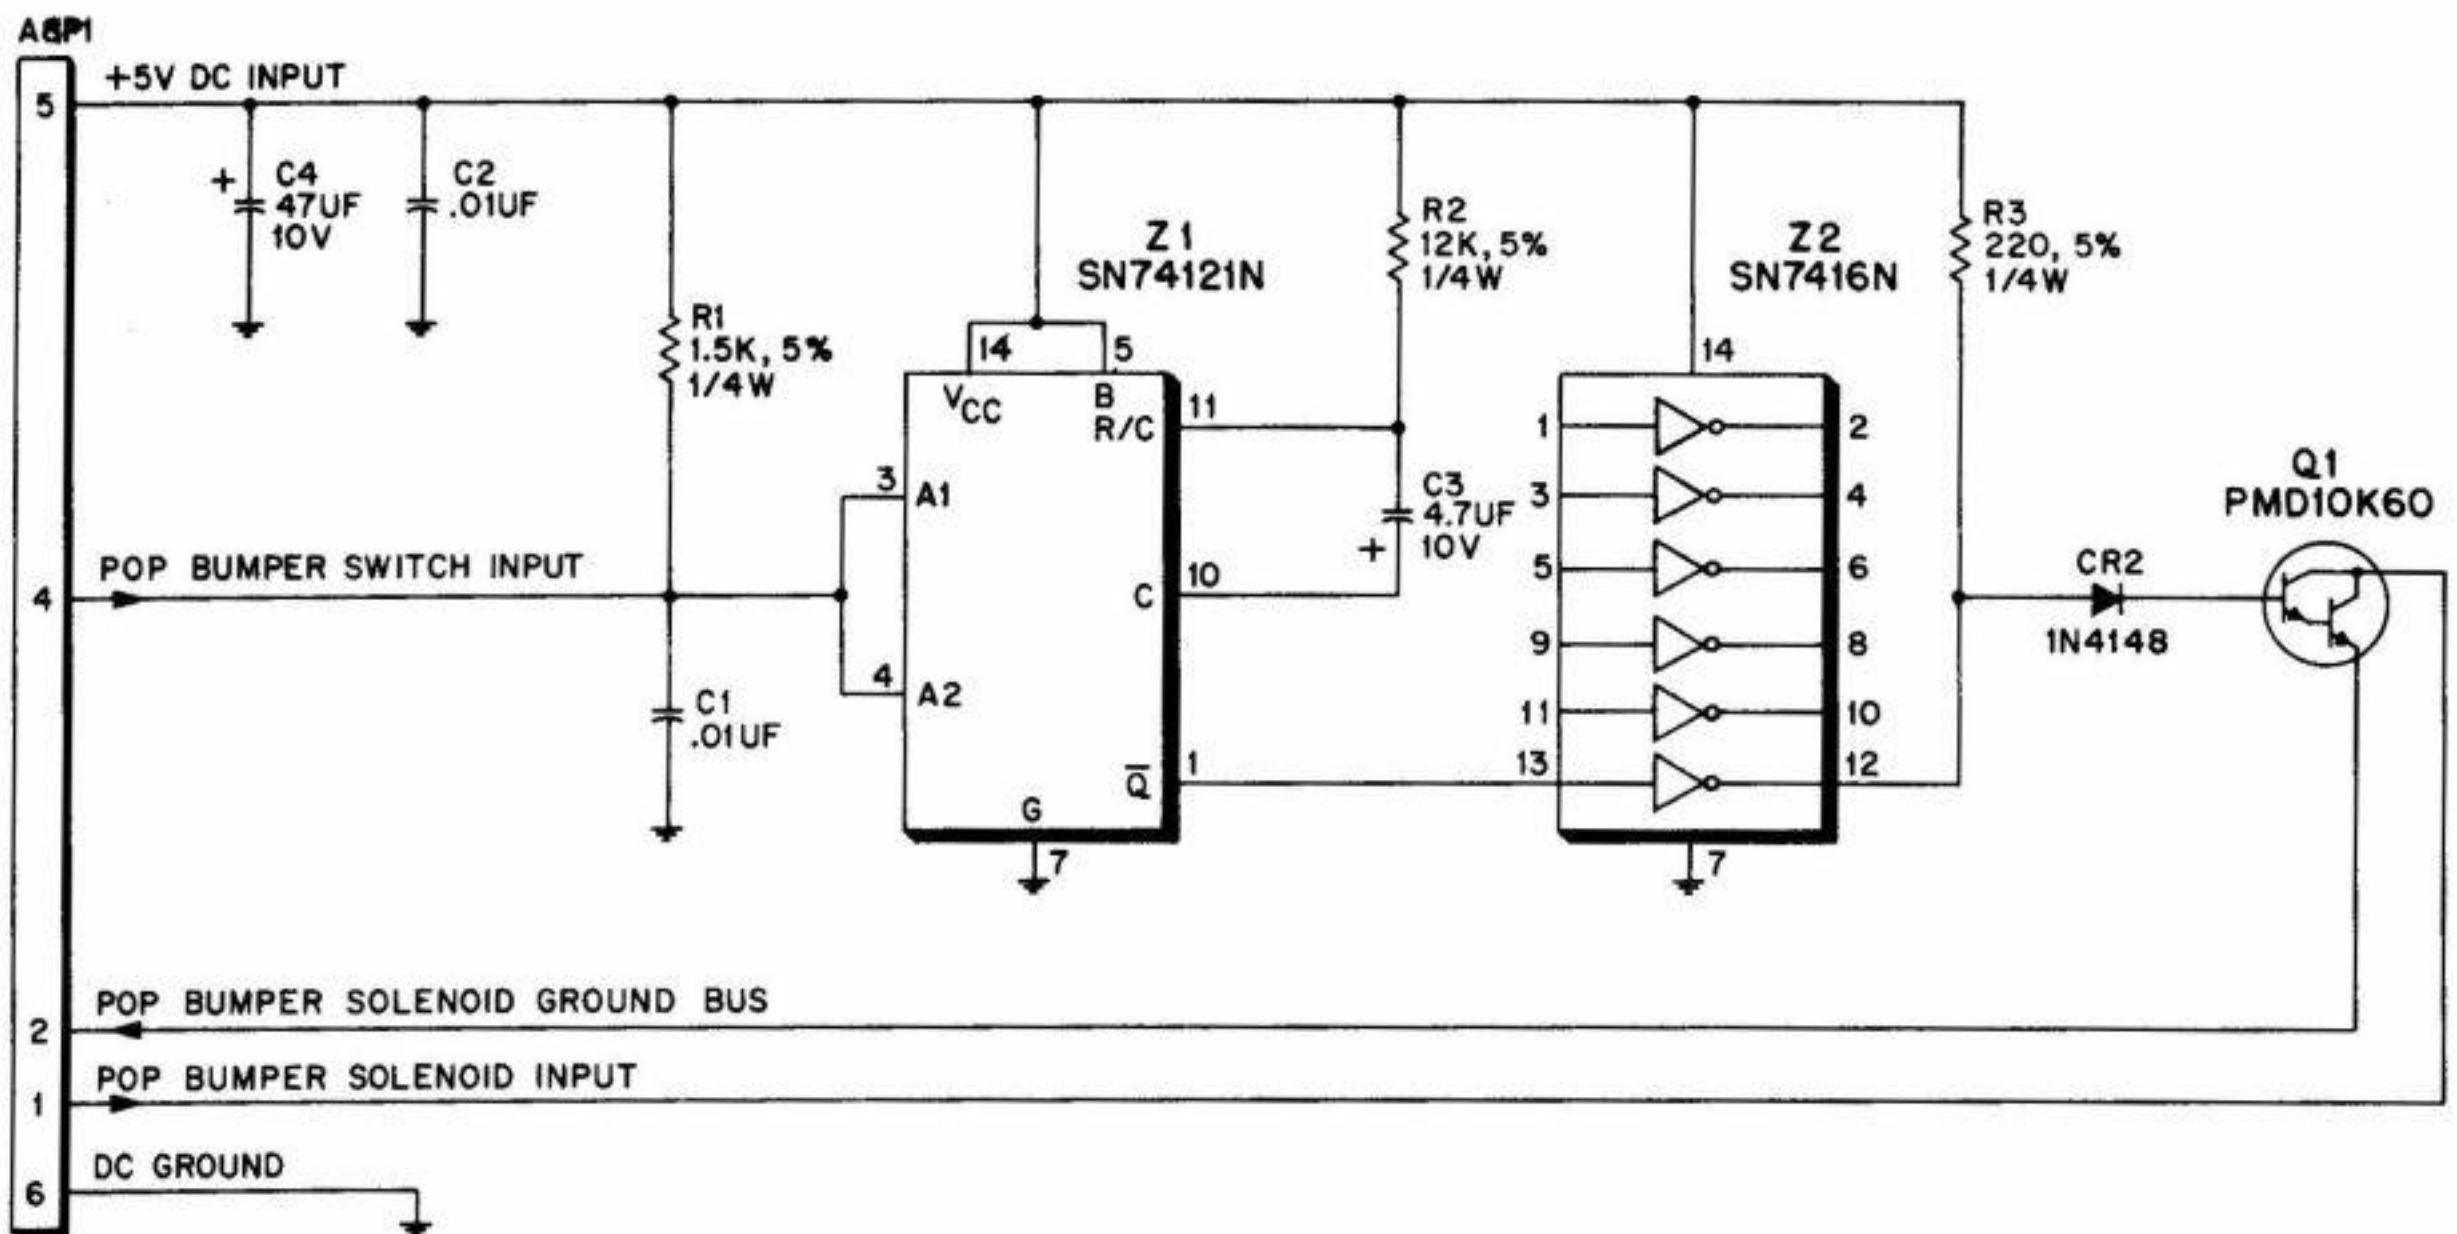

D. GOTTLIEB & CO.			
TITLE POP BUMPER DRIVER BOARD (A8)			
USED ON SYSTEM 80			
DRAWN BY	APPROVED BY	DATE	D-20923
<i>A.P.S.</i>	<i>B.A.M.</i>	2-9-81	


POP BUMPER DRIVER BOARD (A8) COMPONENT LOCATION

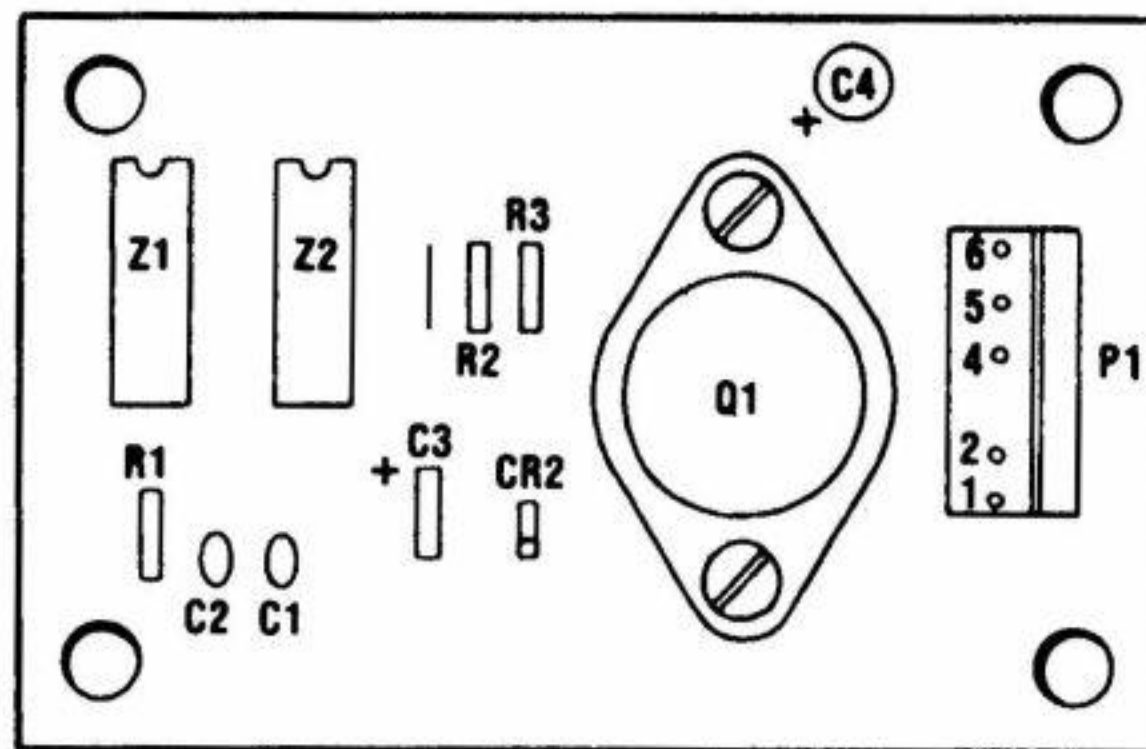

POP BUMPER DRIVER BOARD (A8) PARTS LIST

REFERENCE	DESCRIPTION	PART NUMBER
C1, C2	Capacitor, .01 mfd., 20%, 100V	
C3	Capacitor, 4.7 mfd., 10%, 10V	
C4	Capacitor, 47 mfd., 10V	
CR1, CR2	Diode	1N4148
P1	Connector	09-65-1061
R1	Resistor, 1.5K ohm, 5%, 1/4W	
R2	Resistor, 12K ohm, 5%, 1/4W	
R3	Resistor, 220 ohm, 1/4W, 5%	
Q1	Transistor—LAMBDA	PMD10K60
Z1	IC	SN74121N
Z2	IC	SN7416N


X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

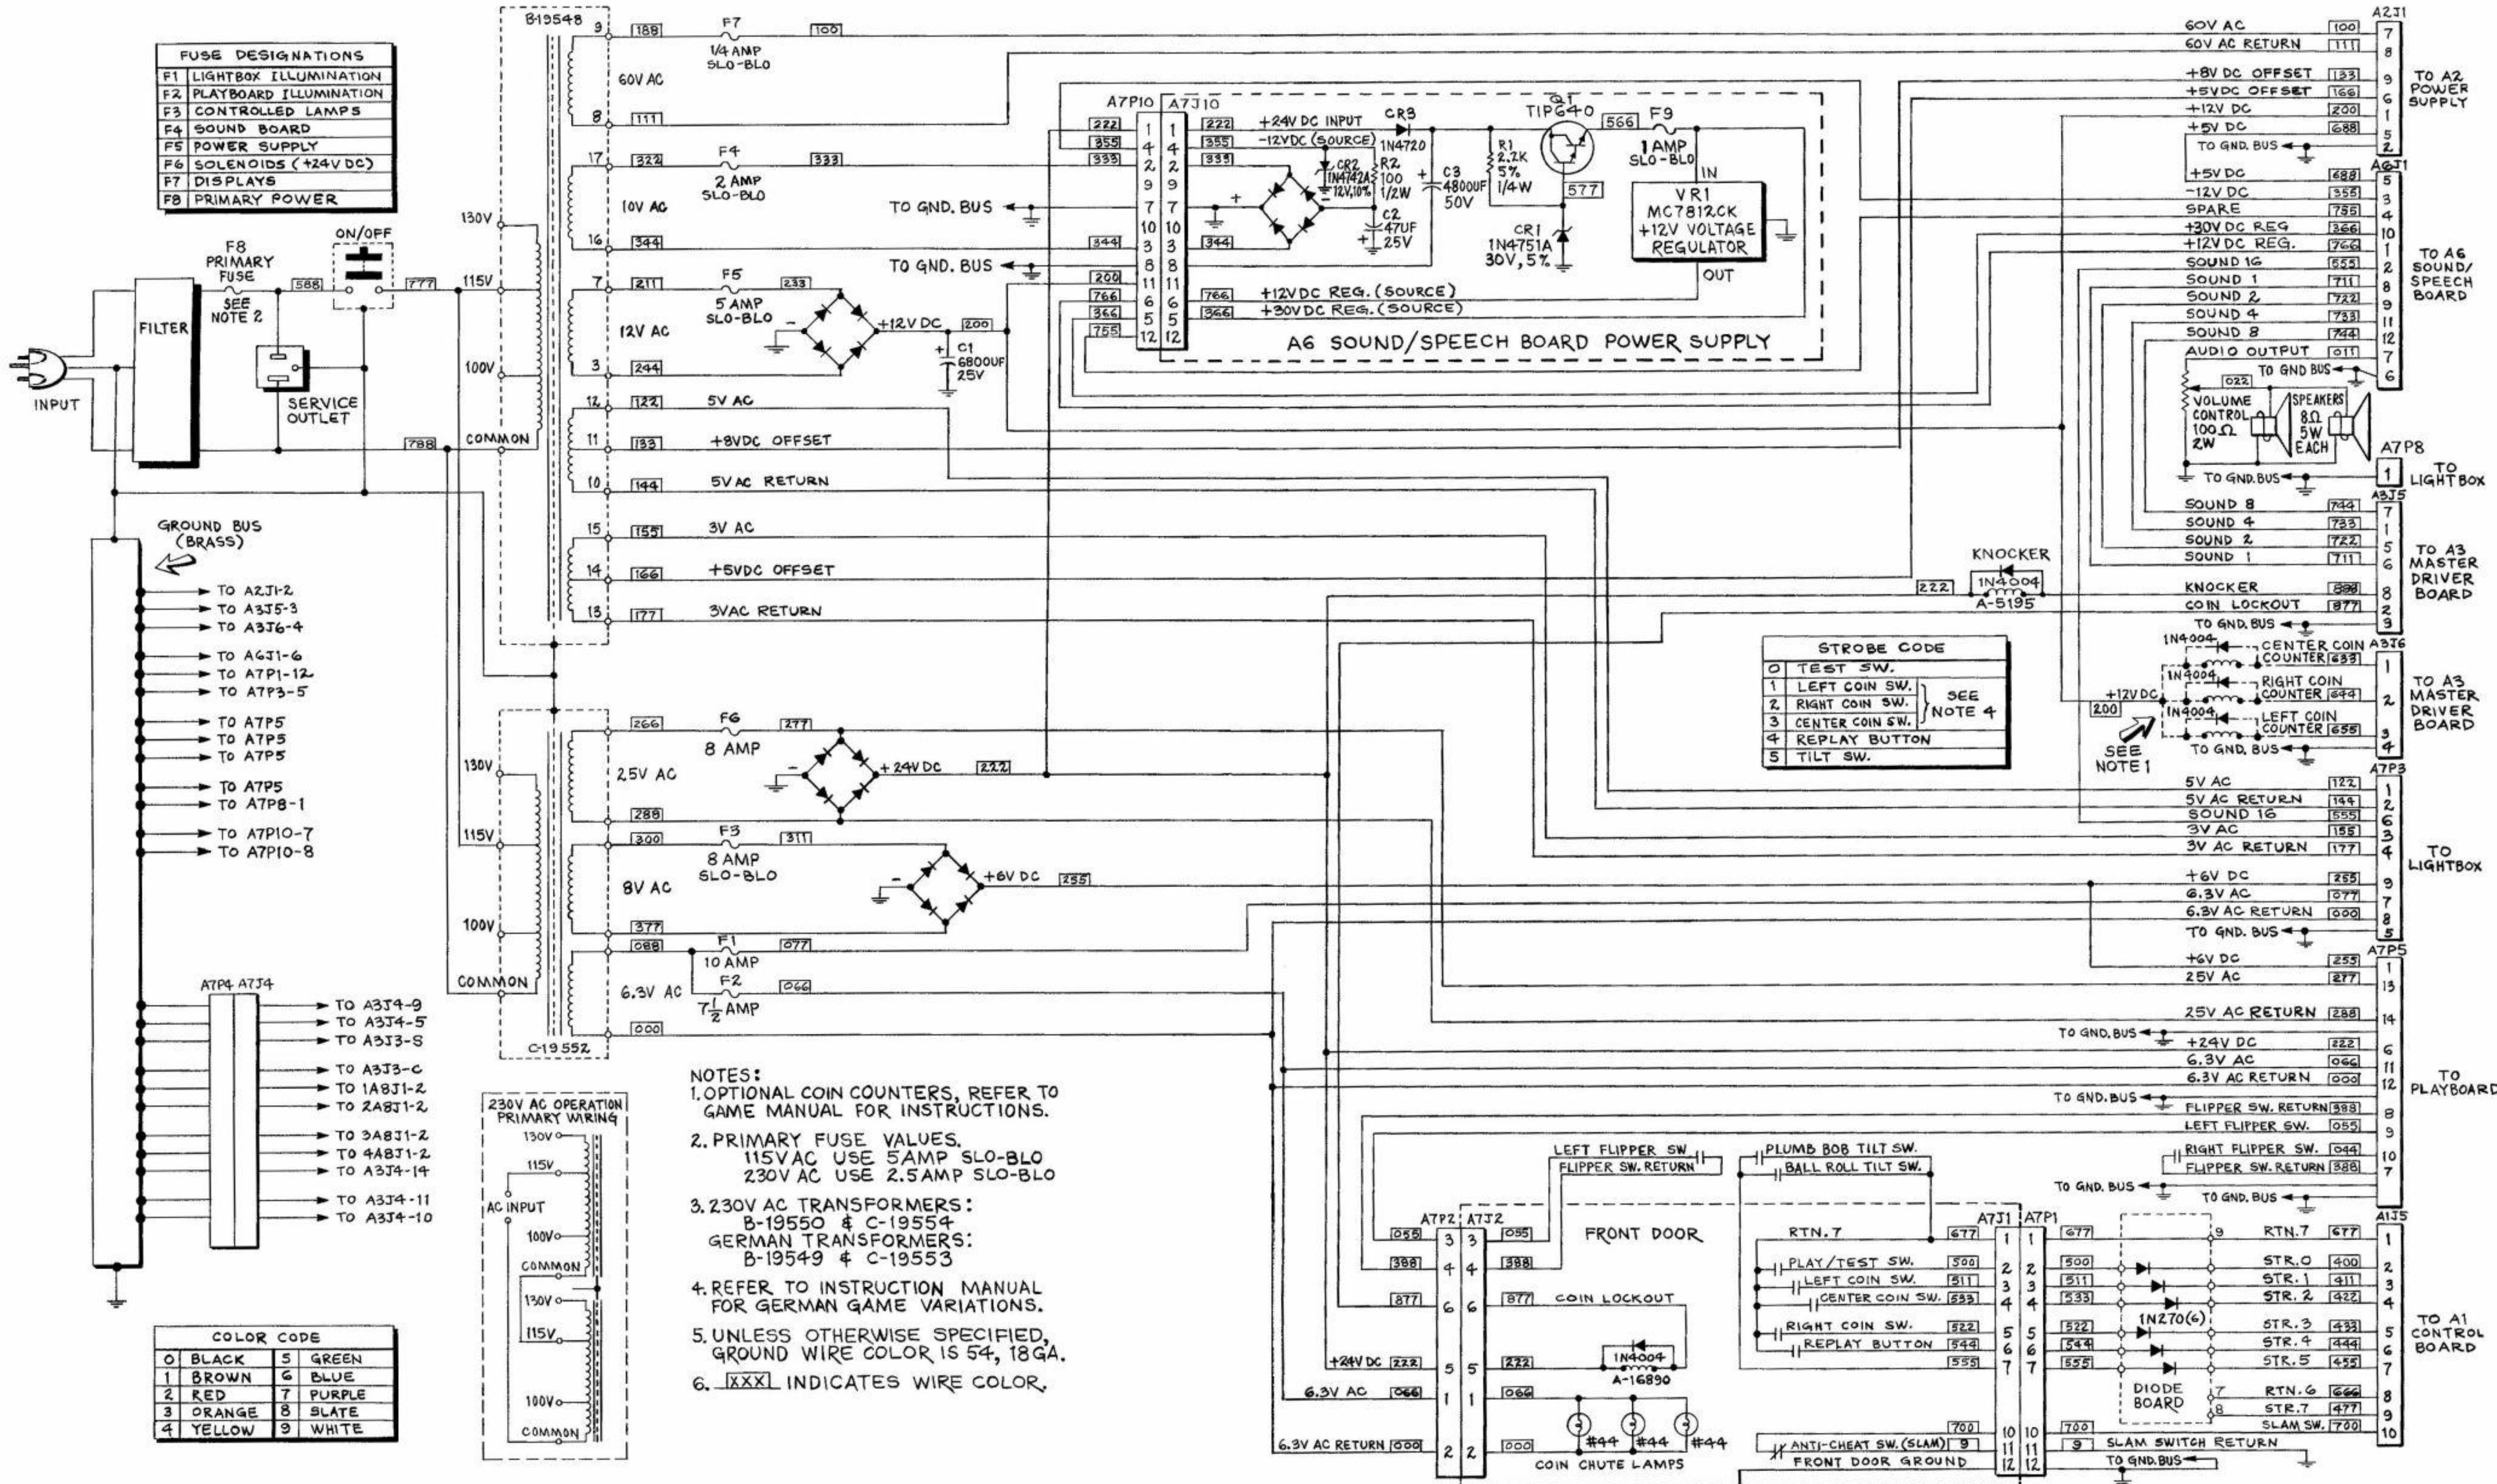

- NOTES:**
- OPTIONAL COIN COUNTERS, REFER TO GAME MANUAL FOR INSTRUCTIONS.
 - PRIMARY FUSE VALUES:
115VAC USE 5AMP SLO-BLO
230V AC USE 2.5AMP SLO-BLO
 - 230V AC TRANSFORMERS:
B-19550 & C-19554
GERMAN TRANSFORMERS:
B-19549 & C-19553
 - REFER TO INSTRUCTION MANUAL FOR GERMAN GAME VARIATIONS.
 - UNLESS OTHERWISE SPECIFIED, GROUND WIRE COLOR IS 54, 18 GA.
 - XXXX INDICATES WIRE COLOR.


FUSE DESIGNATIONS	
F1	LIGHTBOX ILLUMINATION
F2	PLAYBOARD ILLUMINATION
F3	CONTROLLED LAMPS
F4	SOUND BOARD
F5	POWER SUPPLY
F6	SOLENOIDS (+24V DC)
F7	DISPLAYS
F8	PRIMARY POWER

COLOR CODE			
0	BLACK	5	GREEN
1	BROWN	6	BLUE
2	RED	7	PURPLE
3	ORANGE	8	SLATE
4	YELLOW	9	WHITE

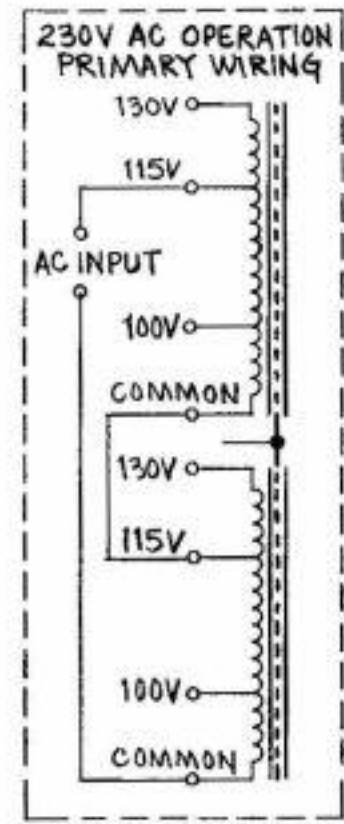


X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

POWER SUPPLY (A2) COMPONENT LOCATION

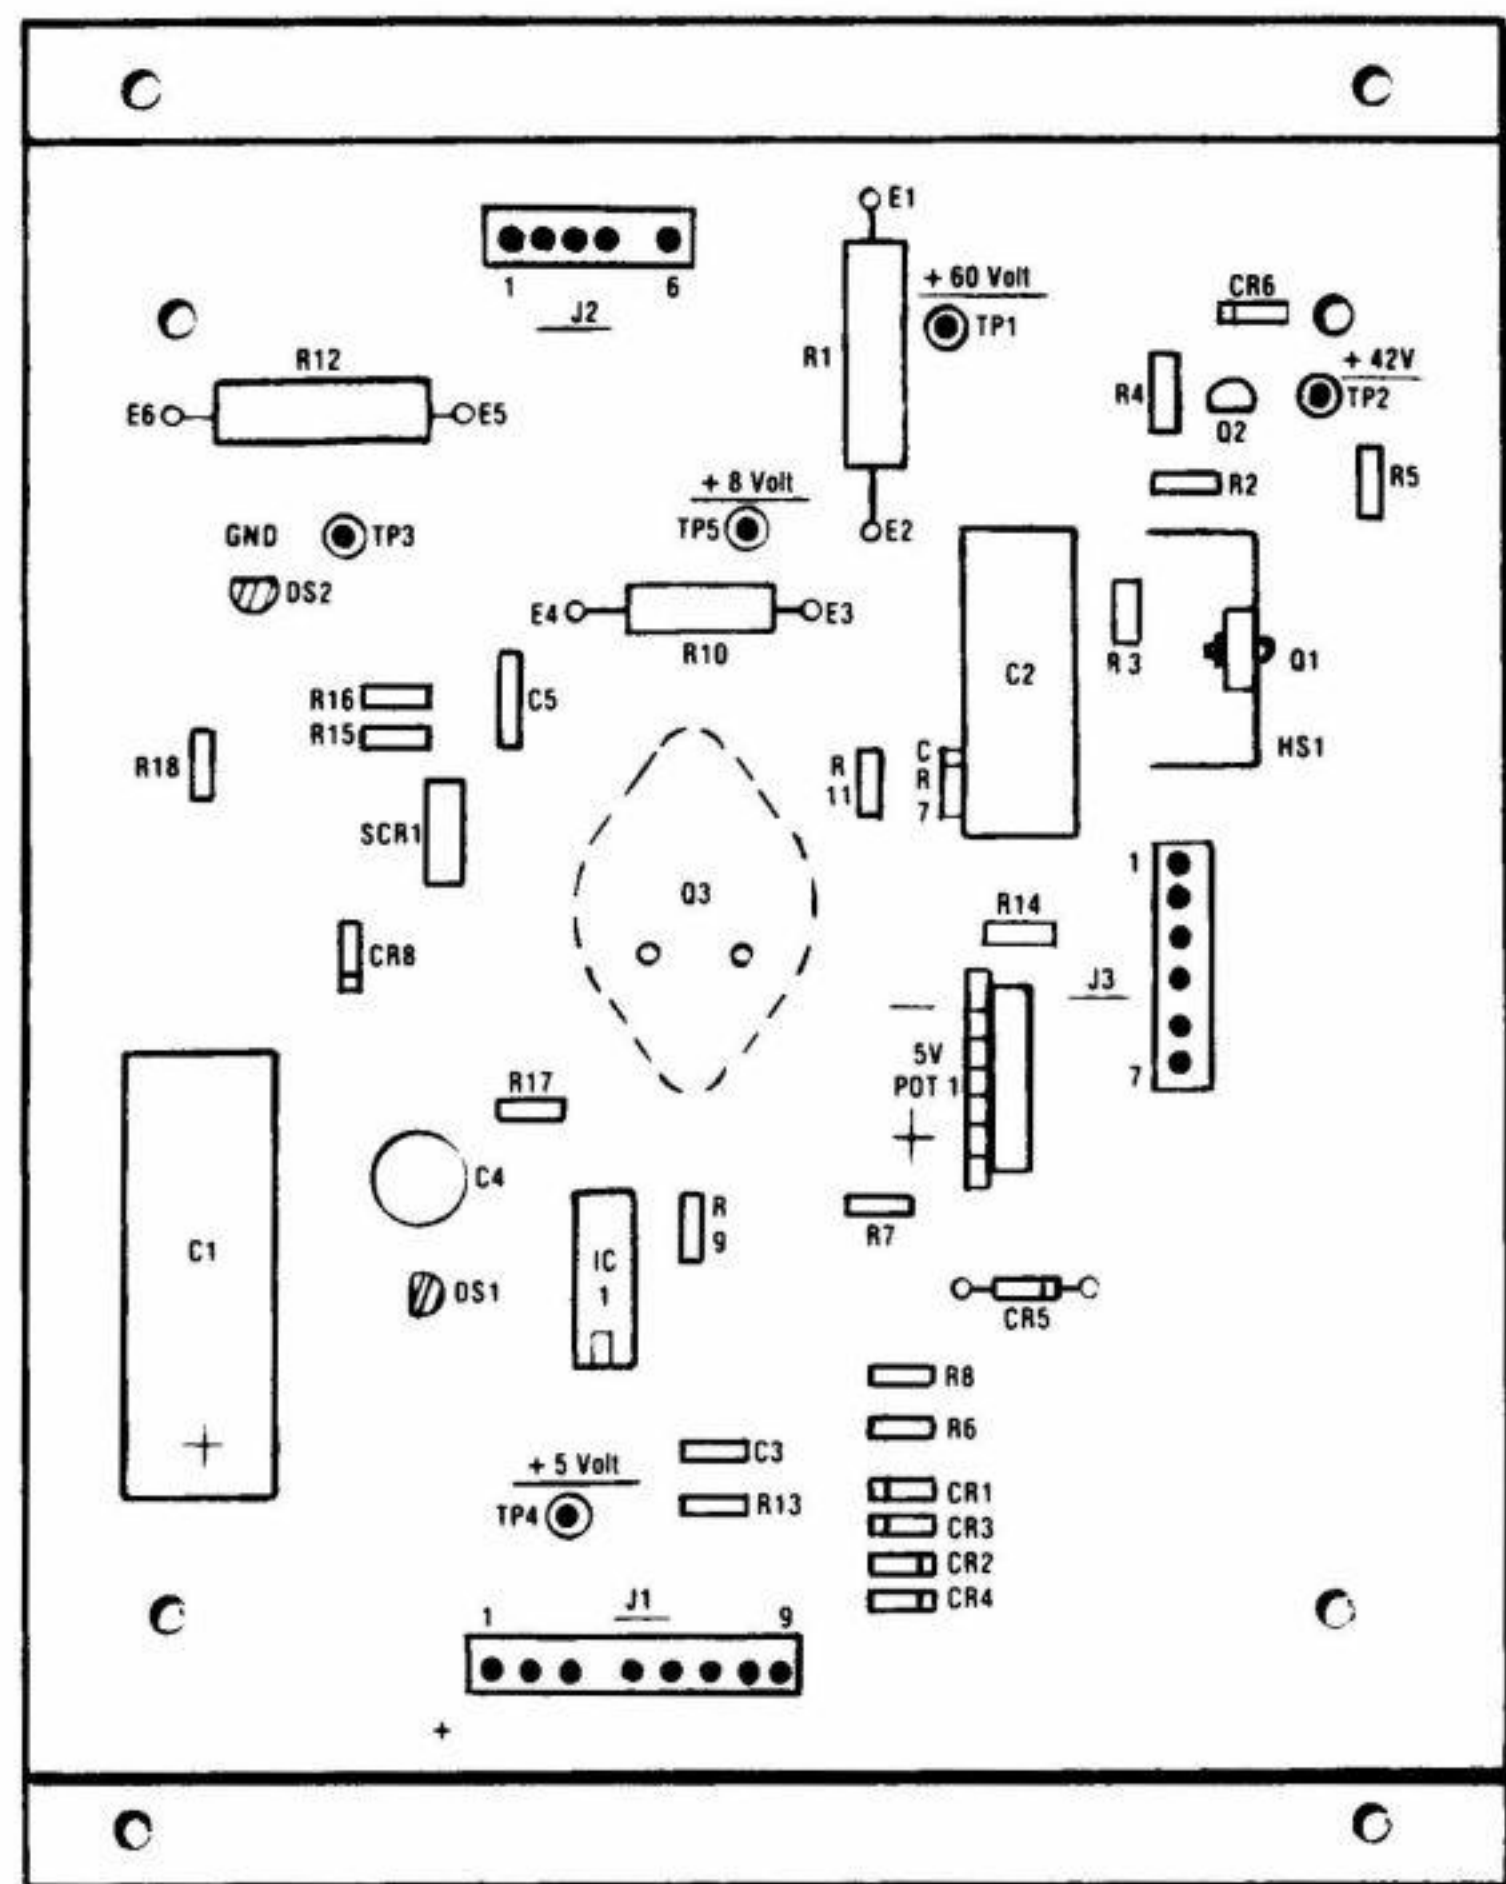

POWER SUPPLY (A2) PARTS LIST


REFERENCE	DESCRIPTION	PART NUMBER	REFERENCE	DESCRIPTION	PART NUMBER
C1	Capacitor, 470 mfd., 100V		R4	Resistor, 33 ohm, 5%, 1W	
C2	Capacitor, 47 mfd., 100V		R5	Resistor, 10K ohm, 5%, 1/2W	
C3	Capacitor, 1000 Picofarad, 50V		R6, R13	Resistor, 510 ohm, 5%, 1/4W	
C4	Capacitor, 470 mfd., 10V		R7	Resistor, 3.9K ohm, 5%, 1/4W	
C5	Capacitor, 2 mfd., +80%, -20%, 16V		R8	Resistor, 10K ohm, 5%, 1/4W	
CR1-CR4	Diode	1N4004	R10	Resistor, 30 ohm, 5%, 2W	
CR5	Diode, Zener, 62V, 5%, 1W	1N4759A	R11	Resistor, 2.2K ohm, 5%, 1/4W	
CR6	Diode, Zener, 18V, 5%, 1W	1N4746A	R12	Resistor, .33 ohm, 10%, 5W (Wirewound)	
CR7	Diode, Zener, 8.2V, 10%, 2W	1N3445	R14	Resistor, 2K ohm, 5%, 1/4W	
CR8	Diode, Zener, 5.6V, 5%, 1W	1N4734A	R15	Resistor, 100 ohm, 5%, 1/4W	
DS1, DS2	Diode, Light Emitting	CM4-22	R16	Resistor, 20 ohm, 5%, 1/4W	
E1-E6	Turret Terminal		R17	Resistor, 620 ohm, 5%, 1/2W	
IC1	I.C.—14 Pin Dip	UA723CN	R18	Resistor, 180 ohm, 5%, 1/4W	
J1	Connector, 9 Pin, Molex		SCR1	Silicon Controlled Rectifier	S107Y1
J2	Connector, 6 Pin, Molex		TP1-TP5,	Turret Terminal	
J3	Connector, 7 Pin, Molex			Eyelet	GS2-3
POT1	Potentiometer, 500 ohm, CTS	115R501A		Heat Sink Mounting Plate	
Q1	Transistor, NPN, National	SW4F013		Heat Sink, Thermalloy	
Q2	Transistor, NPN	2N5550		Insulator	INS-3
Q3	Transistor, Darlington, LAMBDA	PMD10K40		Insulator	DM111
R1	Resistor, 1.3K ohm, 10%, 5W			Spacer—6-32 Thread x 5/32	
R2, R9	Resistor, 1K ohm, 5%, 1/4W			Spacer—6-32 Thread x 1/8	
R3	Resistor, 12K ohm, 5%, 1/2W				

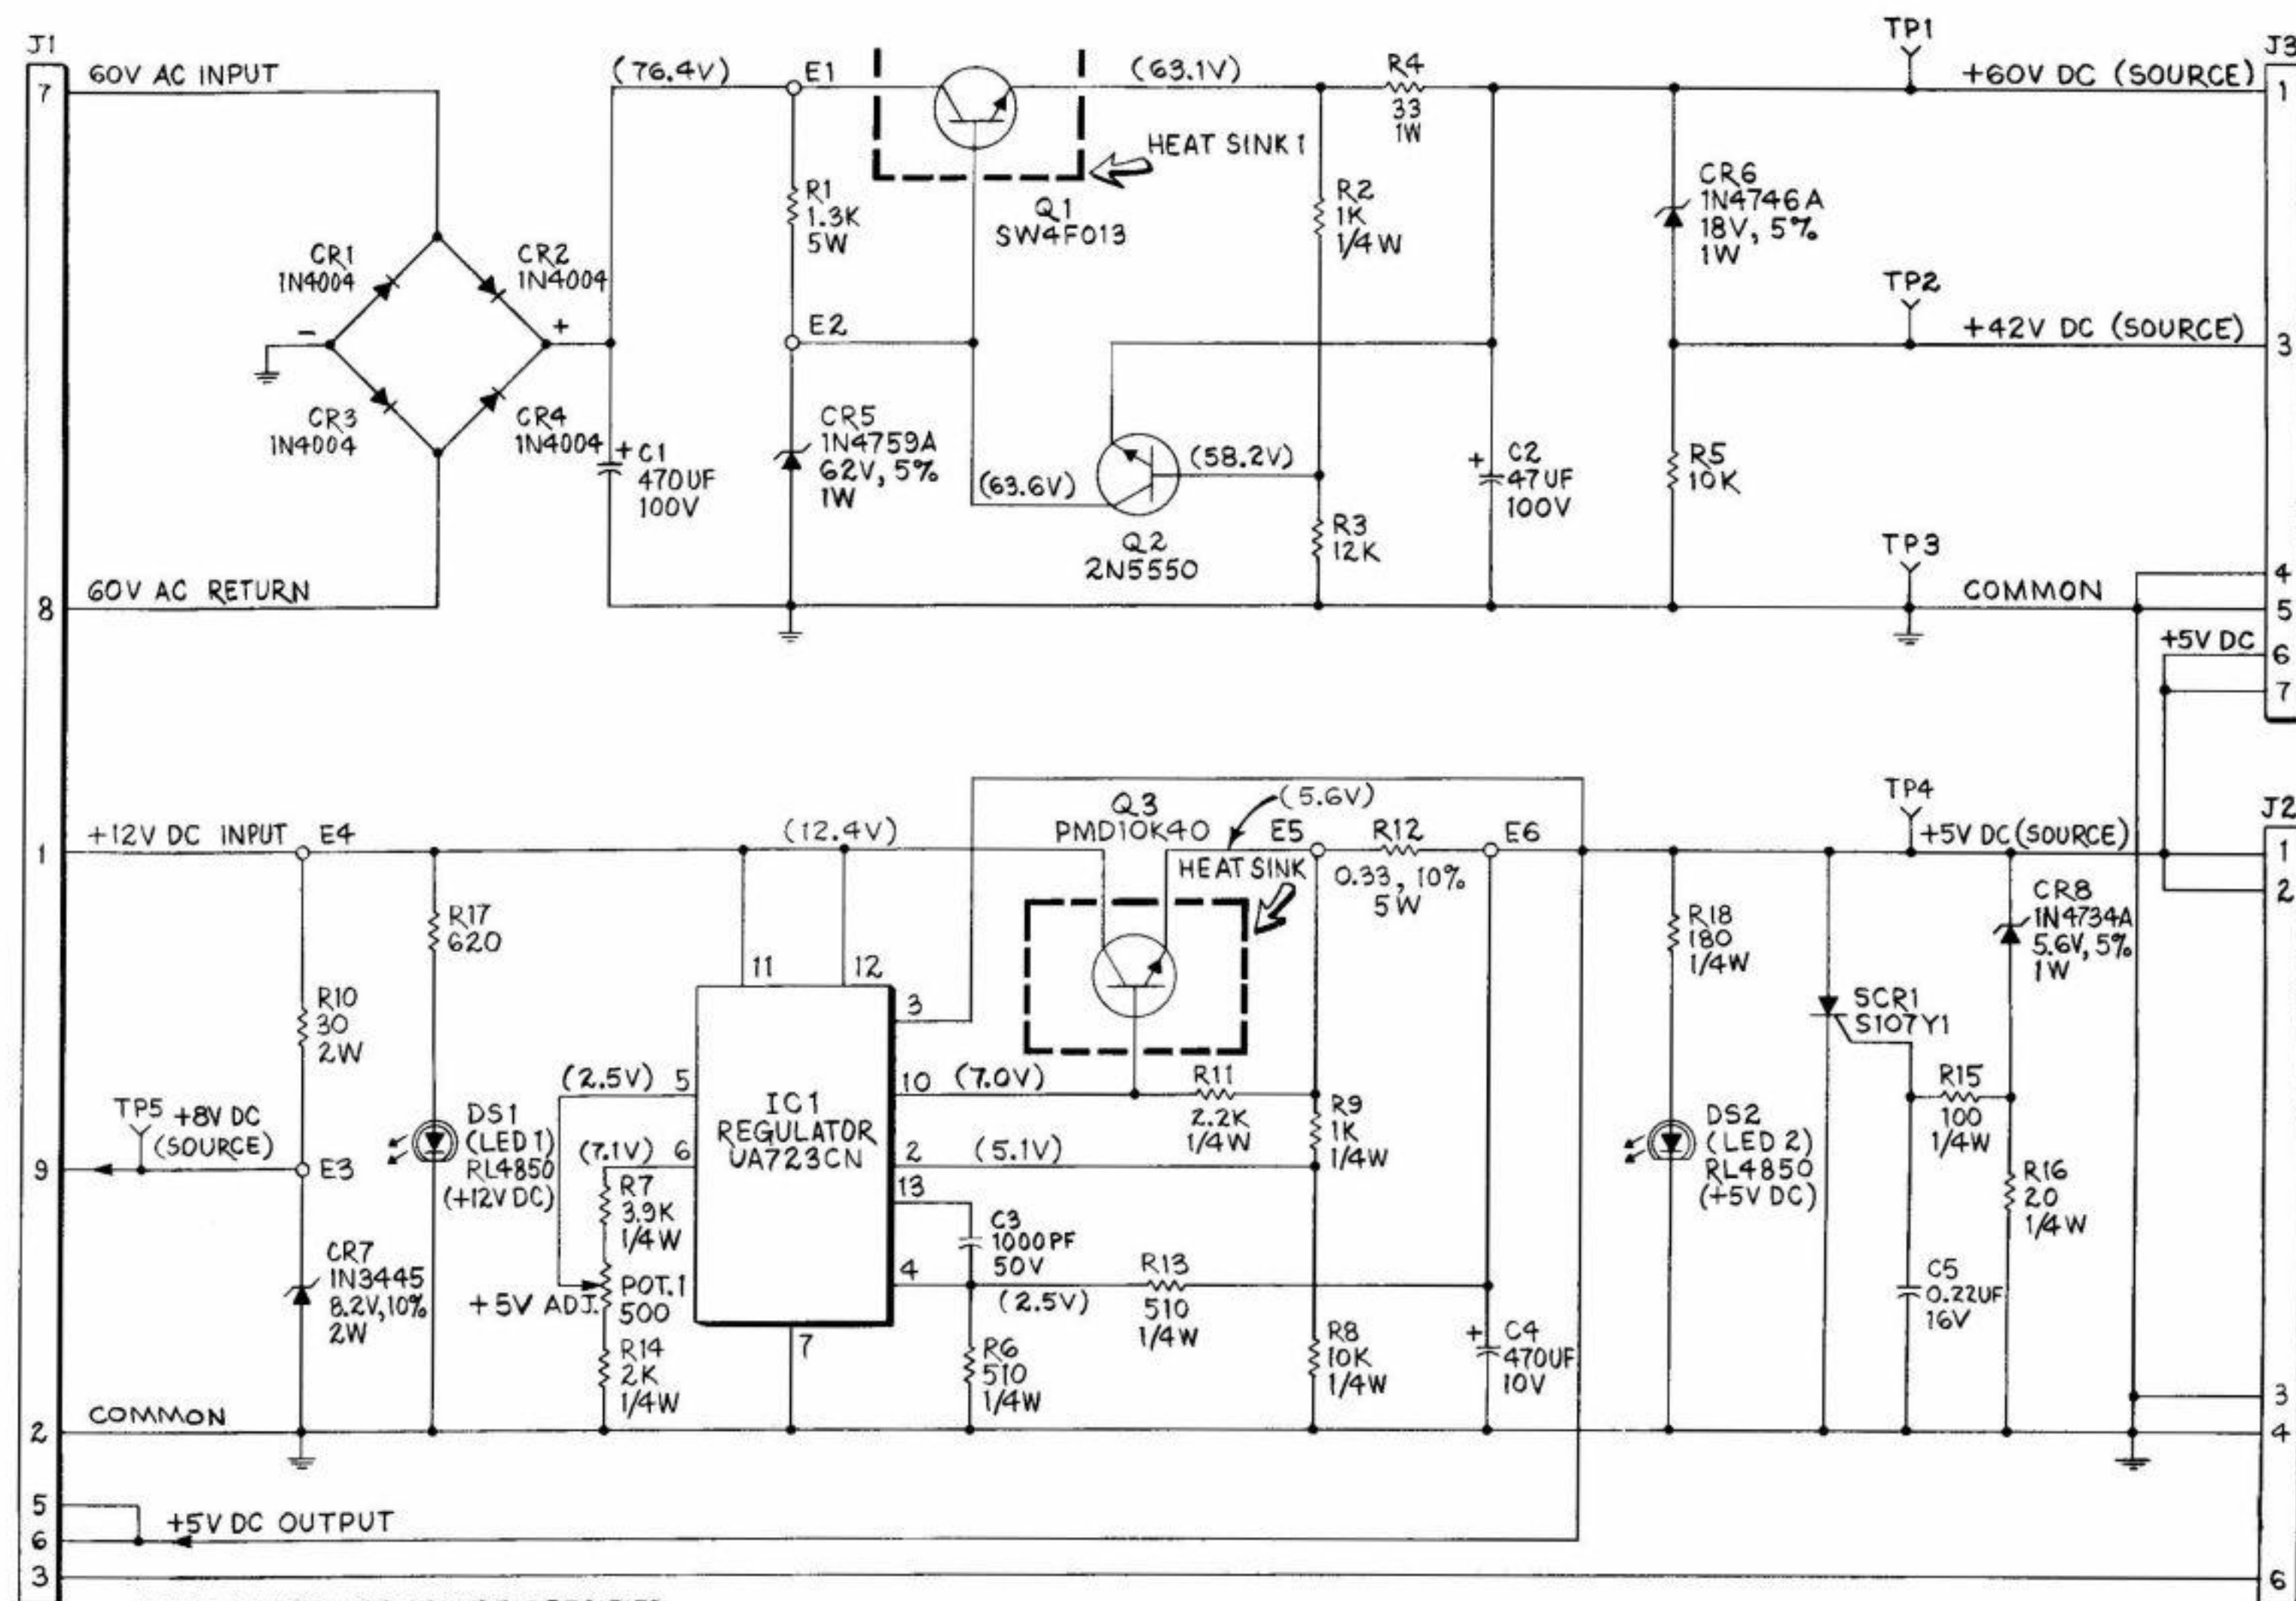

NOTE: UNLESS OTHERWISE SPECIFIED,
 1. RESISTORS ARE $\pm 5\%$, 1/2W.
 2. VOLTAGES ARE DC WITH RESPECT TO CIRCUIT GROUND.
 3. ALL VOLTAGES ARE AT NOMINAL LINE VOLTAGE (115V AC).


D. GOTTLIEB & CO.			
TITLE	POWER SUPPLY (A2)		
USED ON	SYSTEM 80		
DRAWN	APPROVED	DATE	E-20922
<i>[Signature]</i>	<i>[Signature]</i>	2-3-81	

X. WIRING AND SCHEMATIC DIAGRAMS, PARTS LISTS

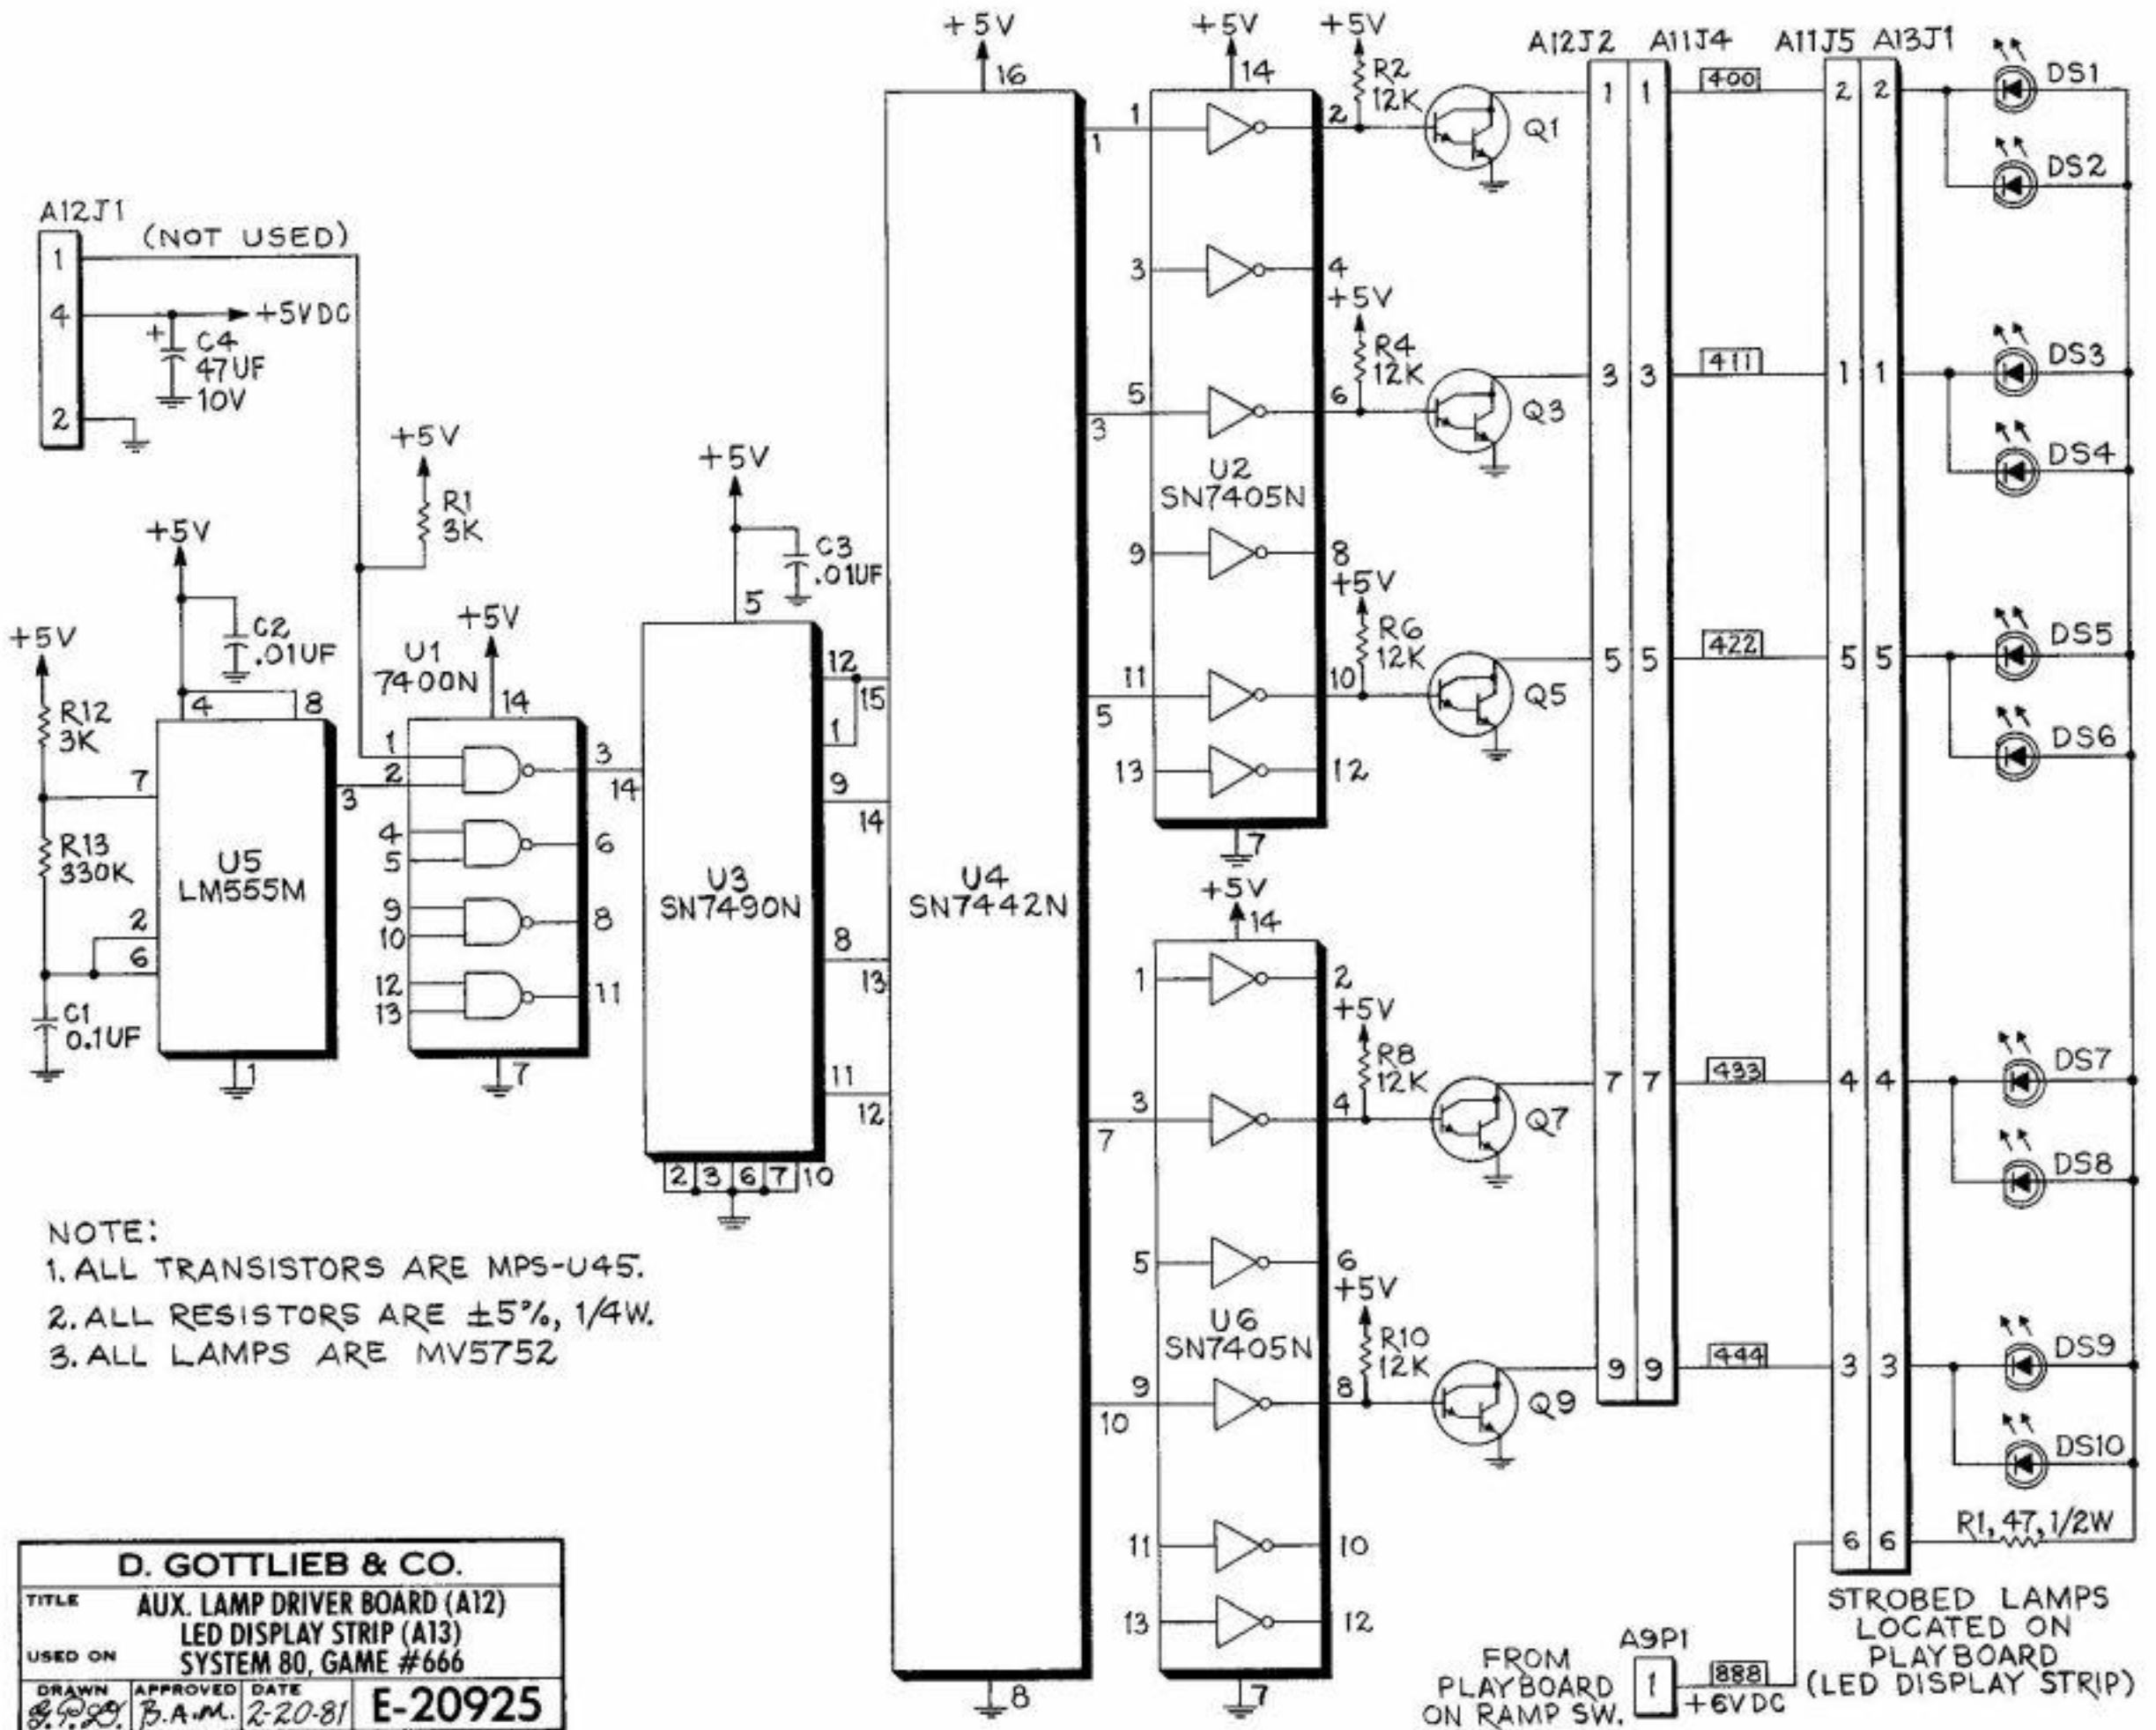

D. GOTTLIEB & CO.			
TITLE	AUX. LAMP DRIVER BOARD (A12) LED DISPLAY STRIP (A13) SYSTEM 80, GAME #666		
USED ON	SYSTEM 80, GAME #666		
DRAWN	APPROVED	DATE	E-20925
B.A.M.	B.A.M.	2-20-81	


AUXILIARY LAMP DRIVER BOARD (A12) COMPONENT LOCATION

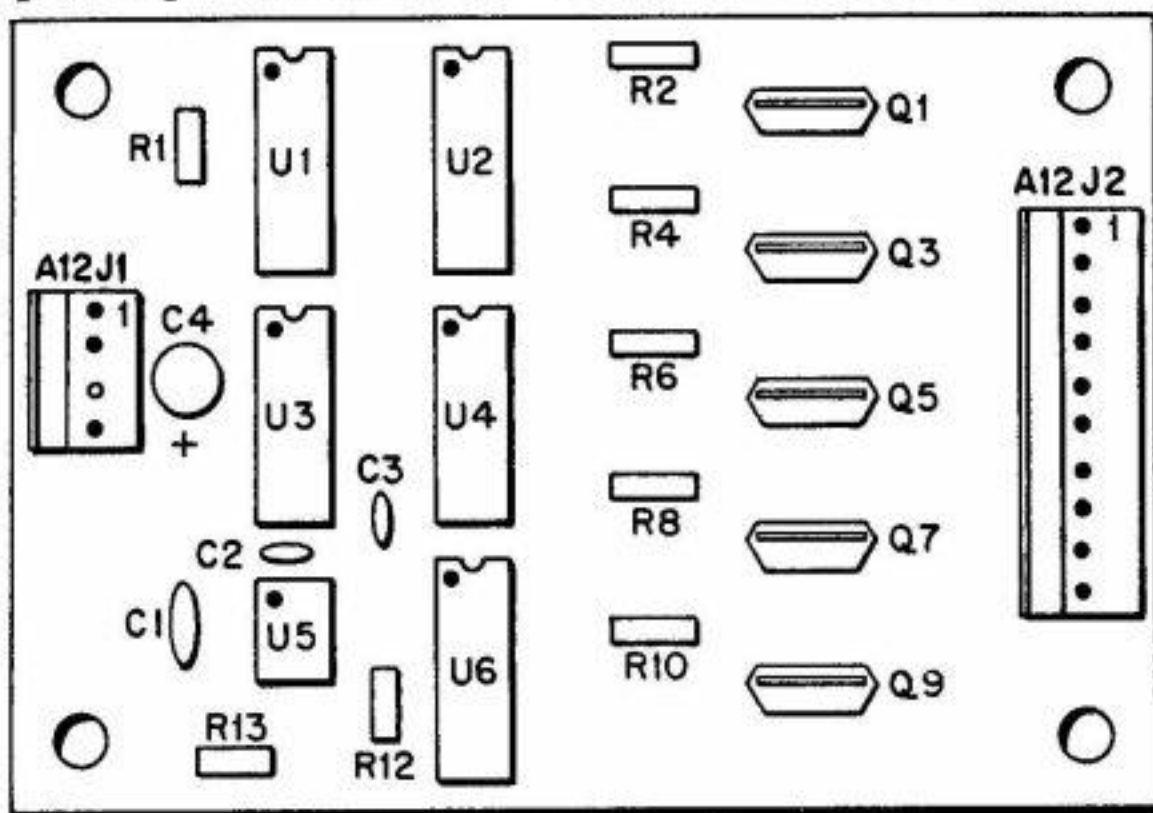

AUXILIARY LAMP DRIVER BOARD (A12) PARTS LIST

REFERENCE	DESCRIPTION	PART NUMBER
C1	CAPACITOR, .1 MFD, 100V CERAMIC RADIAL LEAD	
C2-C3	CAPACITOR, .01 MFD, 100V RADIAL LEAD	
C4	CAPACITOR, 47 MFD, 10V ELECTROLYTIC RADIAL LEAD	
Q1, Q3, Q5, Q7, Q9	TRANSISTOR, NPN DARLINGTON	MPS-U45
R1, R12	RESISTOR, 3K OHM, 5%, 1/4 W	
R2, R4, R6, R8, R10	RESISTOR, 12 K OHM, 5%, 1/4 W	
R13	RESISTOR, 330K OHM, 5%, 1/4 W	
U1	I.C. 2-INPUT NAND	SN7400N
U2, U6	I.C. INVERTER	SN7405N
U3	I.C. DECADE COUNTER	SN7490N
U4	I.C. DECODER	SN7442N
U5	I.C. TIMER	LM555N
	10 POS. SQUARE WIRE FRICTION LOCK CONNECTOR	
	4 POS. SQUARE WIRE FRICTION LOCK CONNECTOR	

LED DISPLAY STRIP (A13) COMPONENT LOCATION AND PARTS LIST

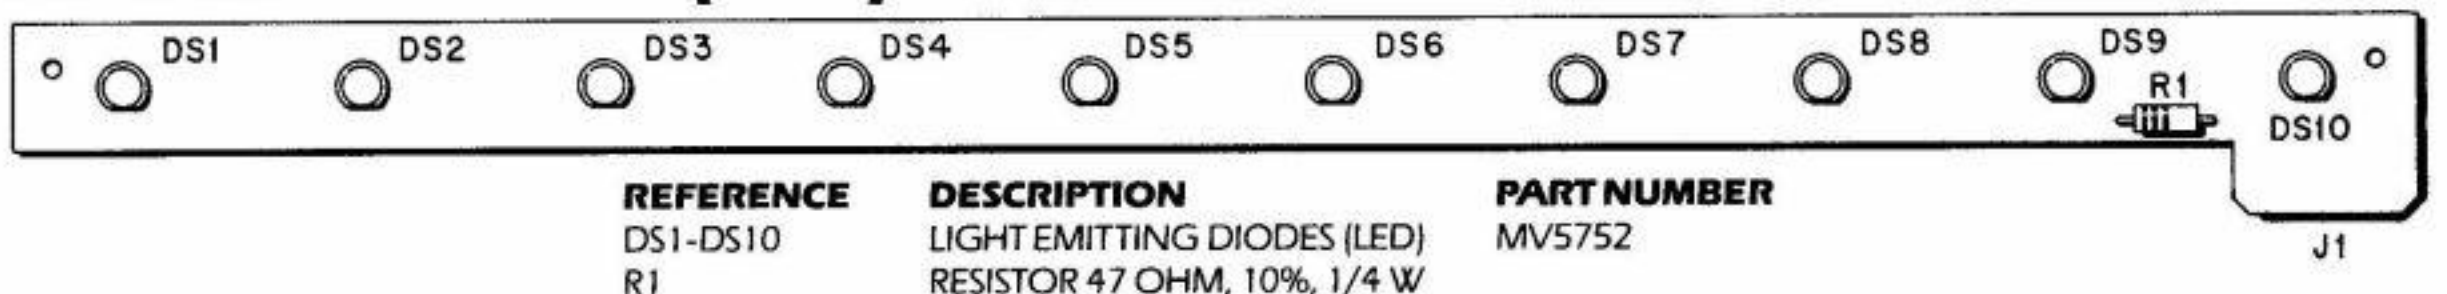

ON TARGET

Gottlieb

TECHNICAL NEWSLETTER

VOLUME 2, ISSUE 5

MAY, 1981

MARS STARGATE

The stargate feature on MARS, god of war, is located on the left side of the playfield at the beginning of the launch tube (See Figure 1).

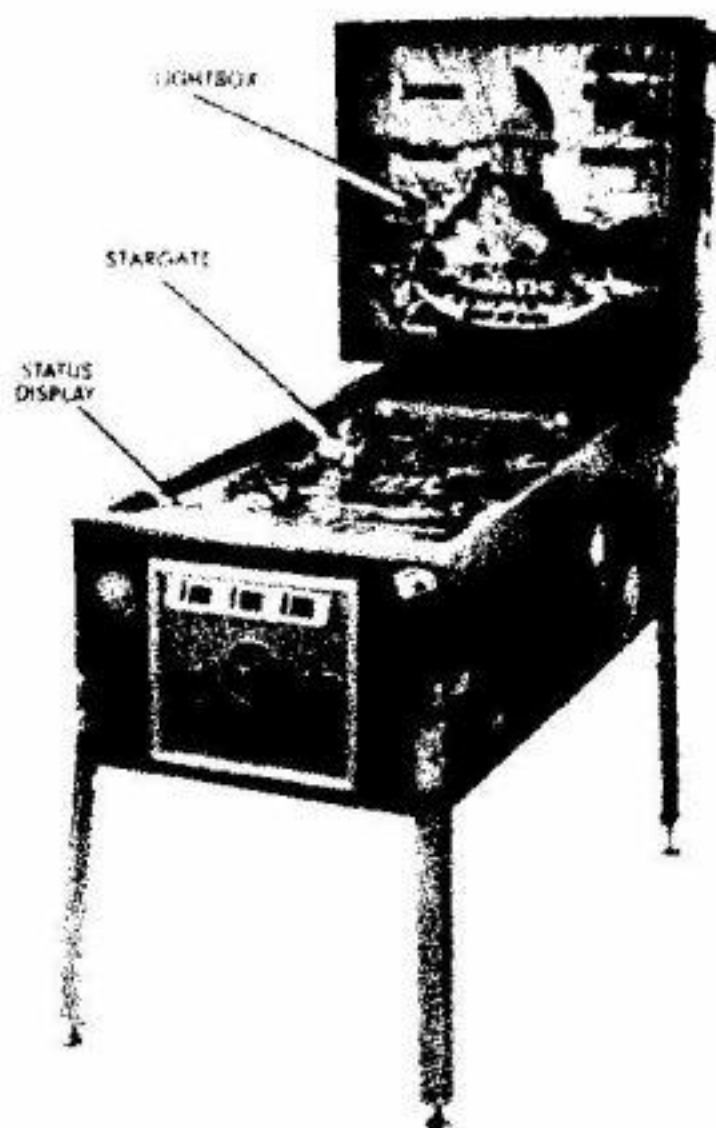


Figure 1

GAME PLAY - There are two ways to activate the stargate feature:
 1. When either warbase is captured, the stargate is lowered and the plastic tube LED's are strobed.
 When left or right warbase is captured and the stargate drops, the sound/speech board says, "Shoot Stargate for Hyperforce."
 2. If no ball is captured, a ball that travels through the right return rollover will lower the stargate. If the ball enters the launch lane through the plastic tube or from the playfield before hitting a pop bumper, the player will be awarded 50,000 points. Hitting a pop bumper ends the stargate feature, with the stargate returning to the up position.

OPERATION - Stargate Operation is shown in Figure 2A. The coil is activated when the stargate is in the up position and de-activated when

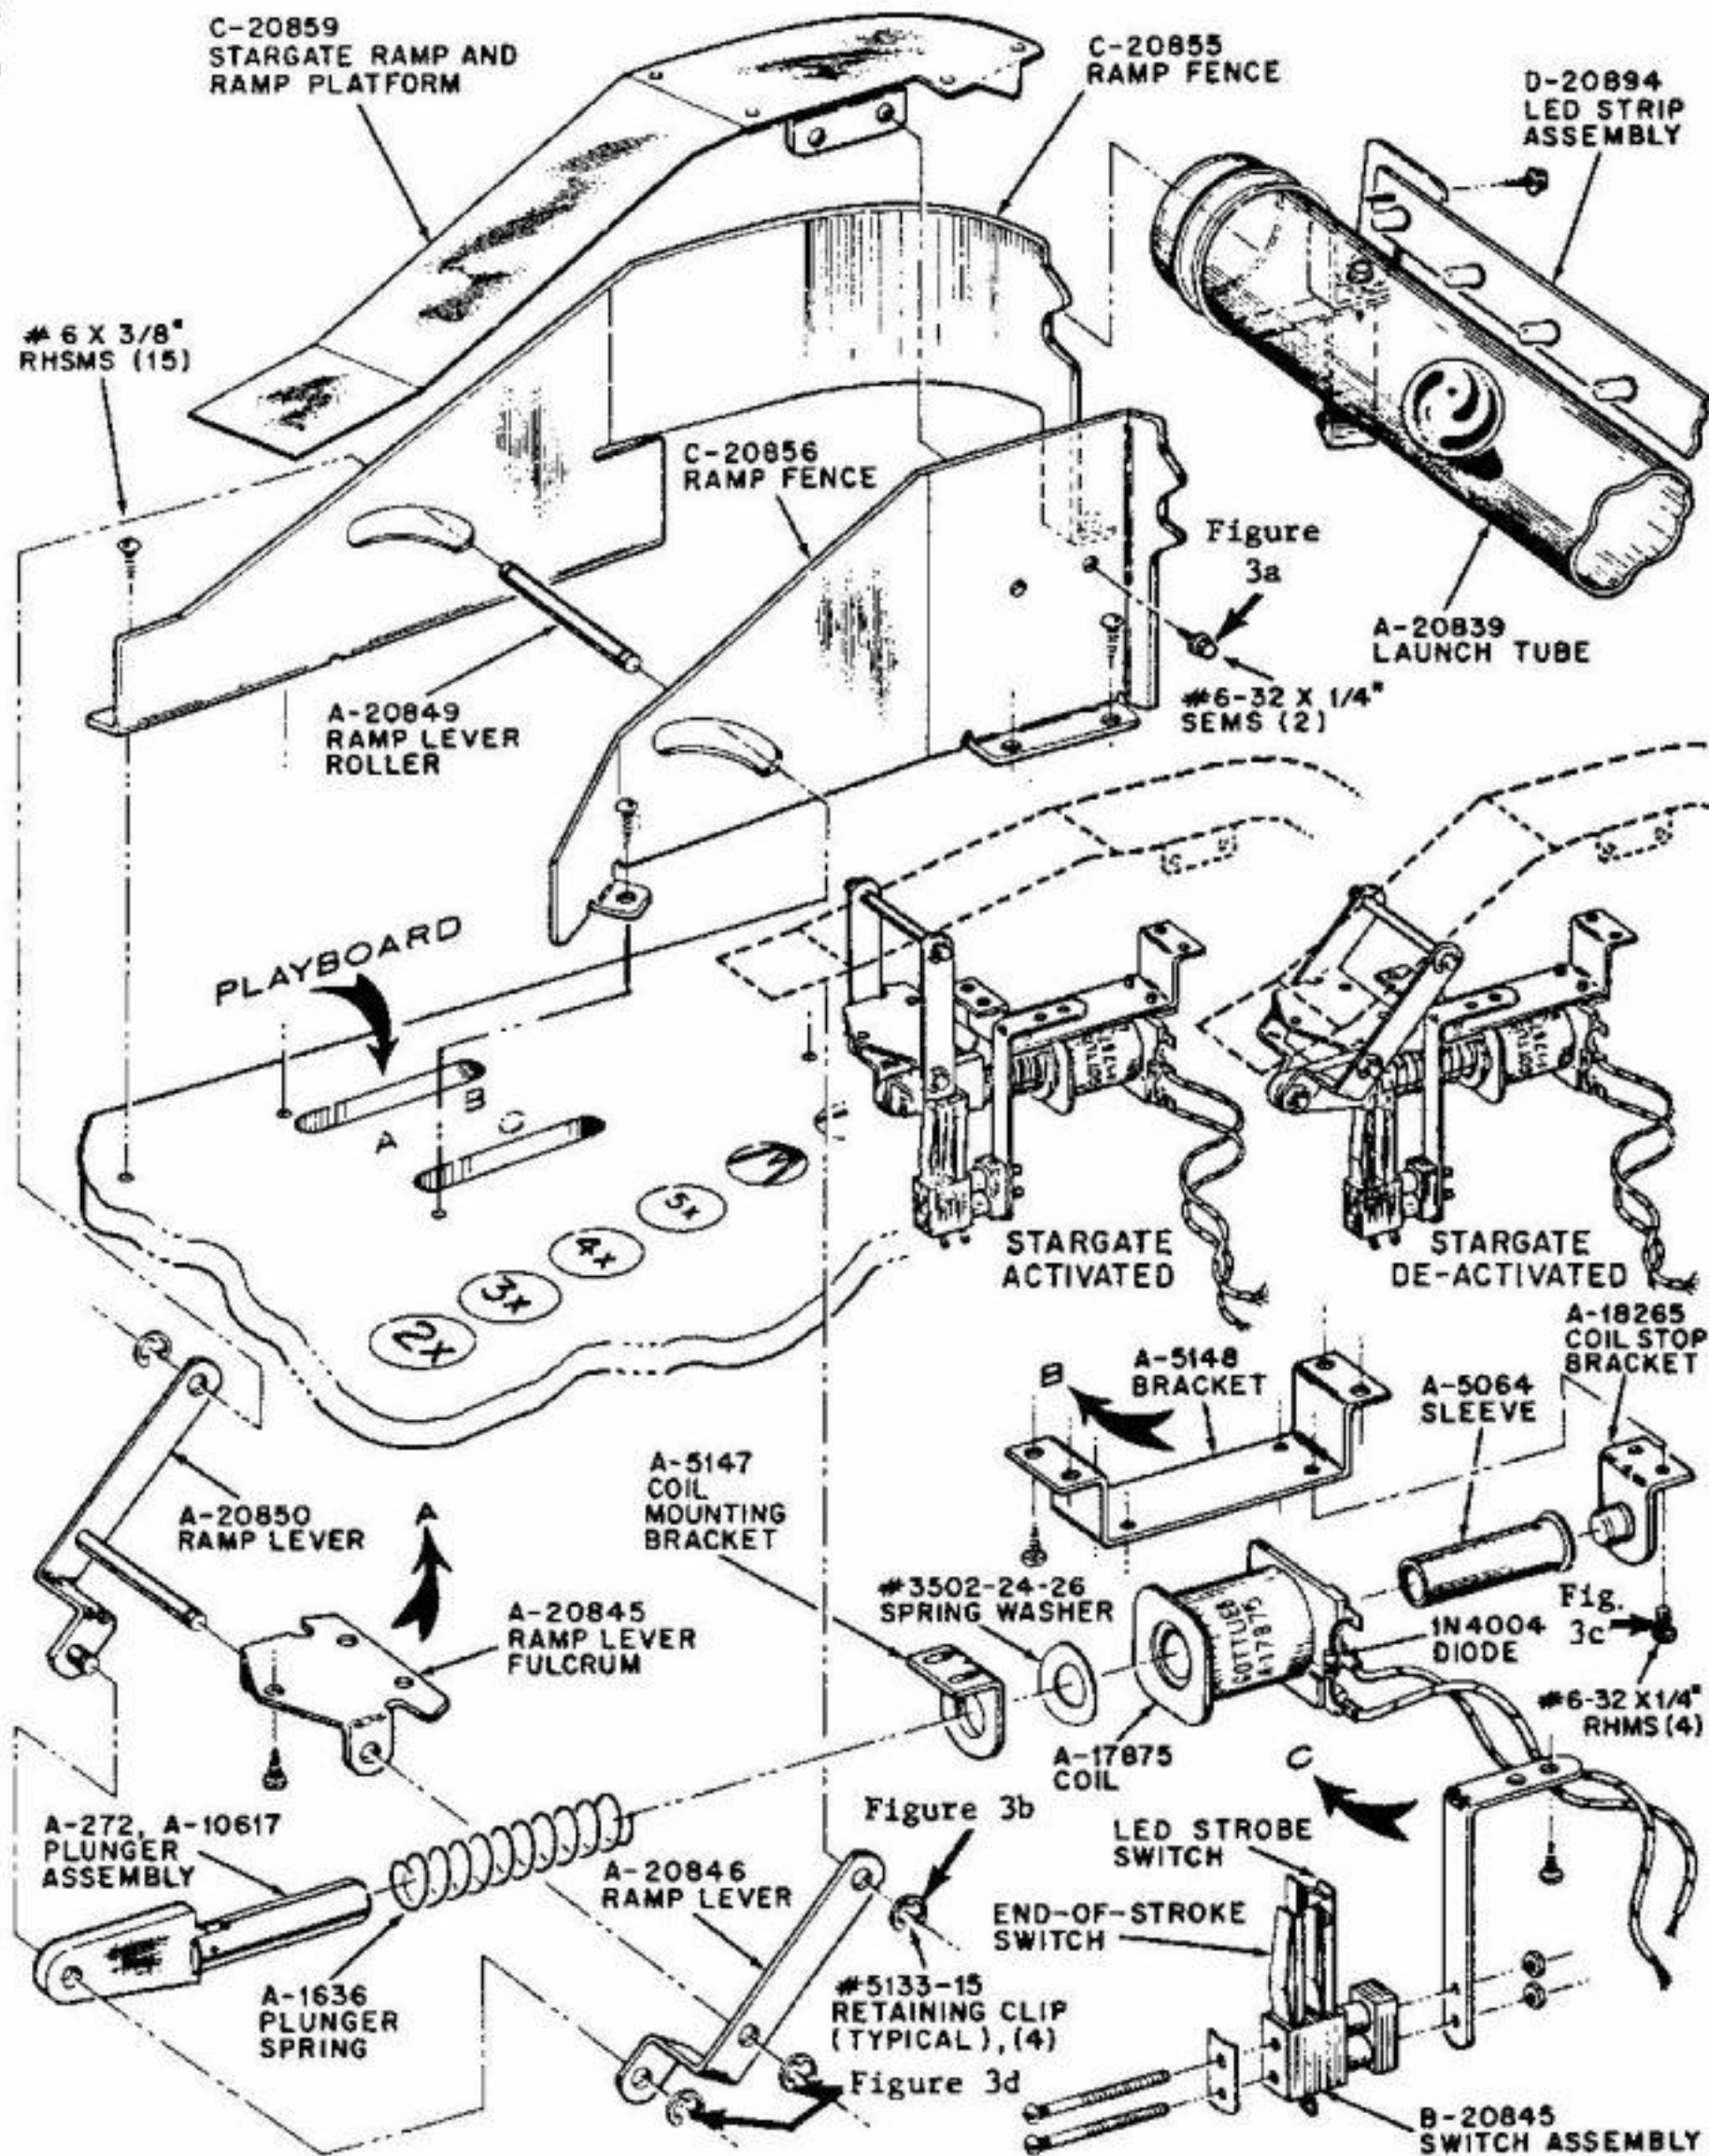


Figure 2

the stargate is lowered. The coil activates when 5 volts is applied to the base of Q9. This turns on Q9, which supplies a ground to the base of the 2N5875 PNP transistor. This forward bias voltage turns on the 2N5875, which supplies a ground to the coil circuit, resulting in coil activation. The 24 VDC voltage generates a current that passes through

the end-of-stroke switch and the low resistance windings of the ramp coil (direction indicated by the solid line). The plunger is pulled into the coil core with the end-of-stroke switch contacts opening approximately 1/16" before the full plunger stroke. The 24 VDC is now applied to the full winding, decreasing the current (direction indicated by dashed line).

(continued on p. 2)

MARS STARGATE

(continued from p. 1)

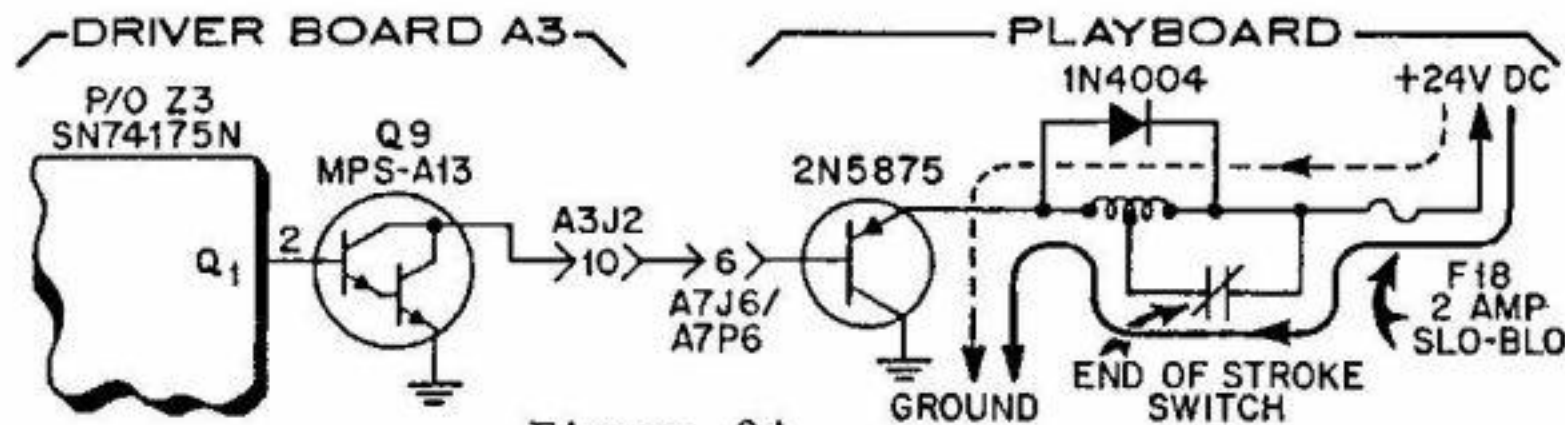


Figure 2A

Poor coil response or a coil burnout may result if the end-of-stroke switch is not adjusted as mentioned above.

Zero volts at the Q9 base keeps Q9 off. This, in turn, prevents the 2N5875 from conducting and activating the coil.

A second switch located with the end-of-stroke switch, turns on the LED strobes for the launch tube. When the coil is de-energized (the ramp lowered), this switch closes and the LED's begin to strobe. The LED's will continue to strobe until the ramp is raised, opening the switch.

The IN4004 diode across the ramp coil suppresses transient voltage spikes created when the magnetic field in the coil collapses (the coil is de-energized).

To disassemble the stargate or remove the coil, the following tools are required:

- A. 5/16" nut driver
- B. 1/4" nut driver
- C. Flat blade screwdriver
- D. Soldering iron (coil only)

REPLACING STARGATE RAMP AND/OR RAMP LEVER ROLLER

1. Unplug power cord.
2. Follow standard procedure for removing the playfield glass.
3. Using the 5/16" nut driver, remove the nuts securing both plastic shields from either side

- of the stargate (2 nuts per shield).
4. Remove the plastic shields.
5. Remove the two 6/32 x 1/4" hex head screws located on the side of the ramp fence closest to the center of the playfield (See Figure 3a). A 1/4" nut driver or a flat blade screwdriver can be used.
6. Remove the ramp by lifting out with a slight clockwise turn.

RAMP LEVER ROLLER REMOVAL - With the stargate ramp removed, the ramp lever roller is now exposed and removal is simple:

1. Remove the two retaining rings (P/N 5133-15) located on either end of the ramp lever roller (See Figure 3b).
2. Slide roller out toward the center of the playfield.

RAMP LEVER - With the ramp lever roller removed, removal of the ramp lever is now possible. To remove the ramp lever:

1. Raise and secure the playfield.
 2. Locate the stargate assembly.
 3. Remove the two retaining clips located on the left ramp lever (Figure 3d).
 4. Remove the three round head wood screws securing the ramp lever fulcrum to the playfield.
 5. With the fulcrum freed, the right ramp lever can now be removed.
- Ramp, ramp lever roller, and ramp lever are now removed. To reassemble

follow directions in reverse order.

COIL REPLACEMENT

1. Follow Steps 1 and 2 for replacement of stargate ramp.
2. Raise and secure the playfield.
3. Locate the ramp coil (A-17875).
4. Unsolder the coil wires, noting their terminal designations. (Also make sure the new coil has a diode across it and in the proper direction.)
5. Remove the two 6/32 x 1/4" round head screws securing the coil stop bracket (See Figure 3c).
6. Lift coil assembly out of the coil stop bracket.
7. Pull the coil away from the plunger assembly. (Be careful of loose parts.)
8. Pull the plastic sleeve out of the bad coil and insert it into the new one.
9. Slide the new coil into the plunger assembly, insuring that the spring washer slides over the plastic sleeve.
10. Replace and screw the coil stop bracket into place.
11. Solder the wires to their proper terminals.

Once the new coil is installed, check the end-of-stroke switch for proper operation as described in the electrical section.

Lower the playfield and close up the game. Be sure to check the operation of the stargate to insure everything was reassembled correctly.

FLASHBACK


Pinball's first spot target appeared on a Gottlieb game made in January 1950 called JUST 21. Since then, Gottlieb has been first with almost every new target: the two-switch bull's-eye target, first used on HARBOR LITES (Feb 1956); the roto unit, used initially on MAJESTIC (April 1957); the vari-target, seen first on AIRPORT (April 1969).

© 1981 D. Gottlieb & Co.
All Rights Reserved
Printed in U.S.A.



Gottlieb Amusement Games
165 W. Lake Street
Northlake IL 60164

How to play MARS, god of war

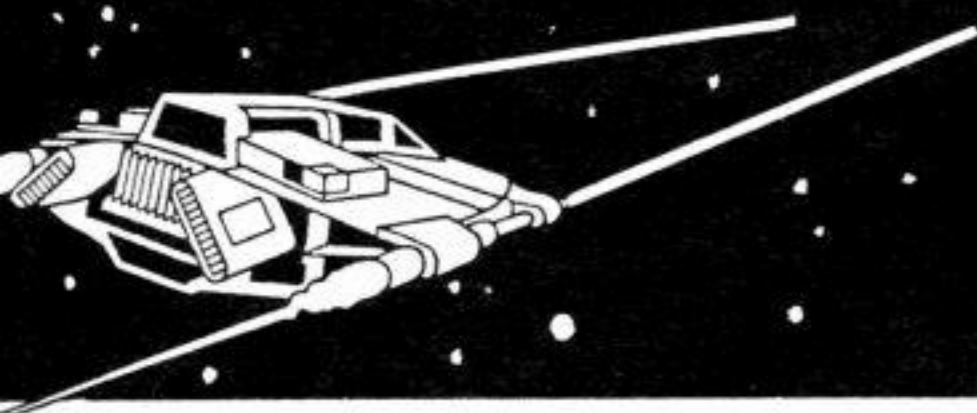


HYPERFORCE Multi-ball play

- Completing center drop target bank activates left captive hole. **ACTIVATE** WARBASE lamp flashes.
- Completing right drop target bank activates right captive hole. **ACTIVATE** WARBASE lamp flashes.
- When either WARBASE is captured, the STARGATE is lowered and the plastic tube LED's are strobed.
- After a ball is captured in either captive hole, a ball is kicked to the ball shooter.
- The LAUNCH ball kicker lane flashes. This indicates that if a ball enters the lane either through the plastic tube or from the playfield, it and any captive ball(s) will be released for multi-ball play.
- Multi-ball play with two balls is achieved when either captive hole captures a ball and the next ball enters the LAUNCH ball kicker lane. The WARP I lamp turns on, indicating that all playfield scoring is 3X (3 times) the value of normal one-ball play. Playfield scoring reverts to normal one-ball scoring when a ball enters the outhole. WARP I lamp turns off.
- Multi-ball play with three balls is achieved when two balls are captured and the third ball enters the LAUNCH ball kicker lane. The WARP II lamp turns on, indicating that all playfield scoring is 5X (5 times) normal one-ball play. When the first ball enters the outhole, playfield scoring drops to WARP I value. WARP II lamp turns off and WARP I lamp turns on. When the second ball enters the outhole, the WARP I lamp turns off and one-ball play resumes.



- During multi-ball play, captive holes (WARBASES) cannot capture a ball. **ACTIVATE** WARBASE lamps remain off.
- If multi-ball is not achieved during a ball-in-play, all captive balls are released and will enter the outhole before the next ball is kicked to the ball shooter.
- Activated WARBASES for capturing balls are remembered from ball-to-ball.

Gottlieb
AMUSEMENT GAMES

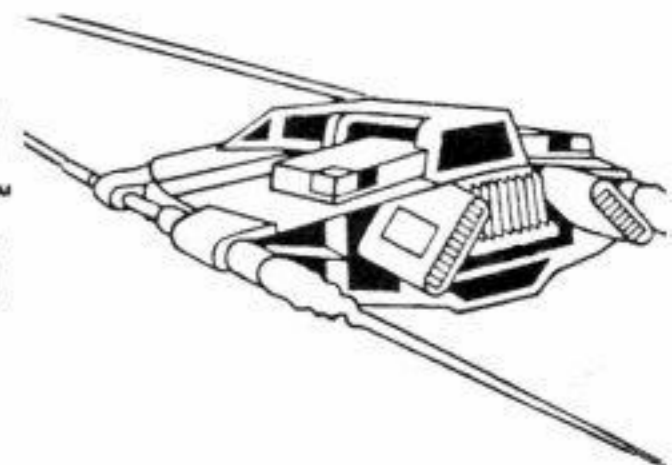

STARGATE FEATURE

- If no ball is captured, a ball that travels through the right return rollover will lower the STARGATE. If the ball enters the LAUNCH lane through the plastic tube or from the playfield before hitting a pop bumper, the player will be awarded 50,000 points. Hitting a pop bumper ends the STARGATE feature.

LAST CHANCE FEATURE

- A captive ball will become a ball-in-play when the player's last ball-in-play enters the outhole through a side out lane. The last chance feature does not occur if an extra ball has been won.
- If one ball is captive, it will be released for play when the player's ball exits either out lane.
- If two balls are captive, only one ball will be released corresponding to the out lane the player's ball exits.
- The LAST CHANCE feature can be disabled with game adjustment switch #31 in the off position.

EXTRA BALL

Entering a WARBASE when the warbase Extra Ball lamp is lit:

- Left WARBASE lights upper left return rollover for EXTRA BALL.
- Right WARBASE lights right spot target for EXTRA BALL.

SPECIAL

Entering a WARBASE when the warbase Special lamp is lit:

- Left WARBASE will light left outlane for SPECIAL.
- Right WARBASE will light right outlane for SPECIAL.
- Specials can be relit on the same ball-in-play.

MULTIPLIERS

- Bonus multipliers (BONUS BLASTERS) and WARBASE score multipliers are advanced by either completing the M-A-R-S rollover sequence or entering the LAUNCH lane.
- When the multiplier reaches 5X, the M-A-R-S rollovers remain unlit, and all pop bumpers are lit.

ROLLOVERS AND SPOT TARGET

Top Rollovers and Lower Return Rollovers

- Score 100 points unlit.
- Score 1000 points and ADD BONUS when lit.
- Two lower return rollovers spot the A and R of M-A-R-S.
- M-A-R-S sequence remembered from ball-to-ball.

Outlane Rollovers

- Score 5000 points and ADD BONUS.
- Award SPECIAL when lit.
- Award LAST CHANCE feature on last ball.

Spot Target and Upper Left Return Rollovers

- Score 500 points.
- Award EXTRA BALL when lit.

CAPTIVE HOLES (WARBASES)

- Score 1000 points unlit.
- Score 2000-5000 points when 2X-5X lamps are lit.
- Capture ball when ACTIVATE WARBASE lamp is flashing.
- See **EXTRA BALL** and **SPECIAL**.

10-POINT SWITCHES—Score 10 points.

SPINNER

- Score 100 points unlit.
- Score 1000 points and ADD BONUS when lit.
- Advance spinner lights (See **DROP TARGETS**).
- Spinner lights remembered from ball-to-ball (3-ball only).

POP BUMPERS

- Score 100 points unlit.
- Score 1000 points when lit.

LAUNCH lane (upper right ball kicker)

- Score 5000 points, ADD BONUS, and advance MULTIPLIER.
- Launch captive balls when flashing.
- Awards 50,000 points for STARGATE FEATURE.

DROP TARGETS

- Score 100 points unlit.
- Score 1000 points when lit.
- Add BONUS.
- Light corresponding spinner lamp.
- Completed target bank resets.
- See MULTI-BALL PLAY.

OTHER FEATURES

- Right flipper buttons rotates M-A-R-S and rotates pop bumper lights.
- 3-Ball Play:
 - Bonus maximum is 29,000 points.
 - Game Adjustment Switch #32:
 - ON (Liberal)—Light warbase Special lamp when multiplier reaches 4X.
Light warbase Extra Ball lamp when multiplier reaches 3X.
 - OFF (Conservative)—Light warbase Special lamp when multiplier reaches 5X.
Light warbase Extra Ball lamp when multiplier reaches 4X.
- 5-Ball Play:
 - Bonus maximum is 19,000 points.
 - Light warbase Special lamp when multiplier reaches 5X.
 - Light warbase Extra Ball lamp when multiplier reaches 4X.

HIGH GAME TO DATE

- If the High Game To Date is 990,000 or greater at the start of a new game, the High Game To Date will automatically reset to 770,000.

